



Network Video Recorder User Manual

Web Settings

Version: V6.4

Date: 2023-11-03

Chapter 1. Safety Regulatory	5
Chapter 2. Product Introduction	6
2.1 Introduction.....	6
2.2 Product Key Functions.....	6
Chapter 3. Web Settings	9
3.1 Overview.....	9
3.1.1 Account Setting.....	9
3.1.2 Login.....	11
3.1.3 Menu.....	14
3.2 Live View.....	15
3.2.1 Camera List.....	15
3.2.2 PTZ.....	18
3.2.3 Image Configuration.....	19
3.3 Playback.....	19
3.3.1 General Playback.....	19
3.3.2 Event Playback.....	27
3.3.3 Tag Playback.....	28
3.3.4 Split Playback.....	31
3.3.5 Picture Playback.....	32
3.3.6 Transcoding.....	34
3.3.7 Video Files Backup.....	35
3.3.8 Picture Files Backup.....	37
3.4 Retrieve.....	38
3.4.1 Common Backup.....	38
3.4.2 Event Backup.....	40
3.4.3 Picture Backup.....	43
3.5 Smart Analysis.....	45
3.5.1 Analysis Search.....	45
3.5.2 Analysis Settings.....	59
3.6 Camera.....	92
3.6.1 Camera Management.....	92
3.6.2 Device Search.....	102

3.6.3 PTZ Configuration.....	103
3.6.4 Image.....	115
3.6.5 Audio.....	123
3.6.6 Advanced.....	124
3.6.7 Camera Maintenance.....	125
3.7 Storage.....	133
3.7.1 Video Record.....	135
3.7.2 Snapshot.....	140
3.7.3 Disk Management.....	142
3.7.4 RAID.....	145
3.7.5 Storage Mode.....	147
3.7.6 Auto Backup.....	150
3.8 Event.....	152
3.8.1 Motion Detection.....	152
3.8.2 Video Loss.....	160
3.8.3 Alarm Input.....	167
3.8.4 Alarm Output.....	181
3.8.5 Exception.....	185
3.8.6 VCA.....	187
3.9 Settings.....	215
3.9.1 Local Configuration.....	215
3.9.2 General.....	216
3.9.3 Network.....	219
3.9.4 Audio File Manager.....	231
3.9.5 Holiday.....	232
3.9.6 User.....	233
3.9.7 Access Filter.....	238
3.9.8 Maintenance.....	241
3.9.9 Hot Spare.....	245
3.10 Status.....	247
3.10.1 Device Information.....	247
3.10.2 Network Status.....	249

3.10.3 Camera Status.....	250
3.10.4 Disk Status.....	251
3.10.5 Event Status.....	251
3.10.6 Group Status.....	254
3.10.7 Online Users.....	254
3.10.8 Packet Capture Tool.....	255
3.10.9 Logs.....	256
3.11 Logout.....	257
Chapter 4. Services.....	258

Chapter 1. Safety Regulatory

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss. The precaution measures are divided into “Warnings” and “Cautions”.

Warnings: Serious injury or death may be caused if any of these warnings is neglected.

- This installation must be conducted by a qualified service person and should strictly comply with the electrical safety regulations of the local region.
- To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installed.
- Do not touch components such as heat sinks, power regulators, and processors, which may be hot.
- Source with DC/AC 12V or PoE.
- Please make sure the plug is firmly inserted into the power socket.
- When the product is installed on a wall or ceiling, the device should be firmly fixed.
- If the product does not work properly, please contact your dealer. Never attempt to disassemble the camera by yourself.

Cautions: Injury or equipment damage may be caused if any of these cautions are neglected.

- Make sure that the power supply voltage is correct before using the camera.
- Do not store or install the device in extremely hot or cold temperatures, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- Only use components and parts recommended by manufacturer.
- Do not drop the camera or subject it to physical shock.
- To prevent heat accumulation, do not block air circulation around the camera.
- Laser beams may damage image sensors. The surface of image sensors should not be exposed to where a laser beam equipment is used.
- Use a blower to remove dust from the lens cover.
- Use a soft, dry cloth to clean the surface of the camera. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes.
- Save the package to ensure availability of shipping containers for future transportation.

Chapter 2. Product Introduction

2.1 Introduction

Based on embedded Linux operation system, Milesight NVR Series manages and stores HD video data. It owns multi-disk management systems, front end HD device management system, HD video analysis system and high-capacity system for video. Also, it adopts the technology of high flow capacity data network transmitting&transmission, with multi-channel video decoding, to achieve functions like intelligent management, safe storage, HD decoding, etc.

2.2 Product Key Functions

Basic Information

- Milesight NVR Series includes **NVR Series** (Mini NVR 1000 Series, Pro NVR 5000 Series, Pro NVR 7000 Series, Pro NVR 8000 Series), and **PoE NVR Series** (Mini PoE NVR 1000 Series, PoE NVR 5000 Series and PoE NVR 7000 Series), which can work with Milesight network cameras and connect with third party network cameras that support ONVIF.

Monitoring

- Support displaying Event Detection Region and the detection frame to track the target.
- Support batch IP editing, setting camera's video parameters and record schedule.
- Support motion detection and video loss alert.
- Support various PTZ protocols and PTZ operations such as preset, patrol, etc.
- Support 3D positioning control for the PTZ Camera Series and Fisheye Camera Series.
- Support the configuration of privacy mask of camera.
- Support the configuration of Milesight PTZ cameras' Privacy Mask.
- Support OSD title and date configuration.
- Support setting view to Original or Resize.
- Support playback on slave NVR when Milesight N+1 Hot Spare is enabled.
- Support the setting of Frame Rate and Bit Rate of different Record Stream Types separately according to the actual situation to achieve bandwidth saving.
- Support both Bundle-stream Mode and Multi-stream Mode of fisheye channels.
- Support Two-way Audio.

HDD Management

- Support hard disk and NAS storage.
- Support S.M.A.R.T technology.
- Support RAID, Group management and Storage Quota.
- Support to set HDD property, including read-only and read/write.
- Support eSATA disk for recording or backup of NVR Pro 8000 Series.

Recording/Snapshot and Playback

- Support ANR (Automatic Network Replenishment) for replenishing the recording gap due to internet interruptions.
- Support Transcoding for remote playback.
- Support recording with Primary Stream, Secondary Stream and Primary + Secondary Stream.
- Support General Playback, Event Playback, Tag Playback, Split Playback and Picture Playback.
- Support to tag and lock video.
- Support holiday schedule.
- Support recycle and non-recycle recording mode.
- Support 12 recording time periods with separate recording types.
- Support pre-record and post-record time setting for motion detection, alarm and VCA recording. And support pre-record setting for manual and schedule recording.
- Support recording/snapshot manually.
- Support digital zoom function at arbitrary area in playback.
- Support pause, rewind, fast play, slow play, skip forward and skip backward when playback, locating in progress bar by dragging the mouse.
- Support up to 128x fast forward playback.
- Support the recording and snapshot in the channels where the events triggered.
- Support Smart Search in Playback.

Backup

- Support N+1 Hot Spare.
- Support Common Backup, Event Backup and Picture Back in Retrieve interface.
- Support export video files or snapshot to USB and eSATA device.
- Support Auto Backup function.
- Support backup device maintenance and management.

Alarm & Exception

- Support motion detection configure and alarm.
- Support video loss alarm, alarm input and alarm output.
- Support Network Disconnected/Disk Full/Record Failed/Disk Error/Disk Uninitialized/No Disk alarms.

- Support VCA alarm, including Region Entrance, Region Exiting, Advanced Motion Detection, Tamper Detection, Line Crossing, Loitering, Human Detection, and Object Left/Removed.
- Support various alarm response such as audible warning, sending email, recording, PTZ action and on/off relay out.
- Support the Picture Attached function for Email Linkage Alarm Action.
- Support Smart Analysis, including ANPR, Face Detection, People Counting, Heat Map and POS.


Network

- Built-in WEB Server.
- Equipped with PoE ports for PoE cameras(only available for PoE NVR).
- Support remote search, playback and download of video files.
- Support remote acquiring and configuring of parameters.
- Support remote import and export of device parameters.
- Support MileSight Cloud.
- Support P2P remote access.
- Support IPv4/IPv6, TCP, UDP, RTP, RTSP, RTCP, HTTP, HTTPS, DNS, DDNS, DHCP, NTP, SNTP, SMTP, SNMP, UPnP.
- Support remote acquiring of device status, system log and alarm status.
- Support remote operate system maintenance by initialize hard disk, add NAS, upgrade firmware and auto reboot, etc.
- Support upload alarm and exceptions to remote host.
- Support remote manual start or stop of recording.
- Support remote manual start or stop of alarm output.
- Support remote BMP image capturing.
- Support remote PTZ control.
- Support keyboard control.

Other Functions


- Support multi-level user management, administrator can create multiple users with access rights.
- Support operating and configuring information import/export.
- Support auto reboot.
- Support CGI for Windows and Linux system.
- Support Plugin-Free mode.

Chapter 3. Web Settings

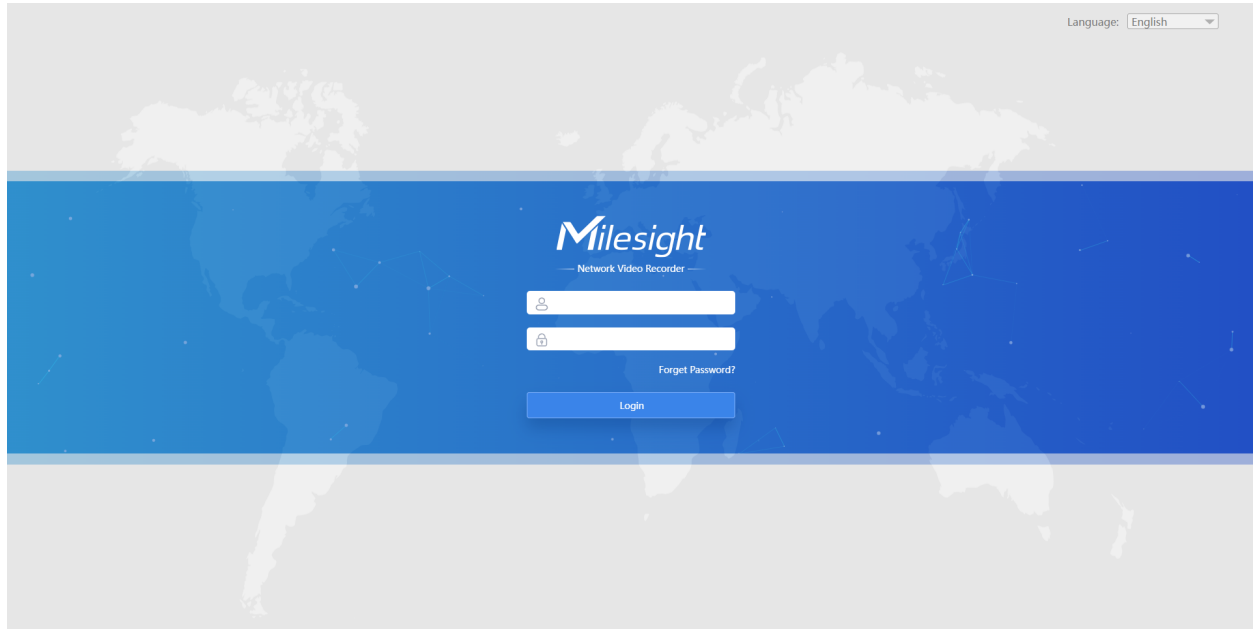


3.1 Overview

3.1.1 Account Setting

 **Note:** Only the NVR firmware version xx.9.0.3 or above supports account activation.

Step1. Set password to active admin account.

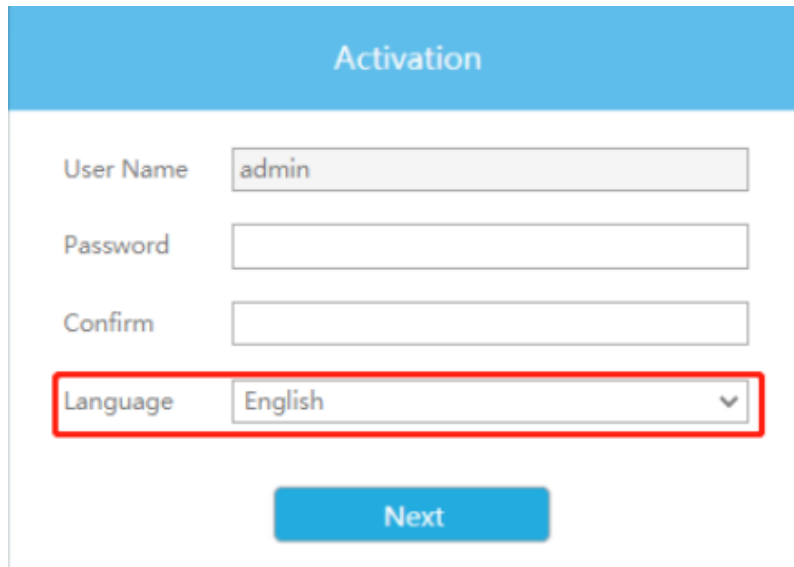

The screenshot shows a web interface titled "Activation". It contains four input fields: "User Name" with the value "admin", "Password", "Confirm", and "Language" with the value "English". The "Language" field is highlighted with a red border. Below the fields is a blue "Next" button.

 **Note:**

1. Password must be 8 to 32 characters long.
2. Password must contain at least one number and one letter.
3. You can also choose the system language on the activation interface.

Step2. Set security questions which are used for resetting password to finish account setting.

10 questions are provided, you can select any one to set answer. Beside, customized question is available.

If you skip this step, you can also set it again in Setting -> User interface.

Security Question Setting

Question1:

Answer1:

Question2:

Answer2:

Question3:

Answer3:


3.1.2 Login

Step1: Select Language on the top-right of interface.

Step2: Input the user name, password and click "Login" button to log in to NVR web page.

 **Note:**

- If the NVR firmware version is below xx.7.0.6, the default user name is “admin” and the default password is “123456”.
- If the NVR firmware version is between xx.7.0.6 and xx.9.0.3, the default user name is “admin” and the default password is “ms1234”.
- If the NVR firmware version is xx.9.0.3 or above, please set the password before login.
- The account will be locked if the password is entered incorrectly for four times.
- If you forget the password, click [Forget Password?](#) to reset password (Only the NVR firmware version xx.9.0.3 or above supports this.).

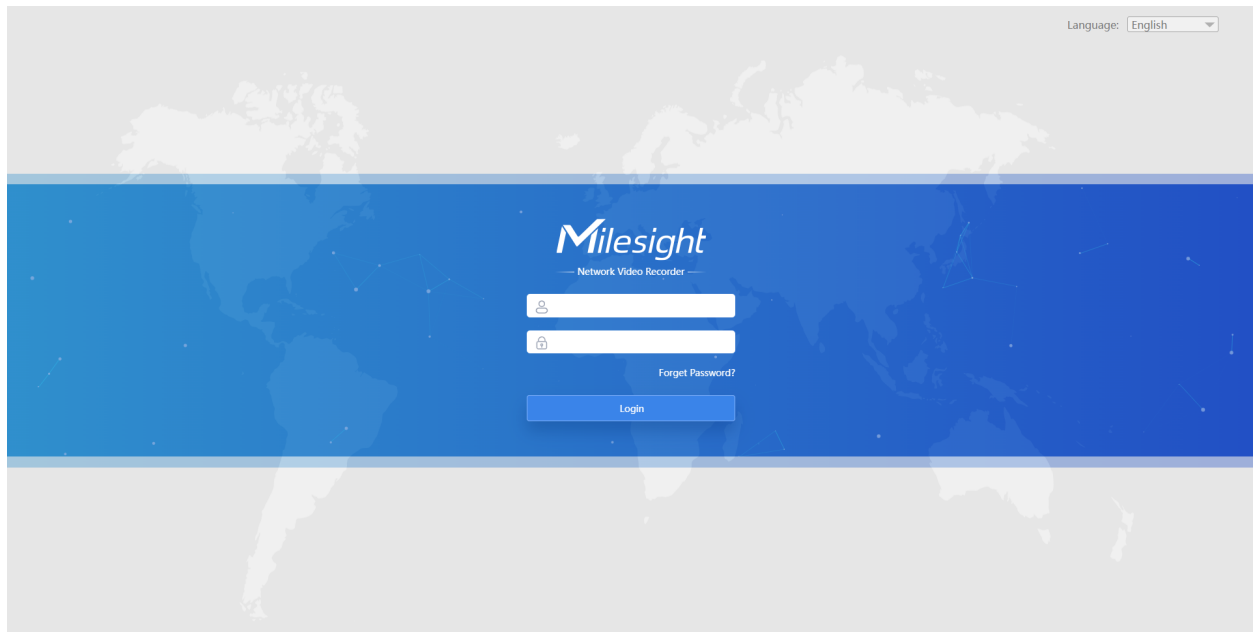

Step3: The NVR Web page can be used with the most standard operating systems and browsers.

If the NVR version is V7x.9.0.4 or above, Plugin-Free Mode is supported on the NVR. You can preview the video on the browser without plugin. For Windows system, Plugin-Free mode is supported in Chrome/Firefox/Microsoft Edge browser. For MAC system, Plugin-Free mode is supported in Chrome/Firefox/Safari browser.

 **Note:**

- If the firmware version of NVR is below V7x.9.0.14, only H.264 video codec is supported on Plugin-Free Mode for NVR. For better user experience, we recommend that you set the "profile" option to "main" on the camera.
- If the firmware version of NVR is V7x.9.0.14 or above, H.265 video codec is supported on Plugin-Free Mode for NVR.
- Plugin-Free mode is only supported when Chrome version is above V45, Firefox version is above V52, Microsoft Edge version is above V11 and Safari version is above V11.
- When you use plugin-free mode, it will display "Plugin-Free" mode in "Settings" - "Local Configuration" interface.


Local Configuration

Plugin Mode	Plugin-free
Primary Stream When Fullscreen	<input type="checkbox"/>

Note: Plugin-Free mode only supports H.264.

Save

If the NVR version is below V7x.9.0.4, the browser will prompt to install the plugin when first logging in the device. You can click “[Download the plugin for NVR](#)” to download the plugin for NVR. Please click “Finish” and refresh the browser, then you will see the video.

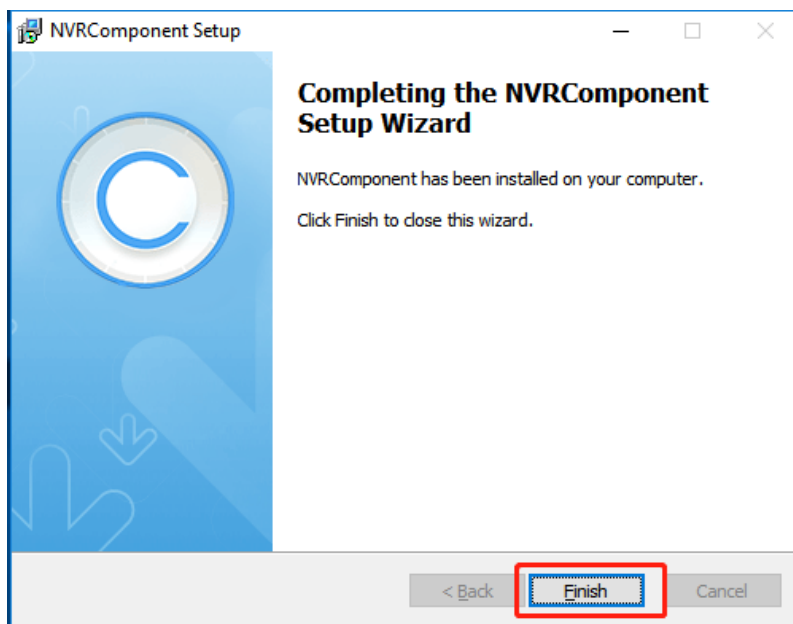

 **Note:** During installing the plugin, please keep the browsers close.

3.1.3 Menu



 
 
 
 
 
 
 
 


Table 1.


Icons	Descriptions
	Hide or show secondary menu
	Live view
	Play back the video
	Back Up Files
	Smart Analysis
	Make settings for Camera, Record, Event and System


Icons	Descriptions
	Check Device Information, Network Status, Camera Status, Disk Status and Event Status
	Check all operation logs
	Log out NVR

3.2 Live View

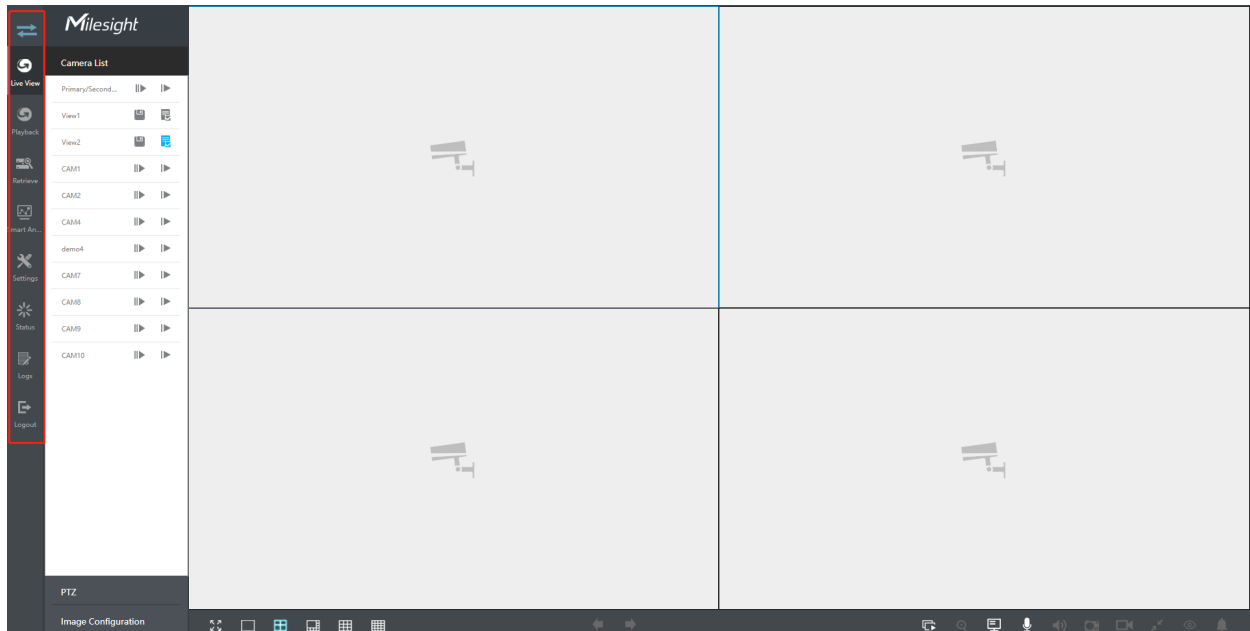





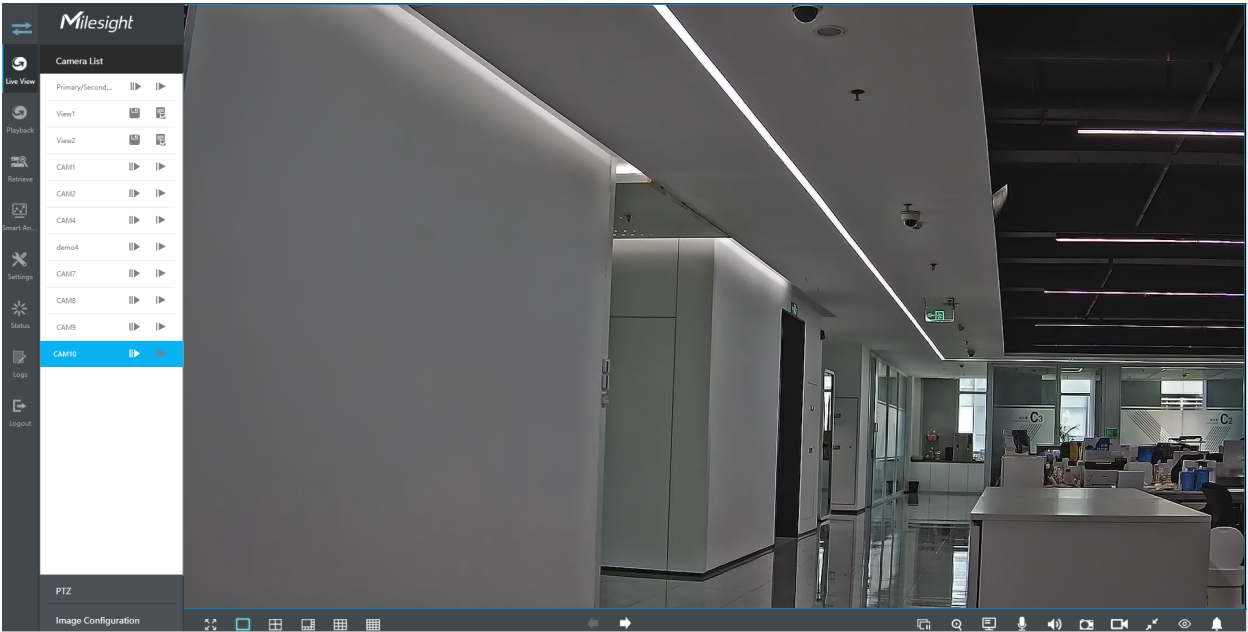




















3.2.1 Camera List

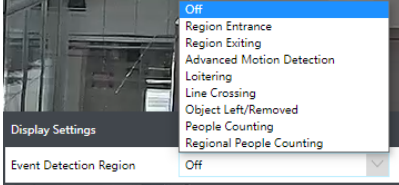List and play added cameras on Camera List page.

 
Select one window one camera to play. Or click  to get all cameras' live video.




Icons' descriptions of Live View
Table 2. Description of the buttons

Icons	Descriptions	Icons	Descriptions
	Play Primary Stream		Play Secondary Stream
	Save View		Play default view
	Full screen		1 screen mode
	4 screens mode		8 screens mode
	9 screens mode		16 screens mode
	Previous page		Next page
	Stop all live view		Start all live view
	Digital Zoom	 	Display Settings of Event Detection Region
	Two-way Audio		Audio on
	Audio off		Snapshot
	Snapshot		Record
	Original Image		Resize Image
	Fisheye Client-side Dewarping		Camera Alarm Output


Fisheye Client-side Dewarping


Click  to enable Client-side Dewarping on the panel that pops up when the selected channel plays successfully. Users can dewarp the original Fisheye view into various modes in the live view interface on demand, including Installation Mode and Display Mode. There are 3 options for Installation Mode: Ceiling, Wall and Flat. And there are 9 options for Display Mode: 1O, 1P, 2P, 4R, 1O3R, 1P1R, 1P4R, 1P6R, and 1O8R.

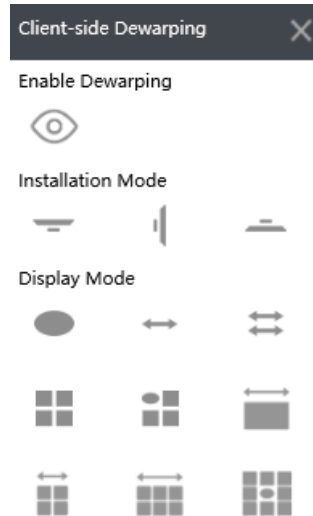

 **Note:** Make sure your NVR model is MS-NXXXX-U(P)H.

Two-way Audio

Click  to enable Two-way Audio. You can select to talk with camera or NVR.

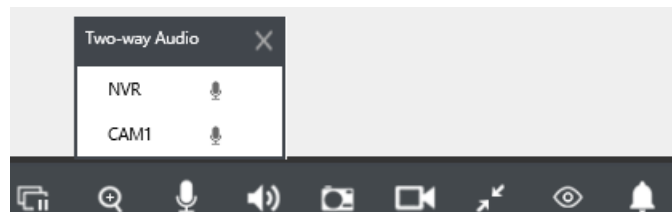




 **Note:**

1. For NVR that does not support the Audio I/O interface, it only supports to talk with camera through Web page.
2. The Two-way Audio only supports one channel talking at one time.
3. Two-way Audio and Audio function can not be used together, including Audio of Playback, but if you are using Two-way Audio on one web page, you can use Audio on another page.

- The audio interface of NVR can only be used alone. When other devices are talking to NVR, it would indicate that the device is busy if you enable Audio or Two-way Audio of other channels at the same time.


And there are multiple icons on each channel displayed in live view, indicating video loss and alarm status of the channel.

Table 3. Description of the buttons

Icons	Descriptions
	It indicates video loss
	It indicates motion detection alarm
	It indicates VCA alarm

3.2.2 PTZ

For PTZ cameras, you can operate PTZ, Preset, Patrol, Pattern, Lighting for 30s, Lens Initialization and Auxiliary Focus on PTZ page directly.

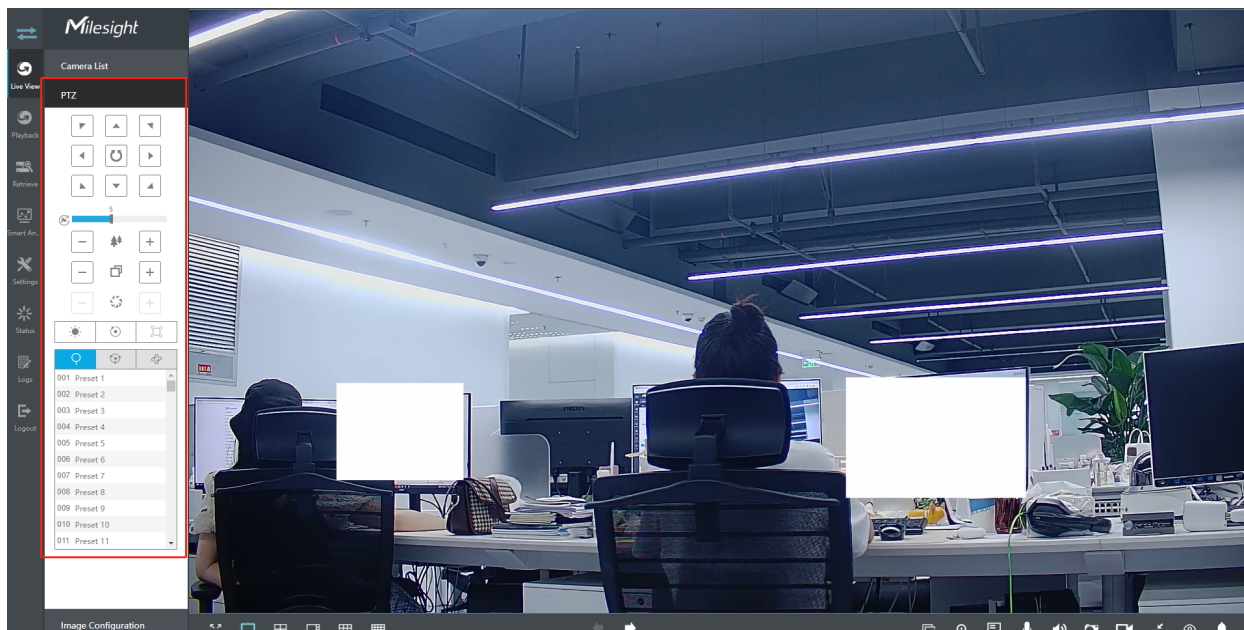


 **Note:**

1. Ensure that your camera's version is 4X.7.0.74 or above before you use Lighting for 30s, Lens Initialization, Auxiliary Focus and Fisheye Auto Tracking.
2. Fisheye channels also support the PTZ operation, which allows users to adjust the on-board monitoring angle of Fisheye view.

3.2.3 Image Configuration


Adjust image Brightness, Contrast, Saturation, Sharpness and Noise Reduction Level on Image Configuration page.

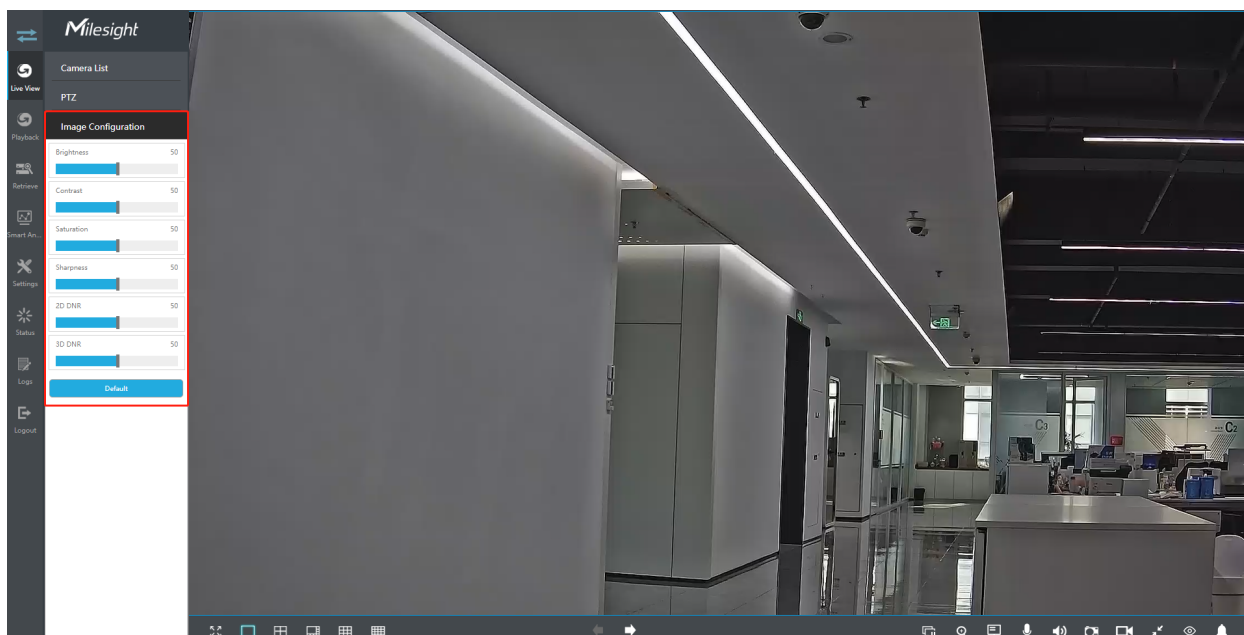


3.3 Playback

Playback supports to playback video according to recorded time and to play recorded video files in specified time period. Synchronous playback of multi-channel is supported.

3.3.1 General Playback

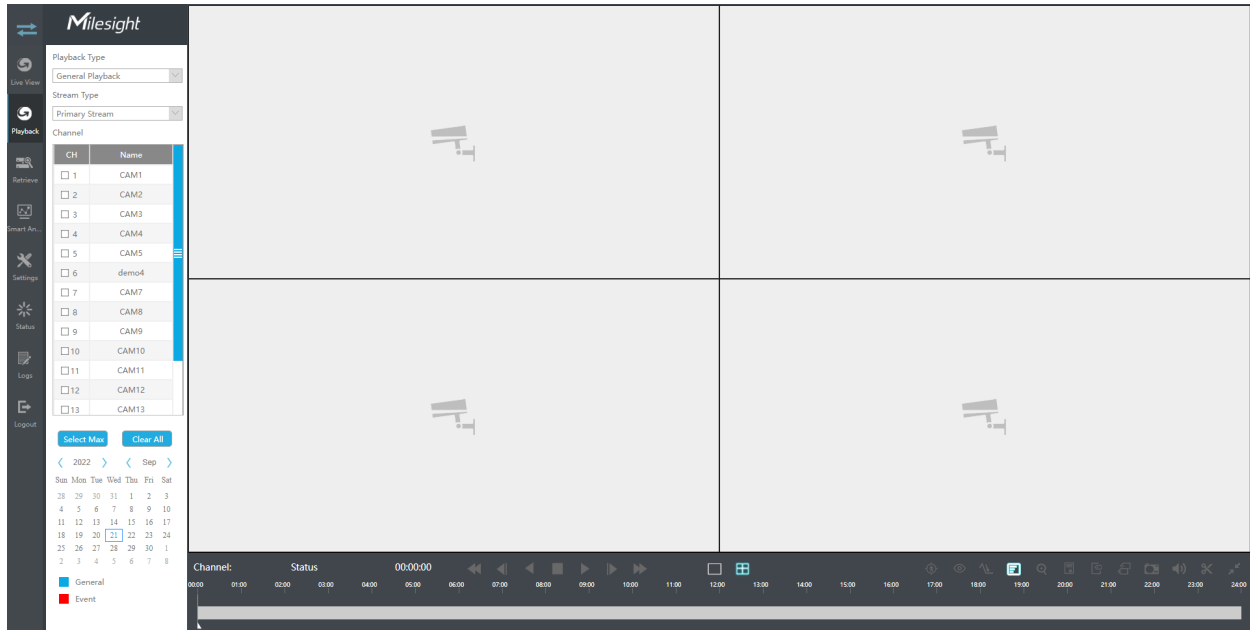


Step1. Select General Playback as playback type.

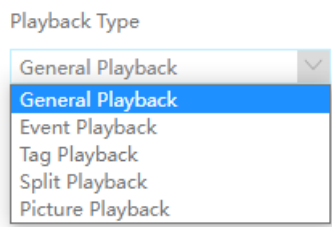


Step2. Select Stream Type.

Primary Stream and Secondary Stream are available.

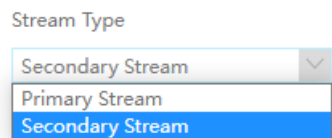

Step3. Select channel.

Note: The playback stream you selected will be remembered when you reenter the web playback page.

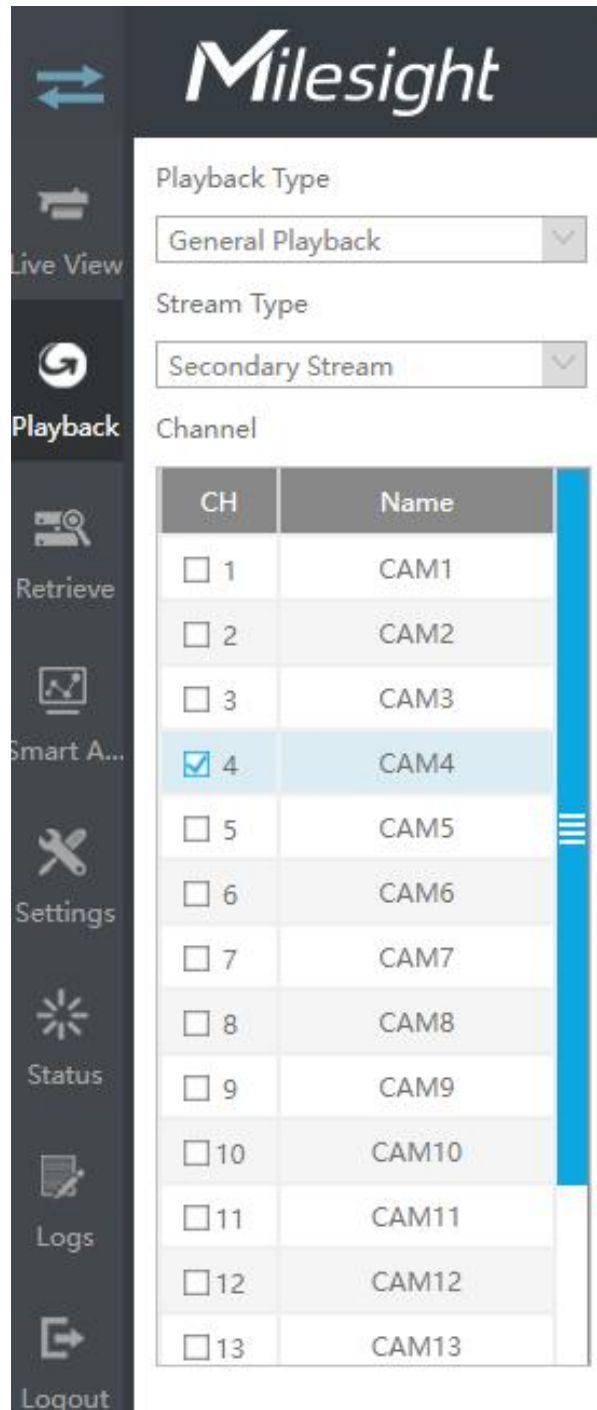


The screenshot displays the Milesight web interface for playback settings. The left sidebar contains navigation icons for Live View, Playback, Retrieve, Smart A..., Settings, Status, Logs, and Logout. The main content area shows the following settings:

- Playback Type:** General Playback
- Stream Type:** Secondary Stream
- Channel:** A table with 13 channels, where CAM4 is selected.

CH	Name
<input type="checkbox"/> 1	CAM1
<input type="checkbox"/> 2	CAM2
<input type="checkbox"/> 3	CAM3
<input checked="" type="checkbox"/> 4	CAM4
<input type="checkbox"/> 5	CAM5
<input type="checkbox"/> 6	CAM6
<input type="checkbox"/> 7	CAM7
<input type="checkbox"/> 8	CAM8
<input type="checkbox"/> 9	CAM9
<input type="checkbox"/> 10	CAM10
<input type="checkbox"/> 11	CAM11
<input type="checkbox"/> 12	CAM12
<input type="checkbox"/> 13	CAM13


Step4. Select date.

Step 5. Select Event to filter  different events for a more accurate view.

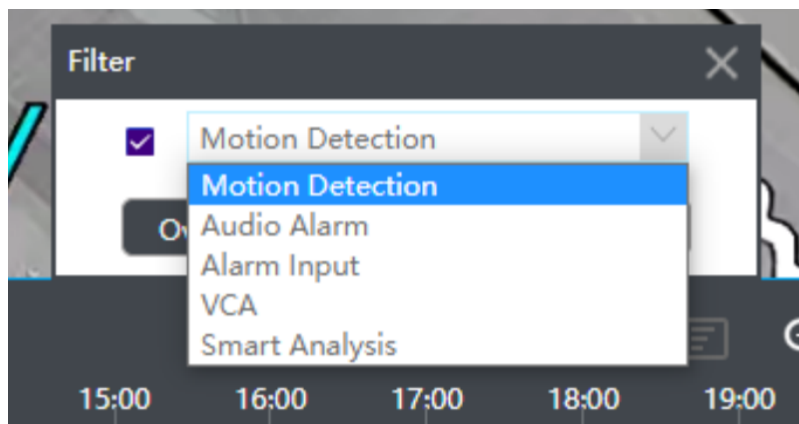


1) If you select Override Search, the events that you search for will be presented in a different color on the original timeline.

Override Search:

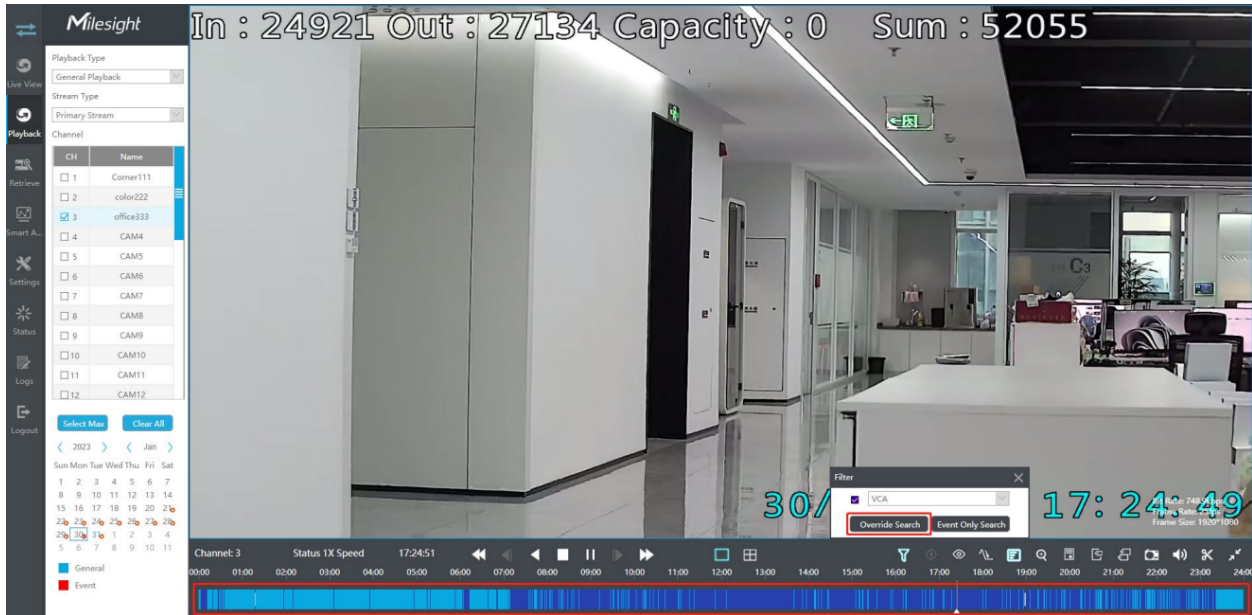


2) If you select Event Only Search, only the video of the event will be presented on the timeline.

Event Only Search:

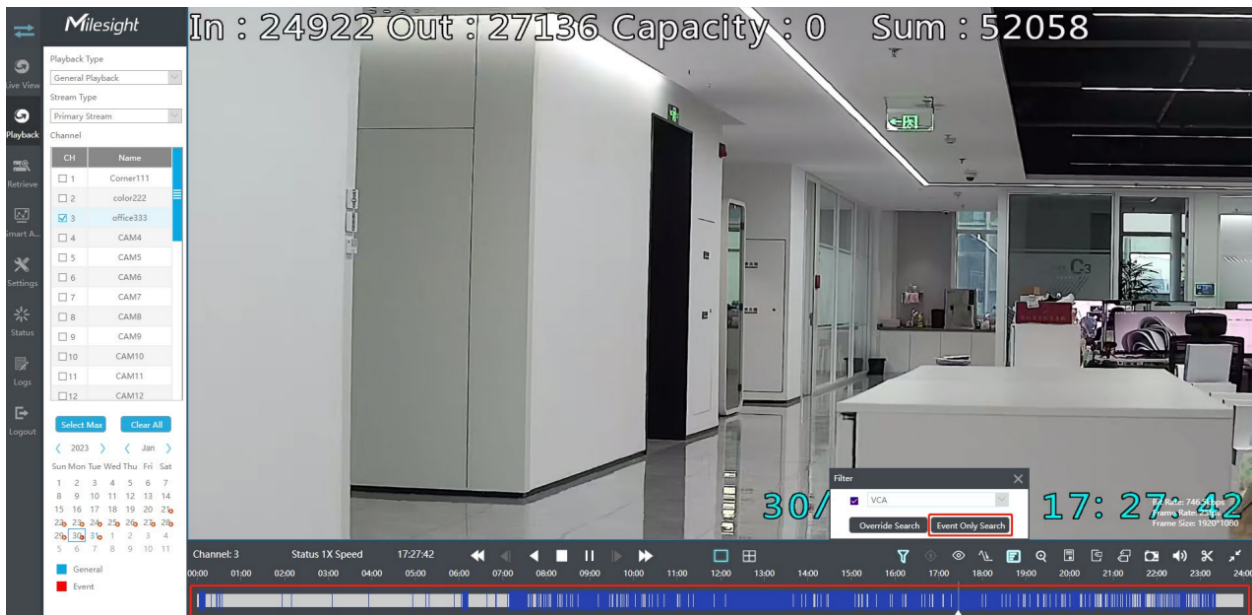

Note: This function is only available when you playback with a single channel.

 Step 6. Click  to play.



Every channel got their own file bar, and there is only one file bar matching with the selected channel. The tool bar can display multiple types record. It shows what kind of event has happened during this period. The symbolic meaning of each color is:

Blue—General















Red --- Event












Take this bar above as an example, it means that there are continuous recording and event recording in this period.

 **Note:**

1. You can adjust the speed even when playback is paused.
2. The playback time bar on web page also shows the locked and tagged icons, which is the same as on the monitor.

Table 5. Description of the buttons

Icons	Descriptions	Icons	Descriptions
	Speed down		Step reverse
	Rewind		Stop
	Play		Pause
	Step forward		Speed up
	1 screen mode		4 screens mode
	Filter		Smart Search
	Client-side Dewarping		Transcoding


Icons	Descriptions	Icons	Descriptions
	Display of POS information		Digital zoom
	Lock video file		Quick Tag
	Custom Tag		Snapshot
	Audio on		Audio off
	Backup		Original Image
	Resize Image		

Lock Video: Once the video is locked, the whole file where the video located won't be overwritten. The NVRs support the display of locked icon on the playback bar so that the corresponding files in the playback page can be identified directly. You can also change the lock status in Retrieve interface.

Tag Video: Quick Tag and Custom Tag are available for tag operation in Playback interface. The NVRs support the display of tagged icon on the playback bar so that the corresponding files in the playback page can be identified directly. You can backup video via tag in Retrieve interface or do tag playback in Playback interface.

Smart Search: NVR can search out all relevant motion events and play all the event recording files of the selected area. Here are the steps of how to use the function.

(1) Go to Playback interface, select a channel to playback.

(2) Click  to enable Smart Search.

(3) Draw an area in the frame and NVR would play the video files after searching out all motion events of the area.

Total: In 1815 Out 1951 Sum 3766 Capacity 0

Playback Type: General Playback
Stream Type: Primary Stream

CH	Name
<input type="checkbox"/>	CAM1
<input type="checkbox"/>	CAM2
<input type="checkbox"/>	CAM3
<input type="checkbox"/>	CAM4
<input type="checkbox"/>	CAM5
<input type="checkbox"/>	demo4
<input type="checkbox"/>	CAM7
<input type="checkbox"/>	CAM8
<input type="checkbox"/>	CAM9
<input checked="" type="checkbox"/>	CAM10
<input type="checkbox"/>	CAM11
<input type="checkbox"/>	CAM12
<input type="checkbox"/>	CAM13

Channel: 10 Status 1X Speed 13:50:52


Channel: 10 Status 1X Speed 13:50:52

00:00 01:00 02:00 03:00 04:00 05:00 06:00 07:00 08:00 09:00 10:00 11:00 12:00 13:00 14:00 15:00 16:00 17:00 18:00 19:00 20:00 21:00 22:00 23:00 24:00


Note:

1. Only NVR firmware version xx.9.0.10 or above supports Smart Search
2. Make sure your Camera version is xx.7.0.76 or above.
3. Smart Search and Smart Play Speed can not be used together.
4. Smart Search is available only when playing in a single channel.

3.3.2 Event Playback

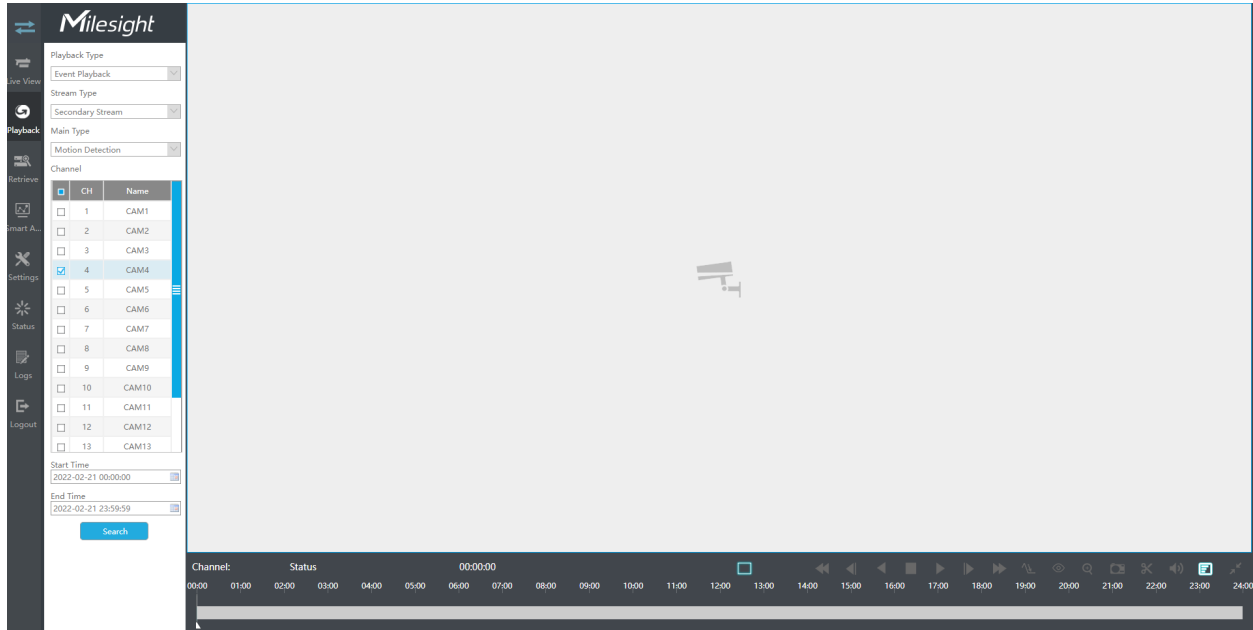

Step 1. Select Event Playback as playback type.

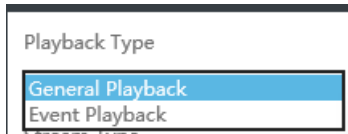

Step 2. Select Stream Type.

Primary Stream and Secondary Stream are available.



Step 3. Select channel.

Select channels you want to do playback. Layout of playback will be automatically adjusted according to the amount of the selected channels.


Step 4. Select Event Type.



In particular, the Detection Object option is available only if the Main Type is VCA and the Sub Type is one of several VCA events. You can search and playback the video that meets the corresponding conditions according to the selected Detection Object. The Detection Object has three options: All, Human and Vehicle.

The VCA events which support the human/vehicle detection object function are:

- Region Entrance
- Region Exiting
- Advanced Motion Detection
- Line Crossing
- Loitering

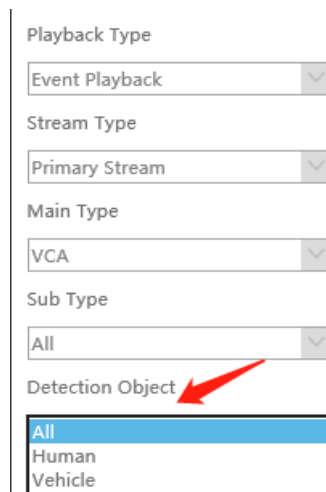

Playback Type
Event Playback

Stream Type
Primary Stream

Main Type
VCA

Sub Type
All


Detection Object

- All
- Human
- Vehicle


Step 5: Select Start Time and End Time, click "Search" to search the record.

Start Time
2020-08-10 00:00:00


End Time
2020-08-10 23:59:59

Step 6: It would list all videos after clicking "Search". Set pre playback and post playback time, then play the video by clicking .

3.3.3 Tag Playback

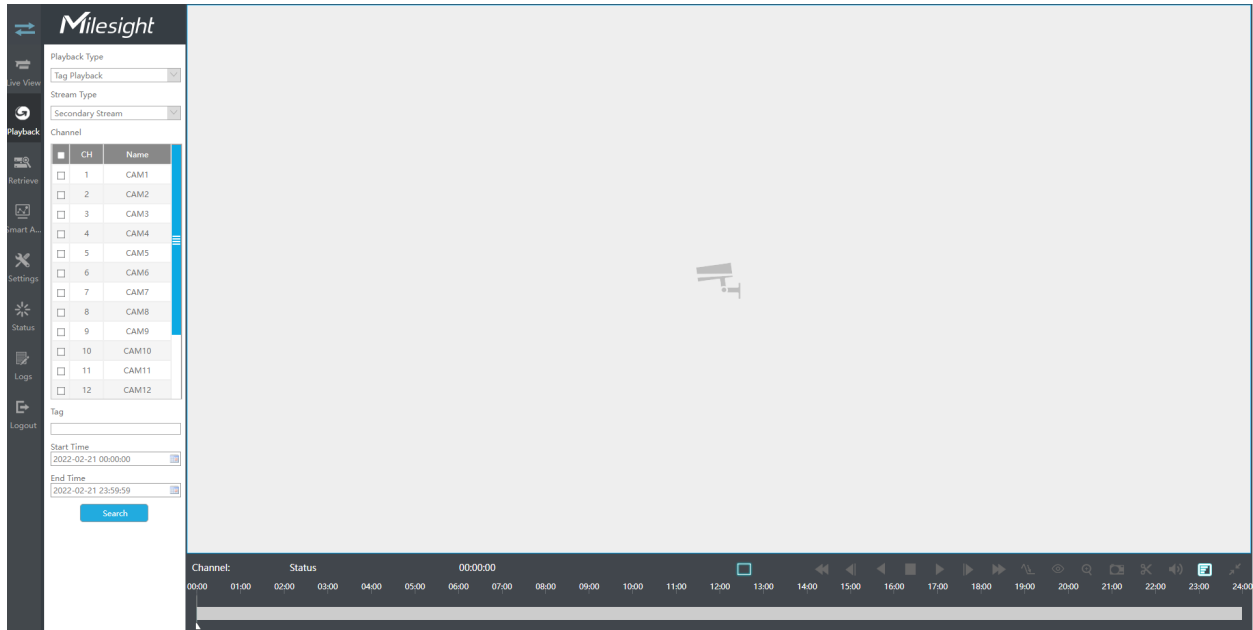

Step 1. Select Tag Playback as playback type.

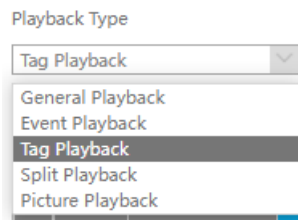

Step 2. Select Stream Type.

Primary Stream and Secondary Stream are available.



Step 3. Select channel.

Select channels you want to do playback. Layout of playback will be automatically adjusted according to the amount of the selected channels.

Step 4. Input tag name or any key words of tag.




Step 5: Select Start Time and End Time.

Start Time
2020-08-10 00:00:00

End Time
2020-08-10 23:59:59


Step 6: It would list all tagged video after clicking  . Set pre playback and post playback time, then play the tag video by clicking .

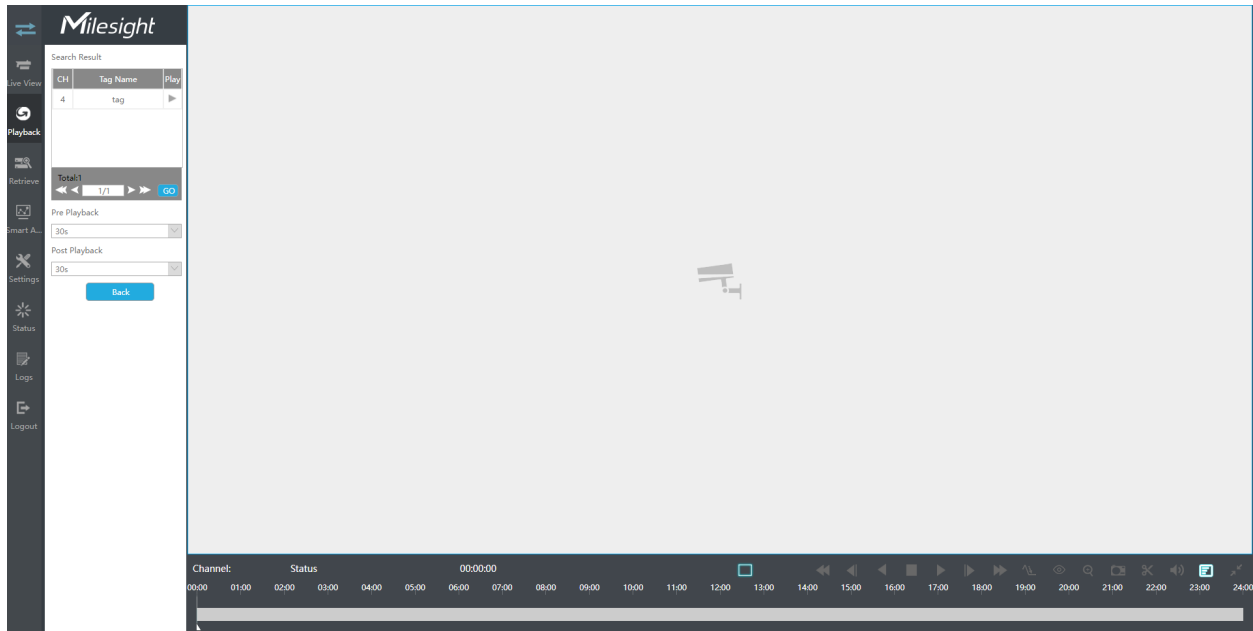


Video Playback Tool Bar Description are the same as General Playback, except for those icons that are not locked or tagged on the playback bar.

3.3.4 Split Playback

Split Playback allows users to select a video channel and set a time range to divide the video files into several parts in the specified time period according to their needs when watching playback, so that users can watch videos of different time simultaneously.

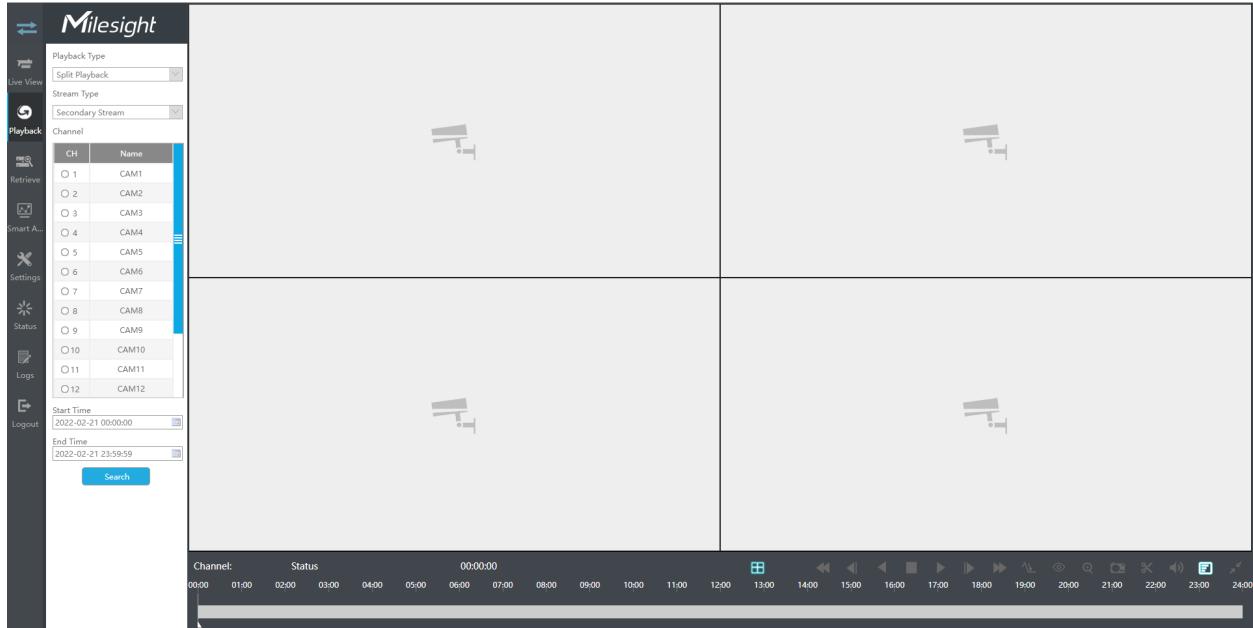

Step1. Select Split Playback as playback type.

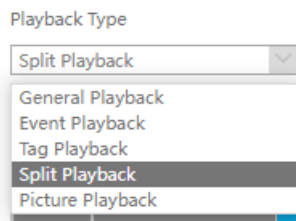

Step2. Select Stream Type.

Primary Stream and Secondary Stream are available.

Step3. Select channel.

Select a channel you want to play back. You are allowed to select only one channel at one time.


Step4. Set Start Time and End Time.

Set Start Time and End Time and click Search button to search playback records of the chosen channel. The time period should be within 24 hours


Start Time
2020-08-10 00:00:00

End Time
2020-08-10 23:59:59


Step5: It would start playing after clicking "Search", displayed in 4 split screens by default.

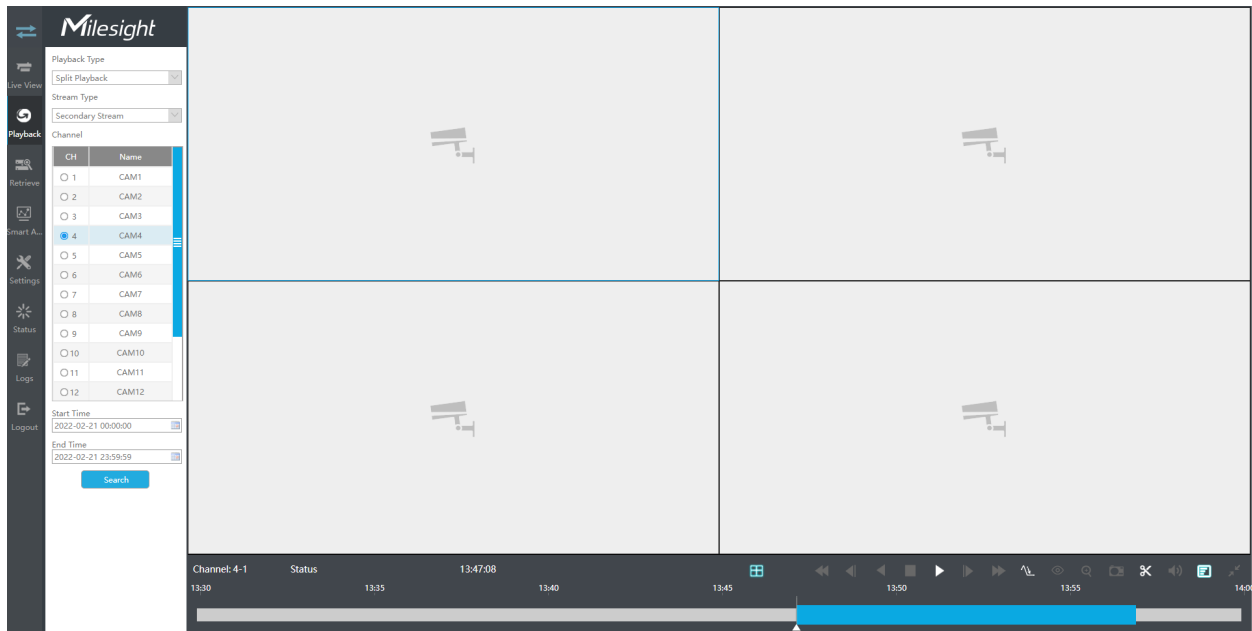

3.3.5 Picture Playback

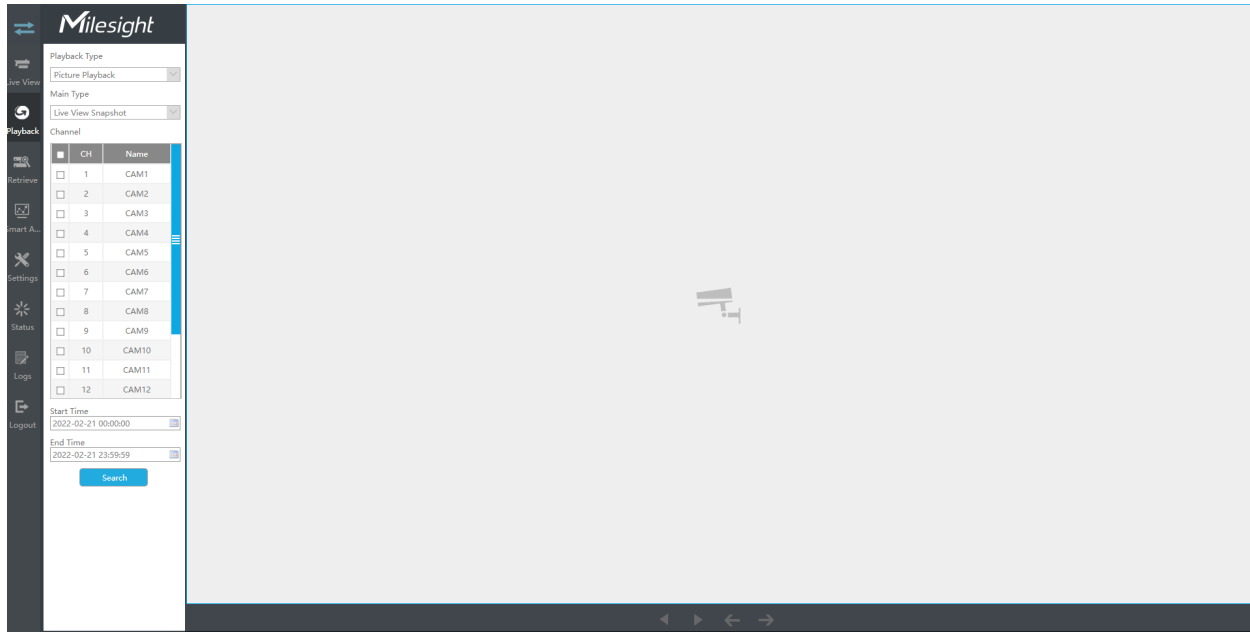


Step 1. Select Picture Playback as playback type.

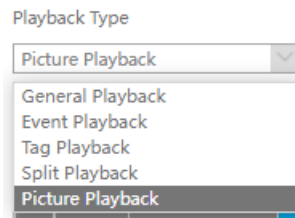

Step 2. Select channel.


Step 3. Select Snapshot type, including Live View Snapshot, Playback Snapshot, Continuous Playback and Event Playback.

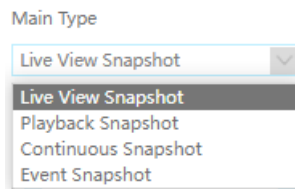

Live View Snapshot and Playback Snapshot refer to the picture file manually captured in Live View and Playback page.

Continuous Snapshot requires you to set continuous snapshot schedule in Storage->Snapshot->Snapshot Schedule interface.

Event Snapshot includes Motion Detection, Alarm Input, VCA and Smart Analysis. Select corresponding event and click Search to get event snapshot files.

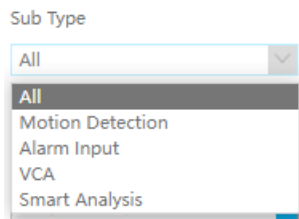

Step 4: Select Start Time and End Time.

Start Time
 2020-08-10 00:00:00

End Time
 2020-08-10 23:59:59

Step 5: It would list all snapshot after clicking "Search".

Click to play the selected picture, or click to auto play pictures.

3.3.6 Transcoding

With transcoding function, remote playback will have a better performance no matter what network environment is.

Step 1. After successfully search out or play video, select the channel you want to transcoding and click

to expand transcoding panel.

Transcoding ✕

Transcoding

Frame Size

Bit Rate

Frame Rate

Apply

Step 2. Set Transcoding parameters.

Set Transcoding, Frame Size, Bitrate and Frame Rate according to the network situation. The worse network situation, the lower transcoding parameter.


Step 3. Click "Apply" to make transcoding take effect.


3.3.7 Video Files Backup

Recorded files can be cut and backed up from WEB.



Step1. In playback interface, select camera, stream type, the date and time to search record video.

Step2. Select Recorded files for Backup.

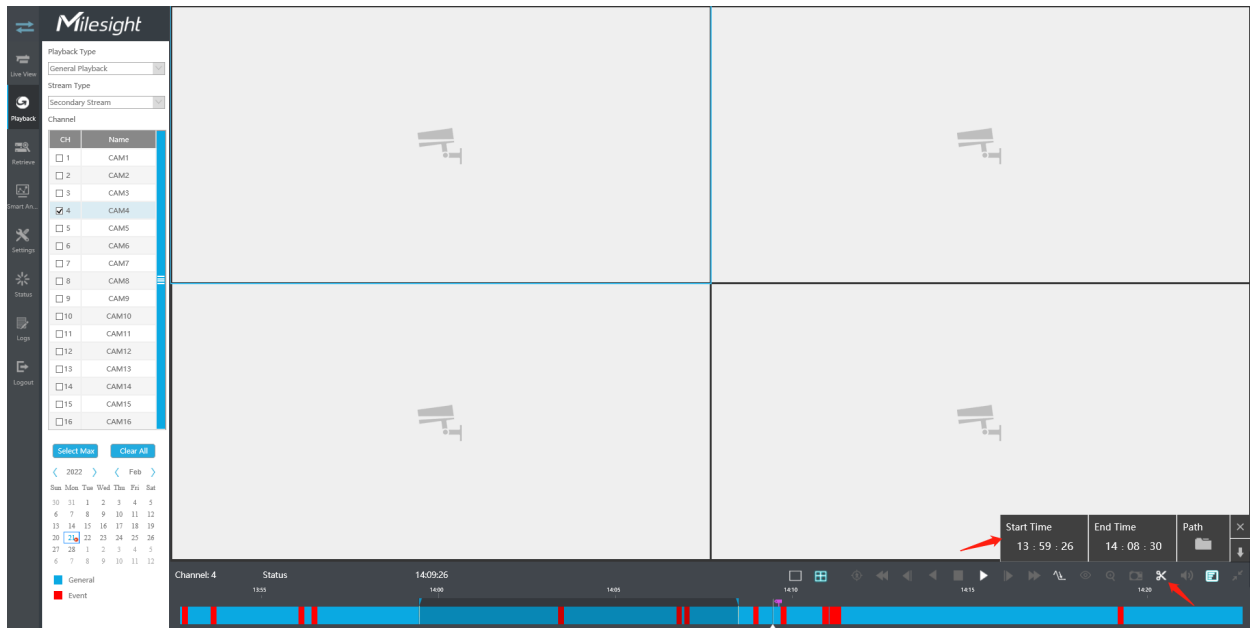Click , then select start time and end time by dragging the vertical line on the time bar.



Step3. Backup the recorded files.

Click  to select file path, then click  to back up recorded files.

The screenshot displays the Milesight NVR web interface. On the left, a sidebar contains navigation icons for Home, Live View, Playback, Settings, Status, Log, and Logout. The main area is divided into a settings panel on the left and a video playback area on the right.

Playback Settings Panel:

- Playback Type: General Playback
- Stream Type: Secondary Stream
- Channel: A list of 16 channels (CAM1 to CAM16) with checkboxes. CAM4 is selected.
- Buttons: Select Mass, Clear All
- Calendar: Shows the month of February 2022. The 21st is selected.
- Legend: General (blue square), Event (red square)

Video Playback Area:

- A 2x2 grid of camera feeds. Each feed shows a grey background with a camera icon, indicating that the video stream is not available or is in a placeholder state.
- Bottom right corner: Start Time (13:59:26), End Time (14:08:30), Path, and a download icon (red box).
- Bottom status bar: Channel: 4, Status, 14:09:26, and a timeline with red event markers.

3.3.8 Picture Files Backup

Step 1. Browse a playback picture path in Local Configuration interface.

Local Configuration

Record File Path Browse

Preview Picture Path Browse

Playback Picture Path Browse

Connection Type ▼

Play Mode ▼


Auto Logout ▼

Primary Stream When Fullscreen

Save

Step 2. Click  to save the picture during video playback. Then the backup picture can be found in the files path you set before.

Note: It is recommended to run browser as administrator before getting playback snapshot.

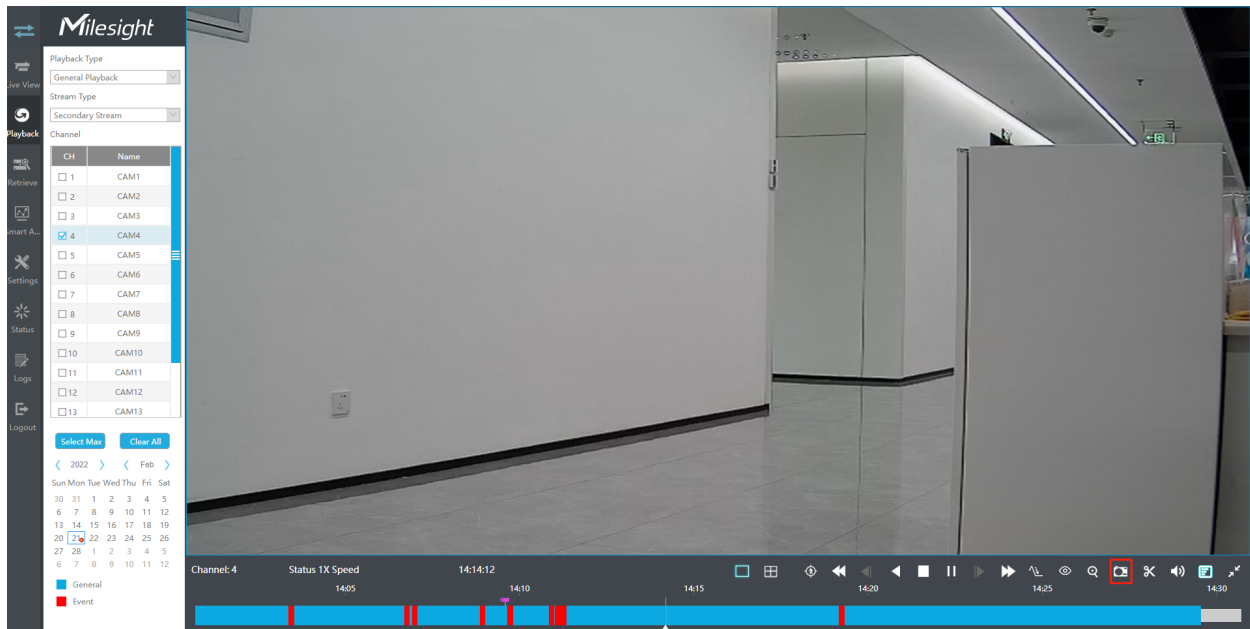

The screenshot shows the MileSight web interface. On the left is a sidebar with navigation options: Home, Live View, Playback, Retrieve, Smart A.I., Settings, Status, Logs, and Logout. The 'Playback' section is active, showing a table of cameras:


CH	Name
<input type="checkbox"/>	CAM1
<input type="checkbox"/>	CAM2
<input type="checkbox"/>	CAM3
<input checked="" type="checkbox"/>	CAM4
<input type="checkbox"/>	CAM5
<input type="checkbox"/>	CAM6
<input type="checkbox"/>	CAM7
<input type="checkbox"/>	CAM8
<input type="checkbox"/>	CAM9
<input type="checkbox"/>	CAM10
<input type="checkbox"/>	CAM11
<input type="checkbox"/>	CAM12
<input type="checkbox"/>	CAM13

Below the table are buttons for 'Select Max' and 'Clear All'. A calendar shows the current date as Feb 20, 2022. The main area displays a video playback for 'Channel: 4' with a timeline at the bottom. A red box highlights a 'Screenshot' icon in the playback controls.


3.4 Retrieve

3.4.1 Common Backup

Support to search out record file according to different stream type, record type and file type you set.

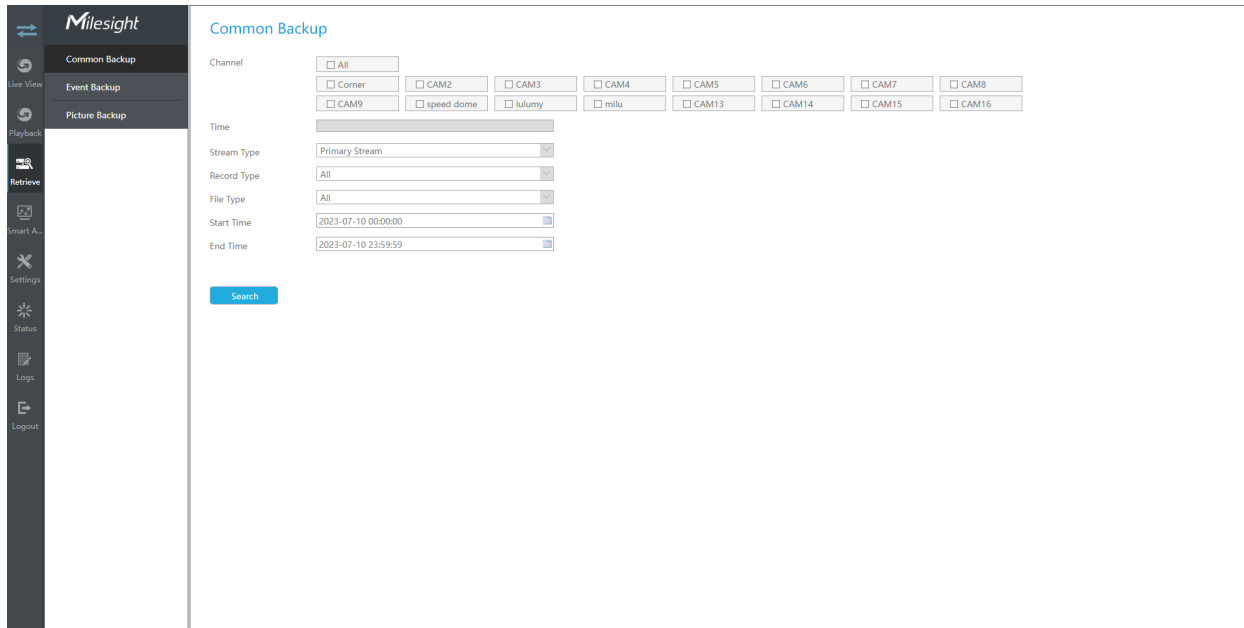


Step 1: Set the search condition and click  to search video.

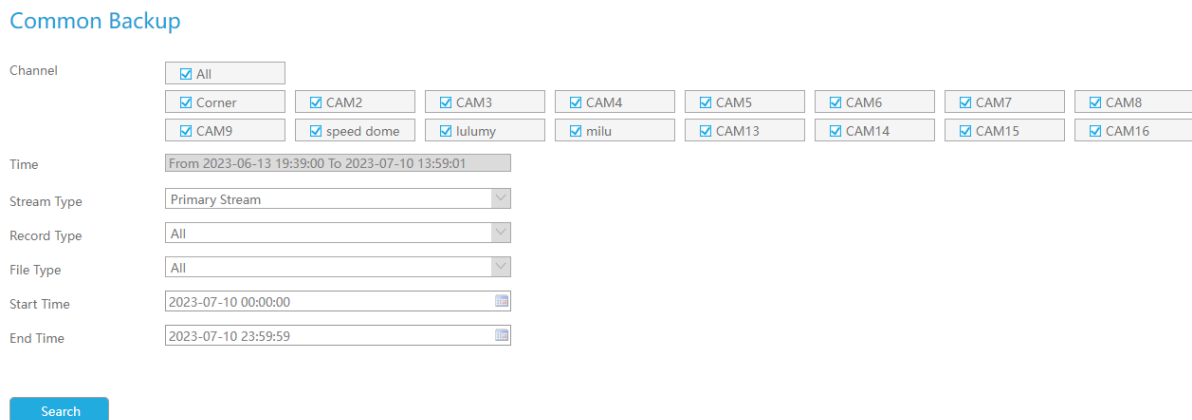

The search result can be shown as a list.


The search result can be shown as a list.

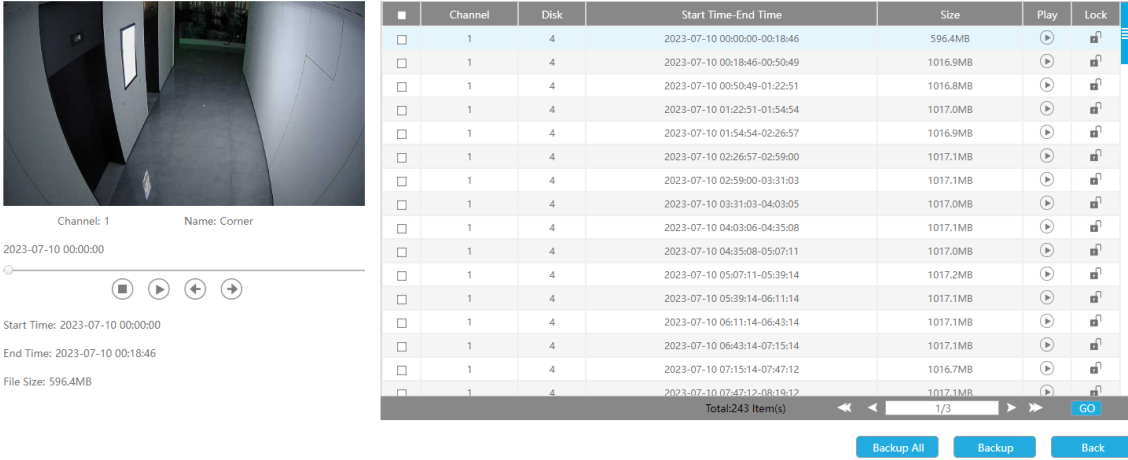

Common Backup




	Channel	Disk	Start Time-End Time	Size	Play	Lock
<input type="checkbox"/>	1	4	2023-07-10 00:00:00-00:18:46	596.4MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 00:18:46-00:50:49	1016.9MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 00:50:49-01:22:51	1016.8MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 01:22:51-01:54:54	1017.0MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 01:54:54-02:26:57	1016.9MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 02:26:57-02:59:00	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 02:59:00-03:31:03	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 03:31:03-04:03:05	1017.0MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 04:03:06-04:35:08	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 04:35:08-05:07:11	1017.0MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 05:07:11-05:39:14	1017.2MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 05:39:14-06:11:14	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 06:11:14-06:43:14	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 06:43:14-07:15:14	1017.1MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 07:15:14-07:47:12	1016.7MB	▶	🔒
<input type="checkbox"/>	1	4	2023-07-10 07:47:12-08:19:12	1017.1MB	▶	🔒
			Total:243 Item(s)	1/3	GO	

Backup All Backup Back

Step 2: Select the file you want to backup and click  . Also, you can click  to backup all recorded videos.


In Common Backup interface, play, lock and unlock video are supported. Click  to play and  to lock. Once the video is locked, the whole file where the video located won't be overwritten.

Step 3: Select the format to be exported, which includes MP4, AVI and PS format and then click "Backup" to export selected files.

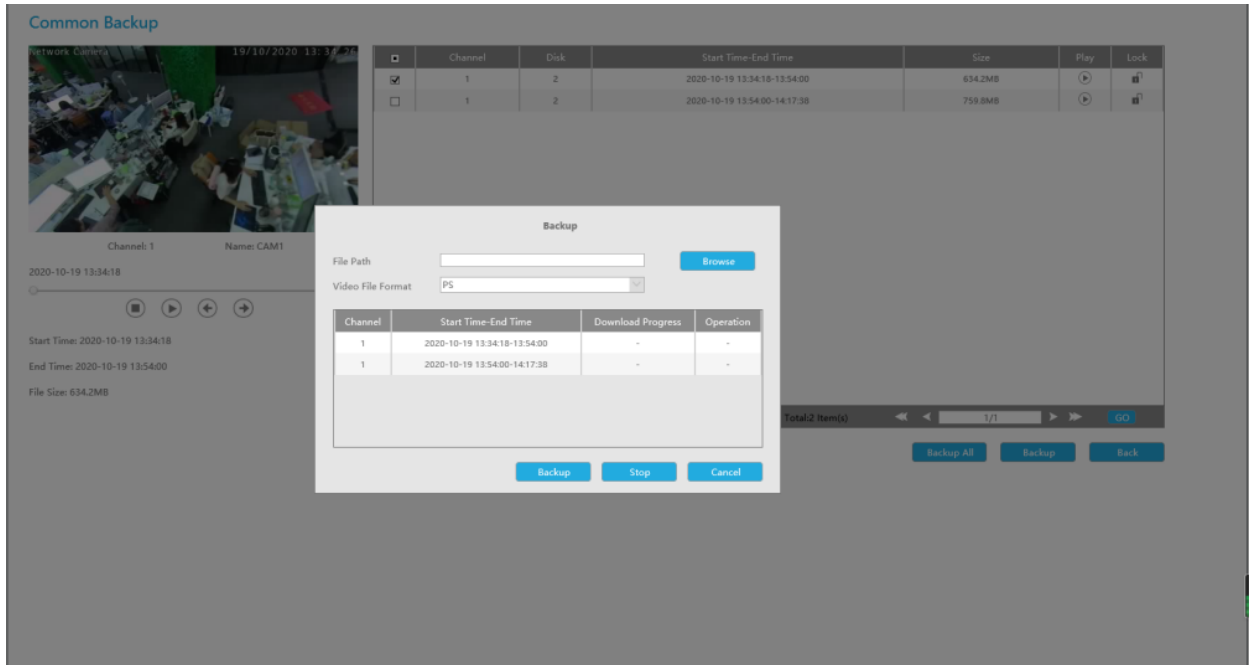

3.4.2 Event Backup

Support to search out and back up picture and video according to event type. The event type includes Motion Detection, Alarm Input, VCA and Smart Analysis.

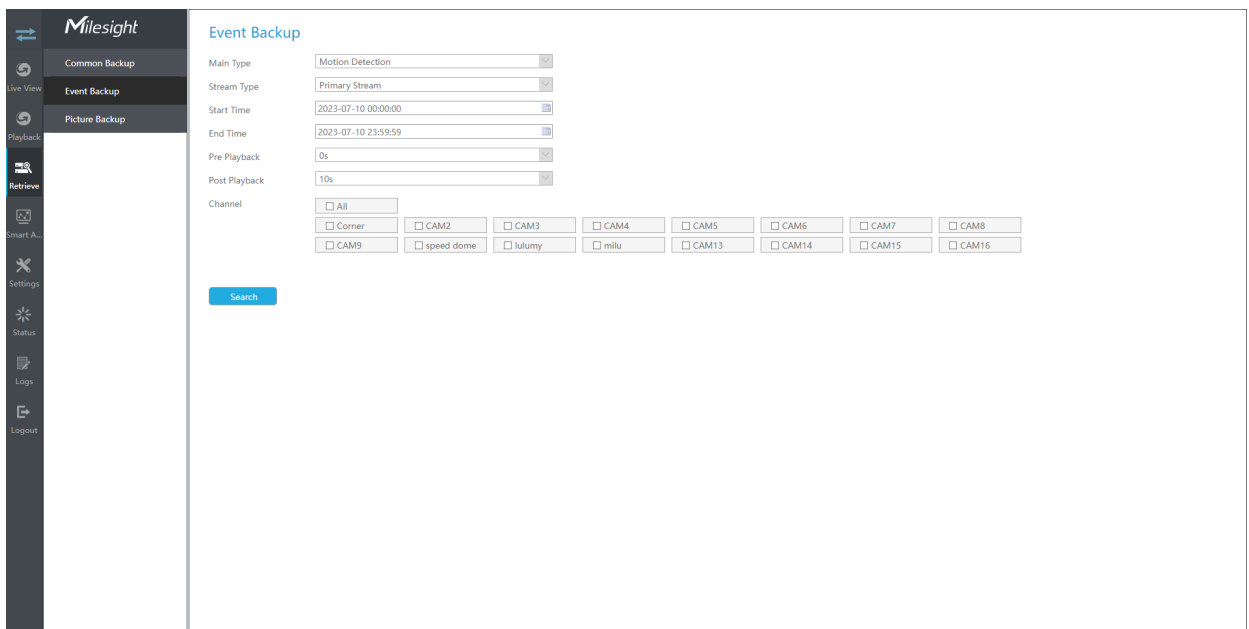

In particular, the Detection Object option is available in the Event Backup interface only if the Main Type is VCA and the Sub Type is one of several VCA events. You can search

and back up the results that meet the corresponding conditions according to the selected Detection Object. The Detection Object has three options: All, Human and Vehicle.

The VCA events which support the human/vehicle detection object function are:

- Region Entrance
- Region Exiting
- Advanced Motion Detection
- Line Crossing
- Loitering

Event Backup

Main Type: VCA

Sub Type: All

Detection Object: All (highlighted with a red arrow)

Stream Type: Human

Start Time: 2023-07-10 00:00:00

End Time: 2023-07-10 23:59:59

Pre Playback: 0s

Post Playback: 10s

Channel:

<input checked="" type="checkbox"/> All	<input checked="" type="checkbox"/> Corner	<input checked="" type="checkbox"/> CAM2	<input checked="" type="checkbox"/> CAM3	<input checked="" type="checkbox"/> CAM4	<input checked="" type="checkbox"/> CAM5	<input checked="" type="checkbox"/> CAM6	<input checked="" type="checkbox"/> CAM7	<input checked="" type="checkbox"/> CAM8
<input checked="" type="checkbox"/> CAM9	<input checked="" type="checkbox"/> speed dome	<input checked="" type="checkbox"/> lulumy	<input checked="" type="checkbox"/> milu	<input checked="" type="checkbox"/> CAM13	<input checked="" type="checkbox"/> CAM14	<input checked="" type="checkbox"/> CAM15	<input checked="" type="checkbox"/> CAM16	

Step 1: Set the search condition and click "Search" button to search video.

Event Backup

Main Type: Motion Detection

Stream Type: Primary Stream

Start Time: 2023-07-10 00:00:00

End Time: 2023-07-10 23:59:59

Pre Playback: 0s

Post Playback: 10s

Channel:


<input checked="" type="checkbox"/> All	<input checked="" type="checkbox"/> Corner	<input checked="" type="checkbox"/> CAM2	<input checked="" type="checkbox"/> CAM3	<input checked="" type="checkbox"/> CAM4	<input checked="" type="checkbox"/> CAM5	<input checked="" type="checkbox"/> CAM6	<input checked="" type="checkbox"/> CAM7	<input checked="" type="checkbox"/> CAM8
<input checked="" type="checkbox"/> CAM9	<input checked="" type="checkbox"/> speed dome	<input checked="" type="checkbox"/> lulumy	<input checked="" type="checkbox"/> milu	<input checked="" type="checkbox"/> CAM13	<input checked="" type="checkbox"/> CAM14	<input checked="" type="checkbox"/> CAM15	<input checked="" type="checkbox"/> CAM16	

The search result can be shown as a list.

Event Backup

Source	Channel	Disk	Event Duration Time	Play
CH1	1	26	2022-04-06 02:22:45-02:22:55	▶
CH1	1	26	2022-04-06 02:23:20-02:23:30	▶
CH1	1	26	2022-04-06 02:23:35-02:23:45	▶
CH1	1	26	2022-04-06 02:23:59-02:24:09	▶
CH1	1	26	2022-04-06 02:24:26-02:24:36	▶
CH1	1	26	2022-04-06 02:24:45-02:24:55	▶
CH1	1	26	2022-04-06 02:25:01-02:25:11	▶
CH1	1	26	2022-04-06 02:26:43-02:26:53	▶
CH1	1	26	2022-04-06 02:28:46-02:28:56	▶
CH1	1	26	2022-04-06 02:29:20-02:29:30	▶
CH1	1	26	2022-04-06 02:29:36-02:29:46	▶
CH1	1	26	2022-04-06 02:30:00-02:30:10	▶
CH1	1	26	2022-04-06 02:30:46-02:30:56	▶
CH1	1	26	2022-04-06 02:31:02-02:31:12	▶
CH1	1	26	2022-04-06 02:32:45-02:32:54	▶
CH1	1	26	2022-04-06 02:34:51-02:35:01	▶


Step 2: Select the file you want to back up and click "Backup". Also, you can click "Backup All" to backup all recorded videos.

In Event Backup interface, you can click  to play the video.

Event Backup


Source	Channel	Disk	Event Duration Time	Play
CH1	1	26	2022-04-06 02:22:45-02:22:55	▶
CH1	1	26	2022-04-06 02:23:20-02:23:30	▶
CH1	1	26	2022-04-06 02:23:35-02:23:45	▶
CH1	1	26	2022-04-06 02:23:59-02:24:09	▶
CH1	1	26	2022-04-06 02:24:26-02:24:36	▶
CH1	1	26	2022-04-06 02:24:45-02:24:55	▶
CH1	1	26	2022-04-06 02:25:01-02:25:11	▶
CH1	1	26	2022-04-06 02:26:43-02:26:53	▶
CH1	1	26	2022-04-06 02:28:46-02:28:56	▶
CH1	1	26	2022-04-06 02:29:20-02:29:30	▶
CH1	1	26	2022-04-06 02:29:36-02:29:46	▶
CH1	1	26	2022-04-06 02:30:00-02:30:10	▶
CH1	1	26	2022-04-06 02:30:46-02:30:56	▶
CH1	1	26	2022-04-06 02:31:02-02:31:12	▶
CH1	1	26	2022-04-06 02:32:45-02:32:54	▶
CH1	1	26	2022-04-06 02:34:51-02:35:01	▶

Step 3: Select the format to be exported, which includes MP4, AVI and PS format and then click "Backup" to export selected files.

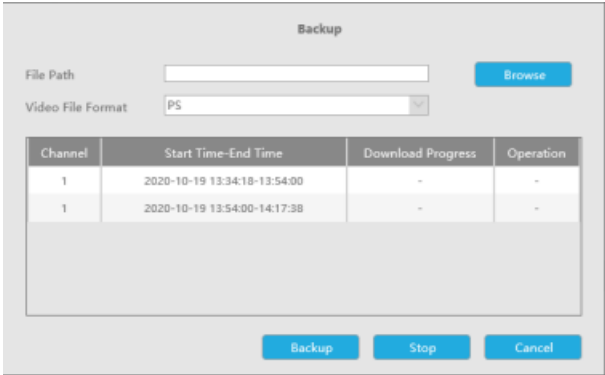

3.4.3 Picture Backup

Support to search out and back up picture according to picture type. The picture type includes All, Live View Snapshot, Playback Snapshot and Event Playback.

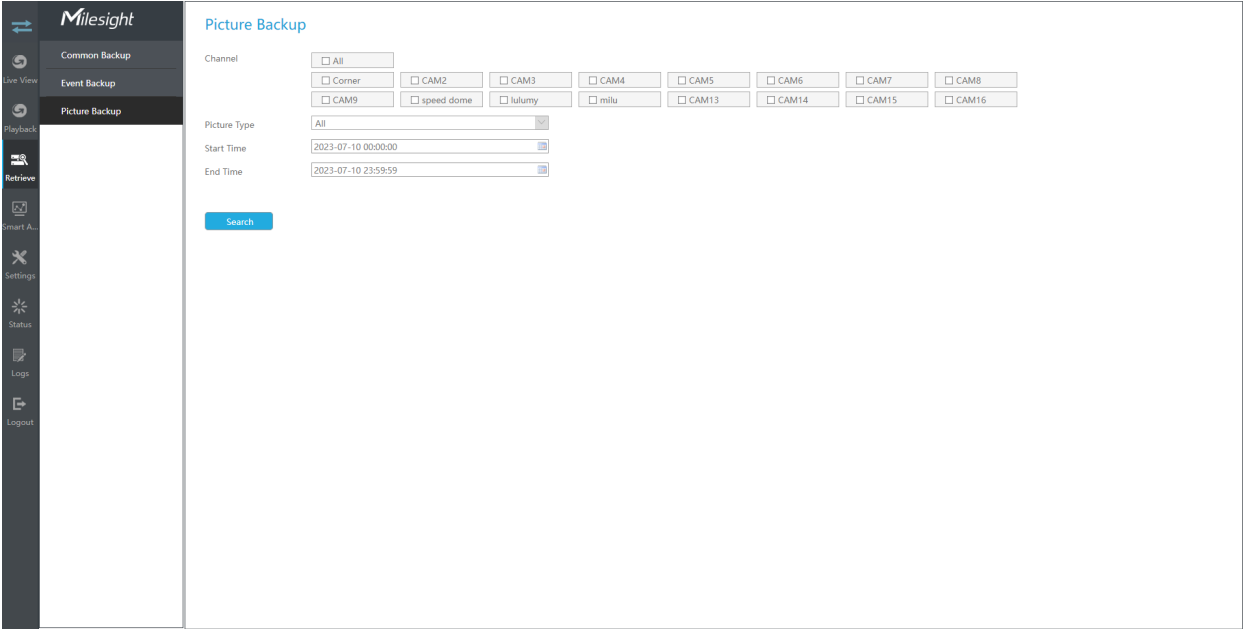

Step 1: Set the search condition and click "Search" button to search video.

Picture Backup

Channel

All

Corner CAM2 CAM3 CAM4 CAM5 CAM6 CAM7 CAM8

CAM9 speed dome lulumy milu CAM13 CAM14 CAM15 CAM16


Picture Type:

Start Time:

End Time:

Step 2: Select the file you want to back up and click . Also, you can click to back up all recorded videos.

Picture Backup

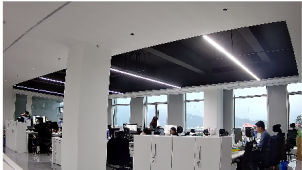

Channel: 1 Name: CAM1

Location: Disk Port26

Time: 2022-04-01 23:52:56

File Size: 75KB

Resolution: 1280*960

<input type="checkbox"/>	Channel	Disk	Time	Size
<input type="checkbox"/>	1	26	2022-04-01 23:52:56	75KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:06	46KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:16	82KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:26	85KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:36	79KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:46	78KB
<input type="checkbox"/>	1	26	2022-04-01 23:53:55	78KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:05	79KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:15	86KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:25	80KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:35	75KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:45	82KB
<input type="checkbox"/>	1	26	2022-04-01 23:54:55	86KB
<input type="checkbox"/>	1	26	2022-04-01 23:55:07	83KB
<input type="checkbox"/>	1	26	2022-04-01 23:55:17	78KB
<input type="checkbox"/>	1	26	2022-04-01 23:55:27	72KB

Total:8640 Item(s) 1/87


Step 3: Select the Snapshot Resolution which includes Auto, 704*576 and 640*360, and click "Backup" to export selected snapshots.

Backup

Snapshot Resolution:

3.5 Smart Analysis

You can get ANPR logs, Face Detection results, People Counting results and Heat Map results in the page, as well as Settings for ANPR, Face Detection, People Counting and Heat Map.

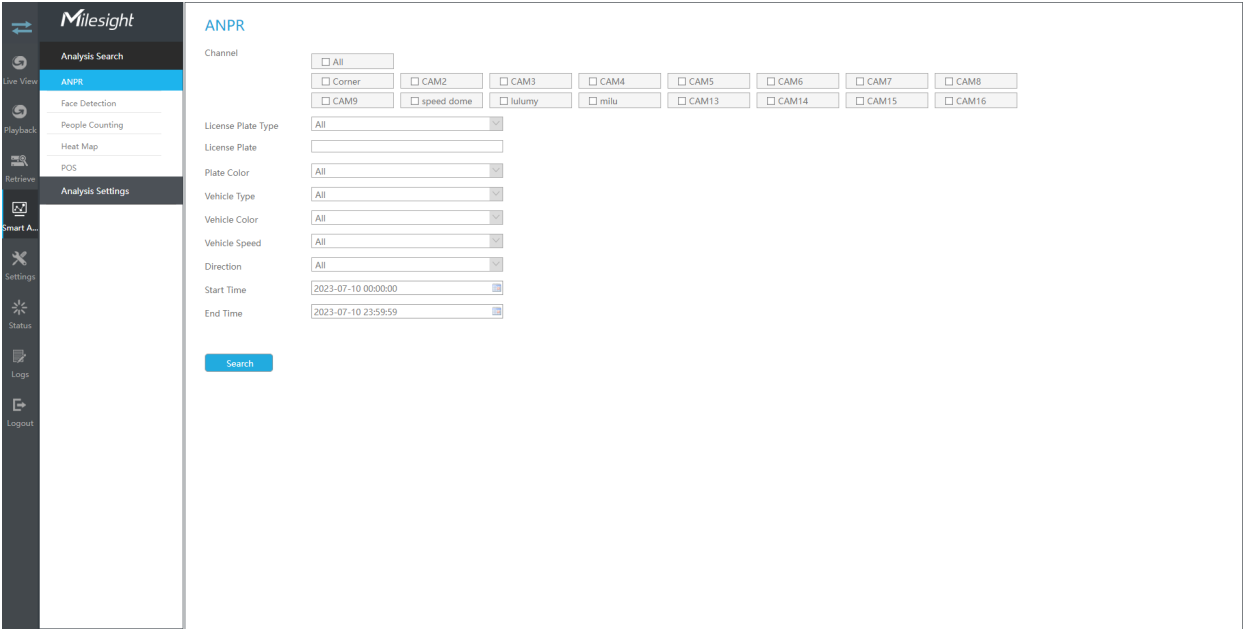

3.5.1 Analysis Search


3.5.1.1 ANPR

You can Search and Backup ANPR logs.

The screenshot shows the Misesight ANPR search interface. On the left is a sidebar with navigation options: Live View, Playback, Retrieve, Smart A..., Settings, Status, Logs, and Logout. The main content area is titled 'ANPR' and contains the following search filters:


- Channel:** A grid of checkboxes for All, Corner, CAM2, CAM3, CAM4, CAM5, CAM6, CAM7, CAM8, CAM9, speed dome, lulury, milu, CAM13, CAM14, CAM15, and CAM16.
- License Plate Type:** A dropdown menu currently set to 'All'.
- License Plate:** A text input field.
- Plate Color:** A dropdown menu currently set to 'All'.
- Vehicle Type:** A dropdown menu currently set to 'All'.
- Vehicle Color:** A dropdown menu currently set to 'All'.
- Vehicle Speed:** A dropdown menu currently set to 'All'.
- Direction:** A dropdown menu currently set to 'All'.
- Start Time:** A date and time input field set to '2023-07-10 00:00:00'.
- End Time:** A date and time input field set to '2023-07-10 23:59:59'.

A blue 'Search' button is located at the bottom of the filter section.

Input corresponded information and click search button  to search and you will get a whole ANPR logs list. License plate snapshot will be shown on the logs list while the complete image video and license plate information will be shown on the left of the page. The License Plate Type option is convenient for users to quickly filter the black list, white list and visitor according to the license plate types. Users can also filter ANPR results by Plate Color, Vehicle Type, Vehicle Color, Vehicle Brands, Vehicle Speed and Direction.

 **Note:**

1. Ensure that your NVR model is MS-NXXXX-XXT or MS-NXXXX-XXH.

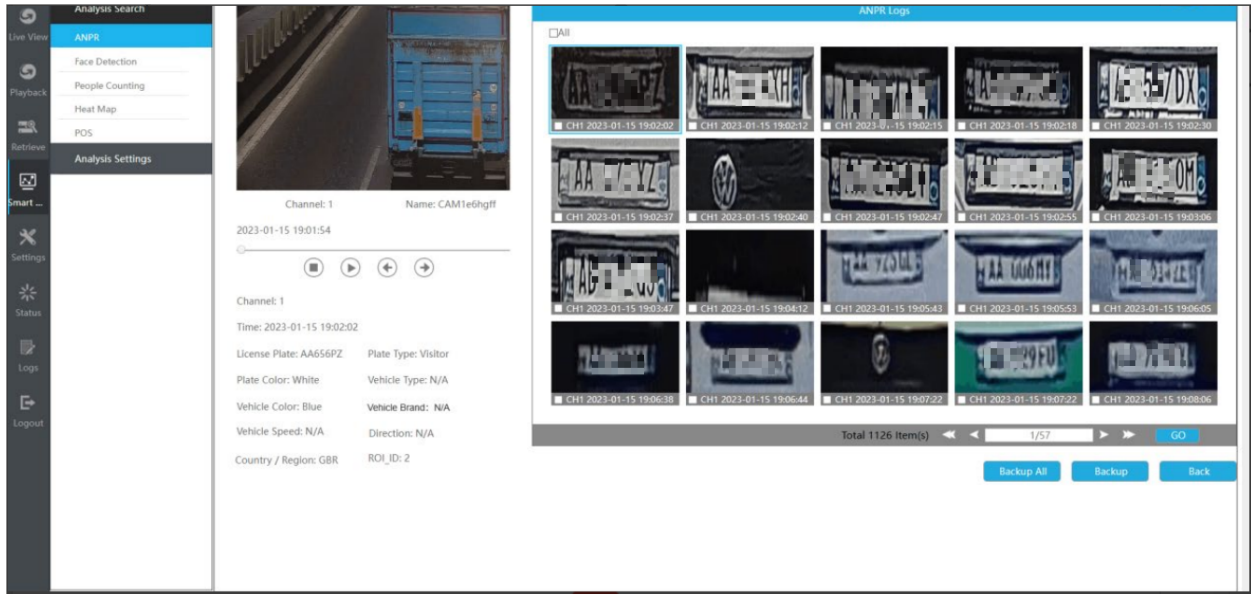

You can click  to play the video.




There are two methods to backup ANPR logs.

- Backup license plates you want.

Step1: Tick license plates you want to backup and click backup button .

Step2: Select the export file type, video stream type and video file format, then click export button.

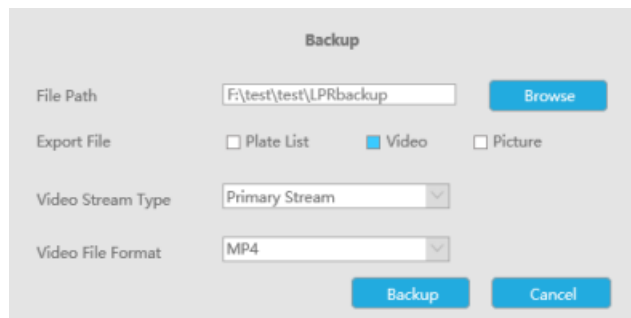


- Backup all.

Step1: Click backup all  button.

Step2: Select the export file type, video stream type and video file format, then click export button.

Then you will get corresponding file as selected export file type.

 Picture	12/19/2019 6:49 AM	File folder
 Plate List	12/19/2019 6:48 AM	File folder
 Video	12/19/2019 6:49 AM	File folder


3.5.1.2 Face Detection

You can Search and Backup the results of Face Detection.

The screenshot shows the 'Face Detection' configuration page in the Milesight NVR web interface. On the left is a dark sidebar with navigation icons and labels: Live View, Playback, Retrieve, Smart A..., Settings, Status, Logs, and Logout. The main content area is titled 'Face Detection' and contains the following settings:


- Channel:** A row of checkboxes for 'All', 'CAM1', 'CAM2', 'CAM3', 'CAM4', 'CAM5', 'CAM6', 'CAM7', 'CAM8', 'CAM9', 'speed dome', 'lulumu', 'milu', 'CAM13', 'CAM14', 'CAM15', and 'CAM16'.
- Age:** A dropdown menu currently set to 'All'.
- Gender:** A dropdown menu currently set to 'All'.
- Glasses:** A dropdown menu currently set to 'All'.
- Mask:** A dropdown menu currently set to 'All'.
- Cap:** A dropdown menu currently set to 'All'.
- Start Time:** A date and time picker set to '2023-07-10 00:00:00'.
- End Time:** A date and time picker set to '2023-07-10 23:59:59'.

A blue 'Search' button is positioned below the time filters.

Input corresponded information and click search button  to search and you will get the results of Face Detection. Face snapshots will be shown on the results list while the complete image video and face attribute information will be shown on the left of the page. Users can filter Face Detection results by Face Attributes including Age, Gender, Glasses, Mask and Cap.

Note:

- Make sure your camera is AI Series and version is V4x.7.0.79-r25 or above.
- Make sure your NVR model is MS-Nxxxx-xxT/H.

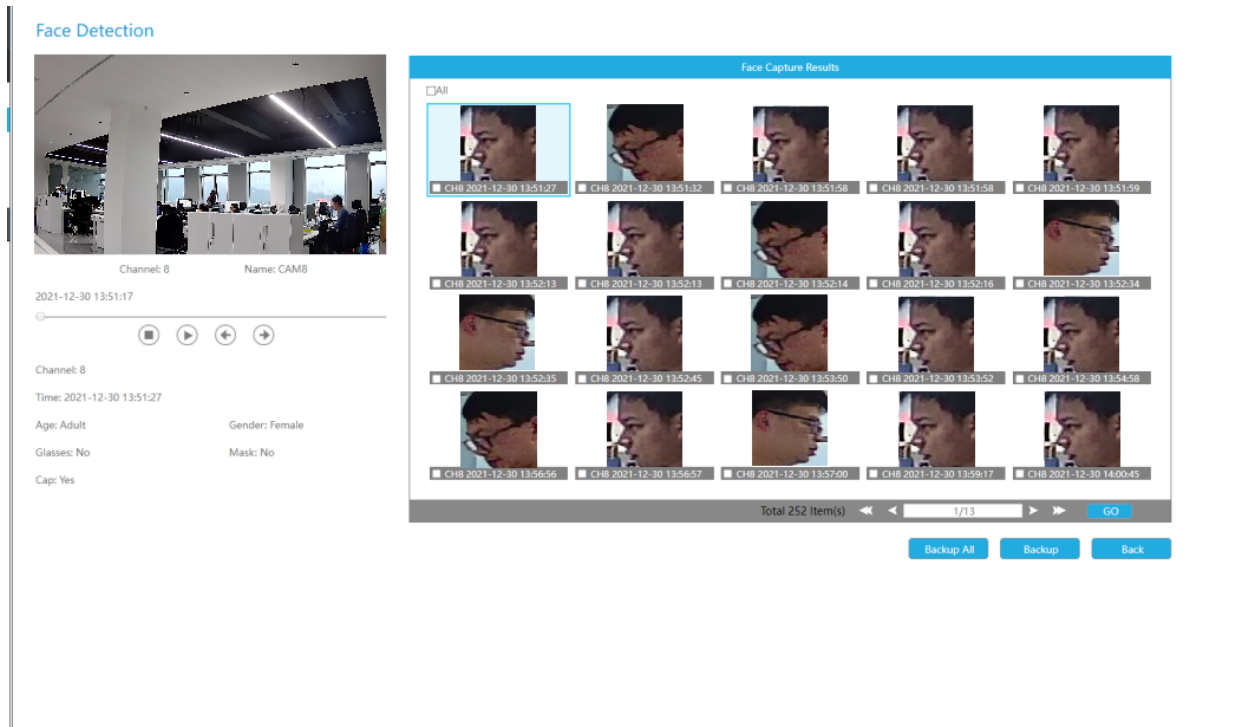

You can click  to play the video.




There are two methods to backup Face Detection results.

- Backup Face Detection logs you want.

Step1: Tick the face detection results you want to backup and click backup button



Step2: Select the export file type, video stream type and video file format, then click export button.

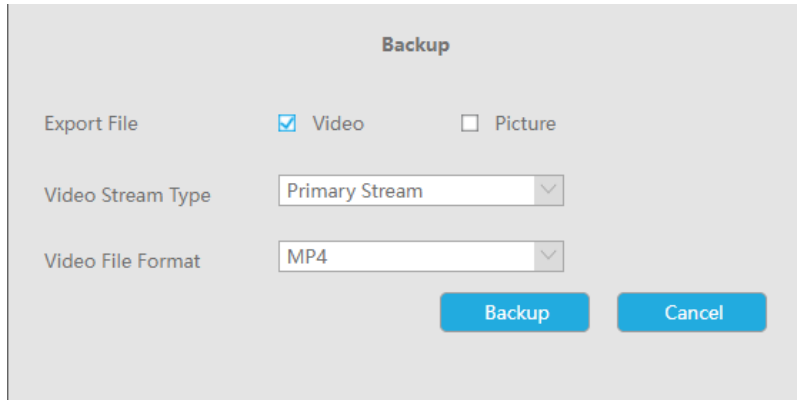

The image shows a 'Backup' dialog box with a light gray background. At the top center, the title 'Backup' is displayed. Below the title, there are three rows of settings. The first row is labeled 'Export File' and contains two radio buttons: 'Video' (which is checked with a blue square) and 'Picture' (which is unchecked). The second row is labeled 'Video Stream Type' and features a dropdown menu with 'Primary Stream' selected. The third row is labeled 'Video File Format' and features a dropdown menu with 'MP4' selected. At the bottom right of the dialog, there are two blue buttons: 'Backup' and 'Cancel'.

- Backup all.

Step1: Click backup all  button;

Step2: Select the export file type, video stream type and video file format, then click export button.

Then you will get corresponding file as selected export file type.

3.5.1.3 People Counting

You can Search and Backup the results of People Counting.

The screenshot shows the Milesight web interface for the 'People Counting' search function. The interface is divided into a sidebar and a main content area. The sidebar on the left contains navigation options: 'Live View', 'Playback', 'Analysis Search', 'Heat Map', 'POS', 'Analysis Settings', 'Smart A...', 'Settings', 'Status', 'Logs', and 'Logout'. The main content area is titled 'People Counting' and contains the following search filters:

- Search Type:** A dropdown menu set to 'People Counting by Camera'.
- Channel:** A grid of checkboxes for 'All', 'Corner', 'CAM2', 'CAM3', 'CAM4', 'CAM5', 'CAM6', 'CAM7', 'CAM8', 'CAM9', 'speed dome', 'lulumu', 'milu', 'CAM13', 'CAM14', 'CAM15', and 'CAM16'.
- Line:** A grid of checkboxes for 'All', 'Total', 'Line 1', 'Line 2', 'Line 3', and 'Line 4'.
- Report Type:** A dropdown menu set to 'Daily Report'.
- Statistic Type:** A dropdown menu set to 'People Entered'.
- Start Time:** A date and time input field set to '2023-07-10 00:00:00'.

A blue 'Search' button is located at the bottom of the search filters.

Step1: Entering search conditions.

Search Type: Select the search type first, including People Counting by Camera, People Counting by Group and Regional People Counting.

(1) Select “People Counting by Camera”:

Channel: Check the corresponding channels. It supports simultaneous search of multi-channel reports.

Line: Check the detection lines. It supports simultaneous search of multi-channel reports.

Report Type: Daily Report, Weekly Report, Monthly Report and Annual Report are available.

Statistic Type: People Entered, People Exited and Sum are available.

Start Time: Input the time from which you want to Search.

(2) Select “People Counting by Group”:

Group: Select the groups.

Report Type: Daily Report, Weekly Report and Monthly Report are available.

Statistic Type: People Entered, People Exited and Sum are available.

Start Time: Input the time from which you want to Search.

(3) Select “Regional People Counting”:


Channel: Check the corresponding channels. It supports simultaneous search of multi-channel reports.

Region: Check the detection regions. It supports simultaneous search of multi-region reports.


Length of Stay: Choose the length of stay.


Report Type: Daily Report, Weekly Report and Monthly Report are available.

Start Time: Input the time from which you want to Search.

Step2: Click  to obtain the corresponding result. There are two ways to show the results of People Counting: Line Chart and Bar Chart.

And then you can click  to export it.

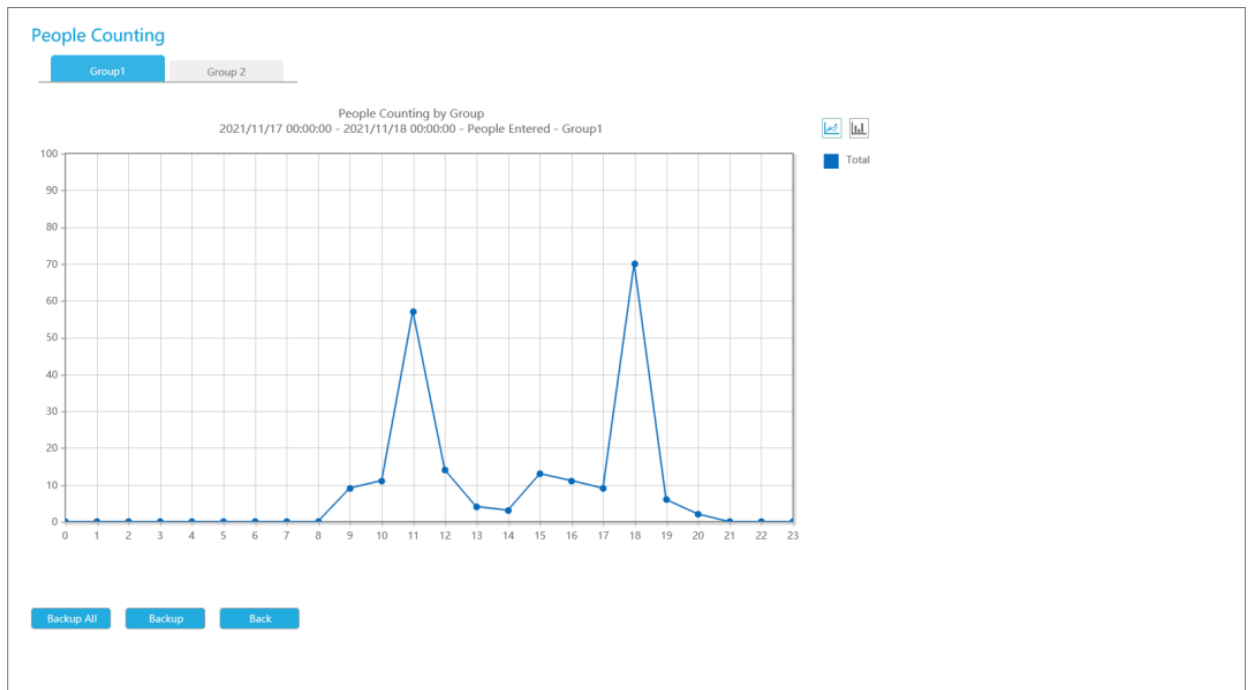

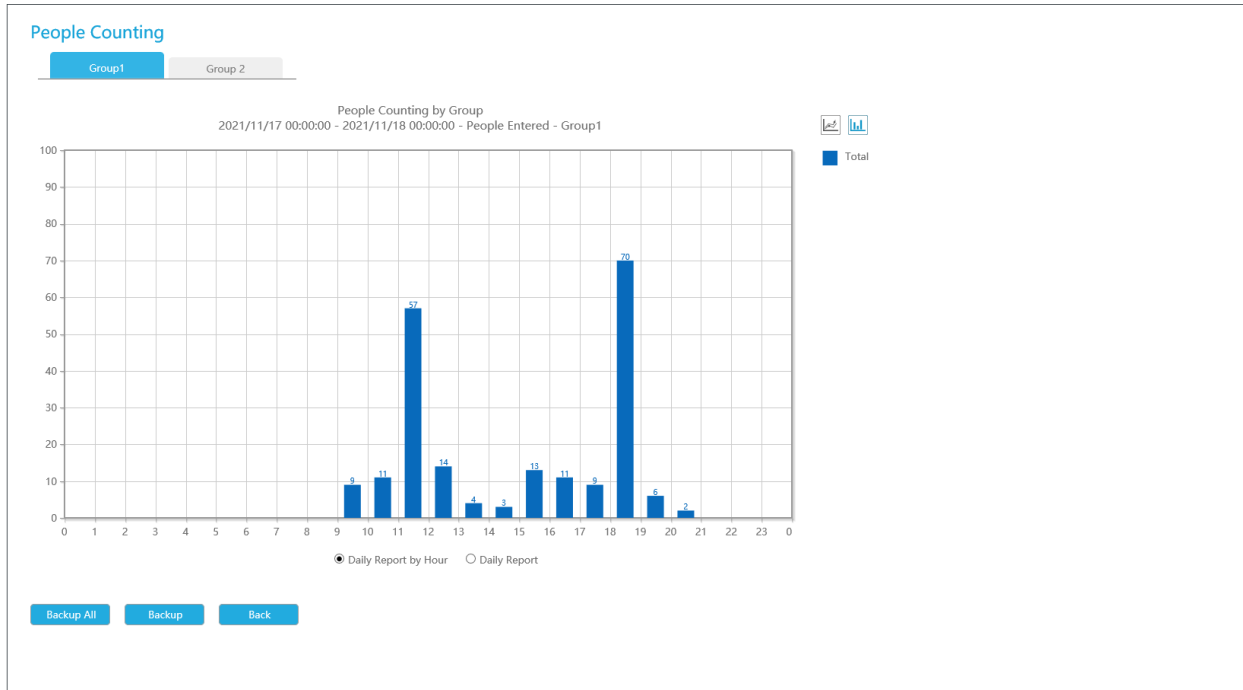


Step3: You can backup the results of People Counting. For People Counting by Group, you can back up the results in two ways:

(1) Backup the group you want.

Step1: Choose the group you want to backup and click backup button ;

Step2: Select the file format, and then click export button.

(2) Backup all.


Step1: Click backup all button ;

Step2: Select the file format, and then click export button.

Then you will get corresponding file.

3.5.1.4 Heat Map

You can Search and Export Heat Map results.

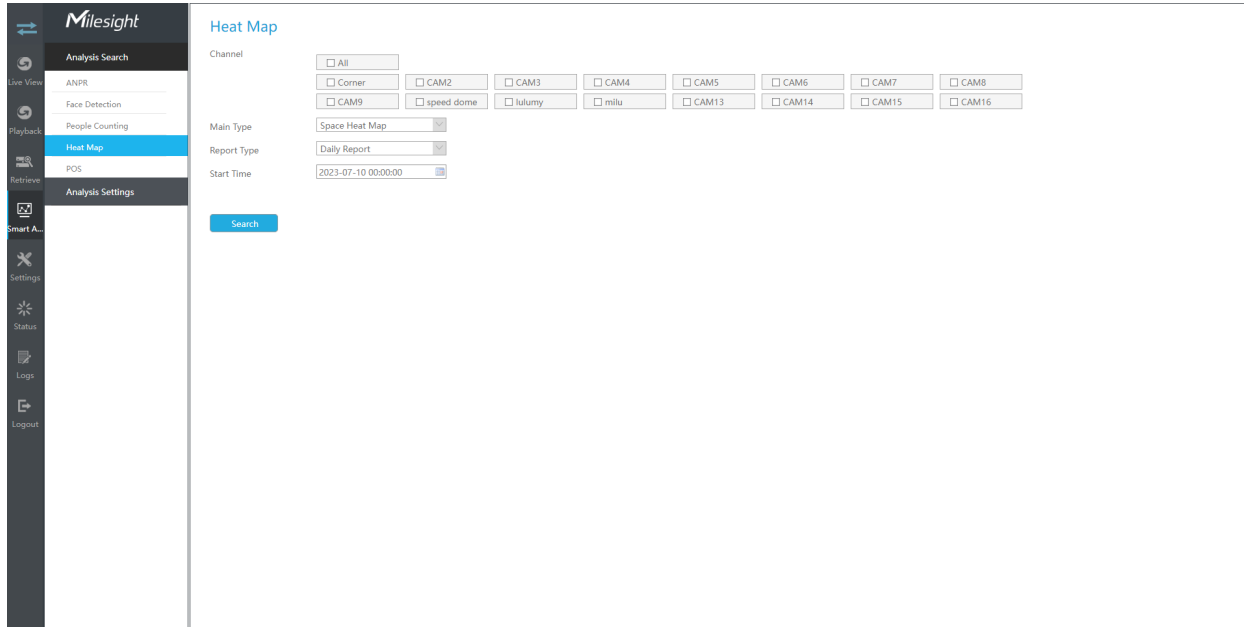


Step1: Entering search conditions.


Step2: Check the corresponding channels. It supports simultaneous search of multi-channel reports.

Step3: Select the Main Type. Space Heat Map and Time Heat Map are available.

(1) Space Heat Map: Space Heat Map will be presented as a picture with different colors. Different colors represent different heat values. Red represents the highest and blue represents the lowest.

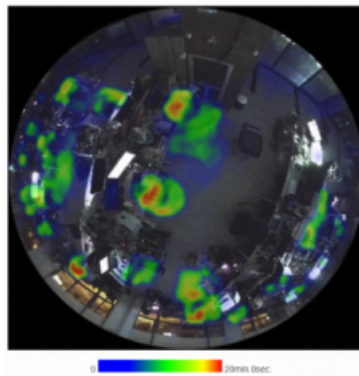

(2) Time Heat Map: Time heat map will be presented as a line chart to show the heat at different times.

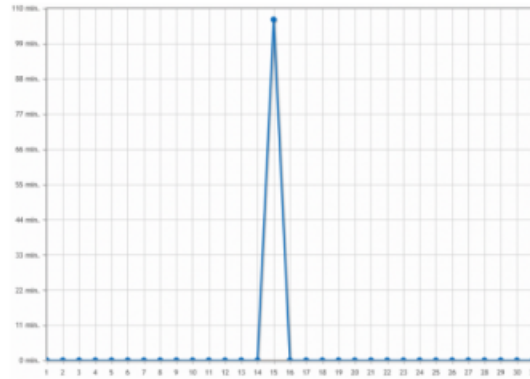

Step4: Select the Report Type. Daily Report, Weekly Report, Monthly Report and Annual Report are available.

Step5: Input the time from which you want to Search.

Step6: Click to obtain the corresponding result and then you can click to export it.

3.5.1.5 POS

You can Search and Backup the results of POS.

The screenshot displays the Milesight web interface for POS search. On the left is a dark sidebar with the Milesight logo and navigation icons. The main content area is titled 'POS' and includes the following fields:

- POS No.:** A dropdown menu set to 'All' and a grid of checkboxes for POS 1 through POS 16.
- POS Content:** A text input field.
- Start Time:** A date and time picker showing '2023-07-10 00:00:00'.
- End Time:** A date and time picker showing '2023-07-10 23:59:59'.
- Search:** A blue button to execute the search.


Step1: Entering search conditions.


POS No.: Select the POS number first.


POS Content: Enter the POS information keywords you want to search.

Start Time: Input the start time from which you want to search.

End Time: Input the end time from which you want to search.

Step2: Click  to obtain the corresponding result.

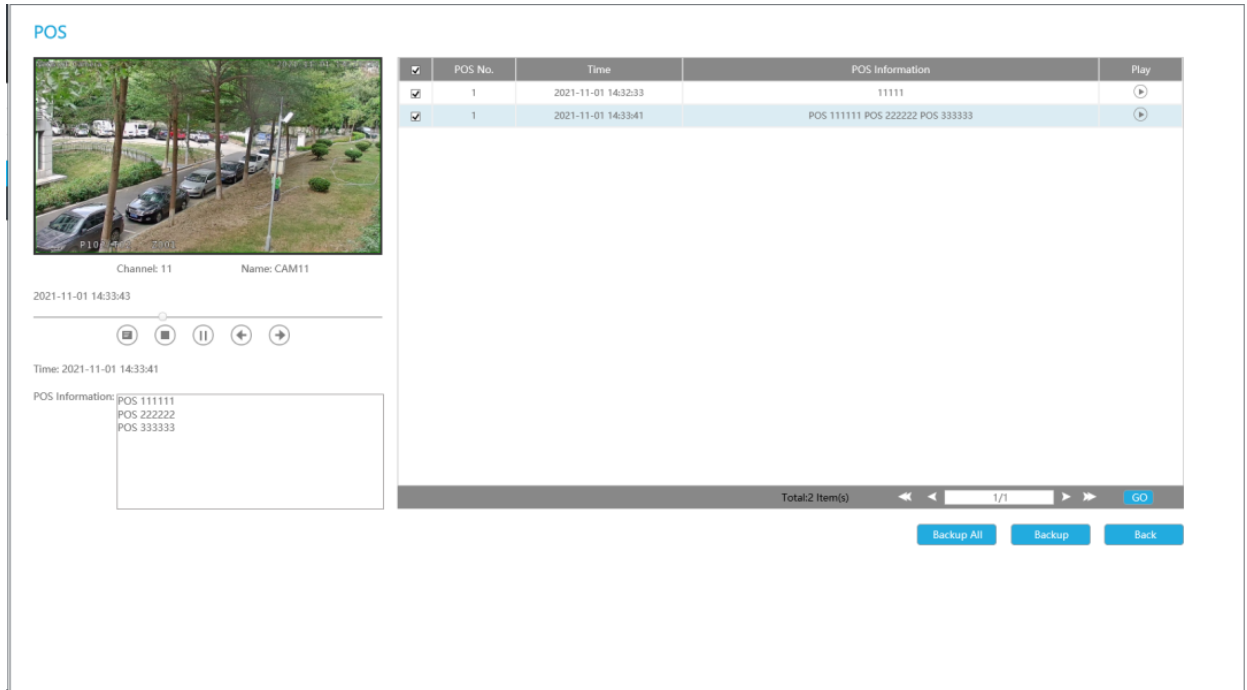

You can click  to play the video.



There are two methods to backup POS results.

(1) Backup the POS information you want.

Step1: Tick the POS information you want to backup and click backup button



Step2: Select the export file type and video file format, then click export button.

(2) Backup all.

Step1: Click backup all  button.

Step2: Select the export file type and video file format, then click export button.

Then you will get corresponding file as selected export file type.

3.5.2 Analysis Settings

3.5.2.1 ANPR

ANPR settings consist of Settings, List Management, Black List Mode, White List Mode and Visitor Mode. Here are some notes for using ANPR function.

Note:

- Insert available HDD to NVR.
- Upgrade your device to corresponded firmware version.
 - Camera: V4X.7.0.72-r16 or above
 - NVR: V7X.9.0.7-r7 or above
- Ensure both camera and NVR support LPR/ANPR function. Up to 16 ANPR channels are supported for Milesight NVR.
- Ensure that NVR can get license plate information. Please set TCP which is the default mode as Post Type. It can be set in Camera web page Settings -> LPR -> General Settings interface.

LPR Message Post Settings
▼

Enable LPR Message Post

Post Type HTTP TCP RTSP

Camera LPR Port

Settings

Do as following 5 steps to enable ANPR function. Camera will start to detect license plate and NVR will start to receive license plate information once these steps are done.

The screenshot shows the Milesight NVR web interface. The left sidebar contains navigation options like 'Analysis Search', 'ANPR', 'People Counting', and 'Heat Map'. The main content area is titled 'ANPR' and has tabs for 'Settings', 'List Management', 'Black List Mode', 'White List Mode', and 'Visitor List Mode'. The 'Settings' tab is active, showing various configuration options:

- Channel Event:** Channel (12), ANPR (checked).
- Image Settings:** LPR Night Mode (Disable).
- Region Settings:** A camera view with a red bounding box around a license plate. Below it, a table lists regions:

ID	Name	Edit	Delete
1	ROI_1	Edit	Delete
- Event Settings:** License (7325220EC786C181838A37743F18EA00), License Status (Valid), Processing Resolution (1280*720), Effective Time (Edit), and Detection Settings (Edit).

Buttons for 'Add', 'Clear', 'Clear All', and 'Save' are visible at the bottom of the settings area.


Step 1: Select a channel and enable ANPR function;

License: Generated by camera's information

License Status: Show present license status, including Valid, Invalid, Expired, Inactivated

Step 2: Select processing resolution. The further distance you detect, the higher resolution is needed. 1280*720 by default;


Step 3: Enable LPR Night Mode, then you can set LPR Night Mode Effective Time. There are two options available: Customize and Auto. Auto option supports automatic switch between day and night.

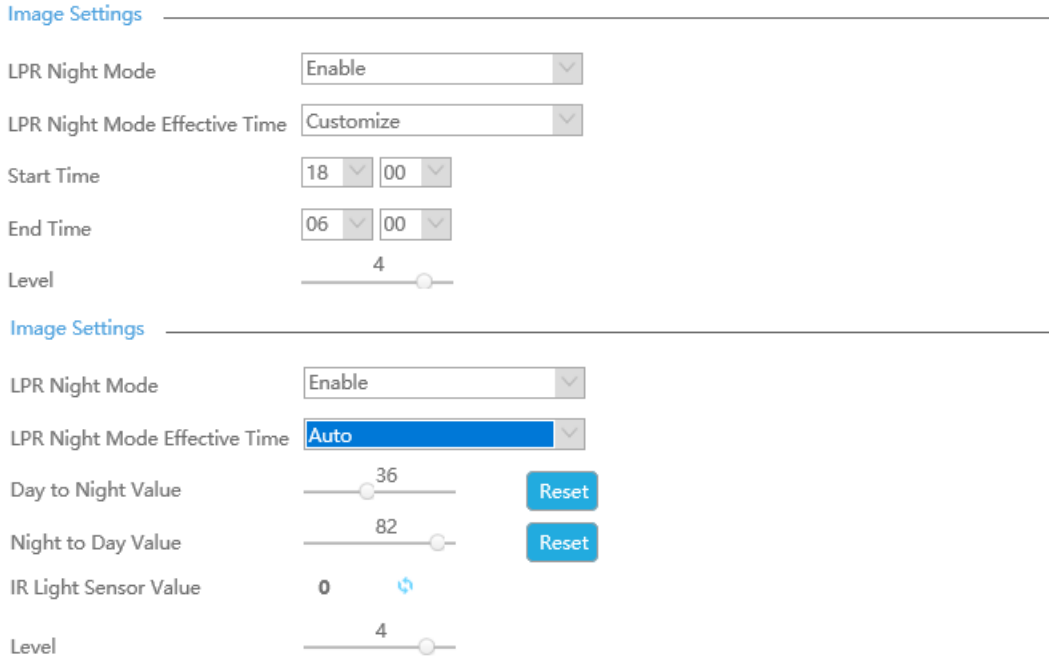

Note: Make sure your camera's version is 4X.7.0.77 or above so that the Auto option for LPR Night Mode Effective Time is available.

Step 4: Set ANPR function effective time;

Step 5: Set detection parameters including Detection Trigger, Confidence Level, License Plate Format, Repeat Plate Checktime and Features Identification;

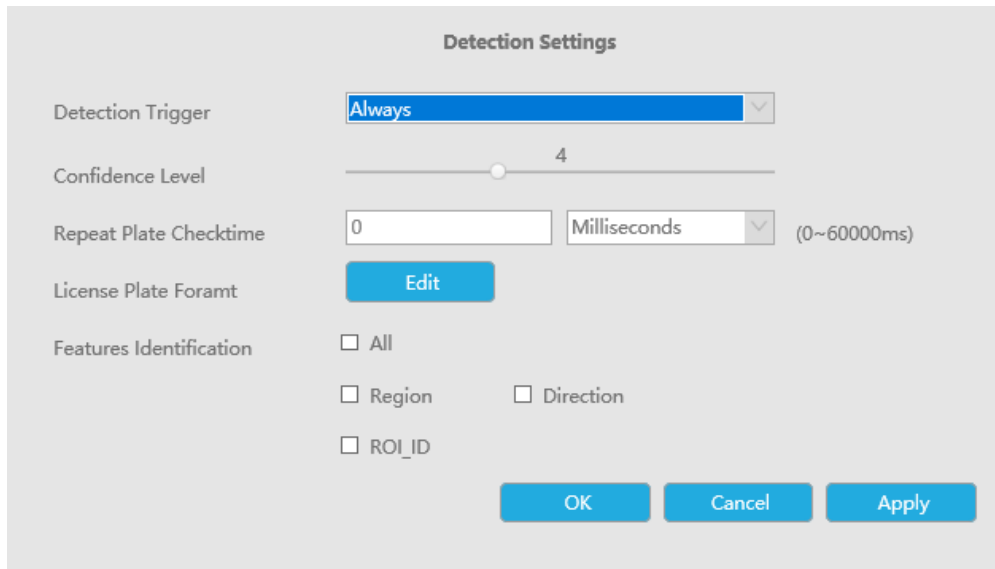

Detection Trigger: Always and Camera Alarm Input are available. It will only detect information when alarm input is triggered if you select Camera Alarm Input.

Confidence Level: You can set the Confidence Level, and the higher the level, the more accurate the identification is.

Repeat Plate Checktime: The same license plate information won't be received on NVR within the time you set.

License Plate Format: Set corresponding License Plate Format to screen out license plates conforming to the count and format you set to improve recognition accuracy.

License Plate Foramt

License Plate Character Count

License Plate Foramt

Add

ID	License Plate Character Count	License Plate Foramt	Enable	Edit	Delete
0	All	*	<input type="checkbox"/>	-	-
1	7	AAA1111	<input checked="" type="checkbox"/>		

Push Correct Character Count Results Only

Format Example : AA111*

A - Letters Only

1 - Numbers Only

* - Unrestricted Type

OK
Cancel
Apply

- Click to add a License Plate Format.

License Plate Character Count

License Plate Foramt

Add

- Select License Plate Character Count, which is 1-10.

Note:

1. Make sure your camera Version is 8.0.3-LPRn-r3 or above.
2. Make sure that the camera's model is Intelligent Traffic Series.
 - Fill in License Plate Format you want to detect. A stands for Letters, 1 stands for numbers and * stands for unrestricted type.

Push Correct Character Count Results Only:

If the count of the detected license doesn't match your configuration, it will push correct character count results by completing or reducing characters automatically.


Note:

1. Make sure your camera Version is 4X.7.0.74 or above.
2. You can add 8 rules at most.

Features Identification: The selected features identification will be shown in ANPR logs interface.


Step 6: Set the detected ROI region which can be up to 4 regions. License plate will only be detected in the ROI regions.

Support that LPR detection areas can be drawn as an irregular quadrilateral.

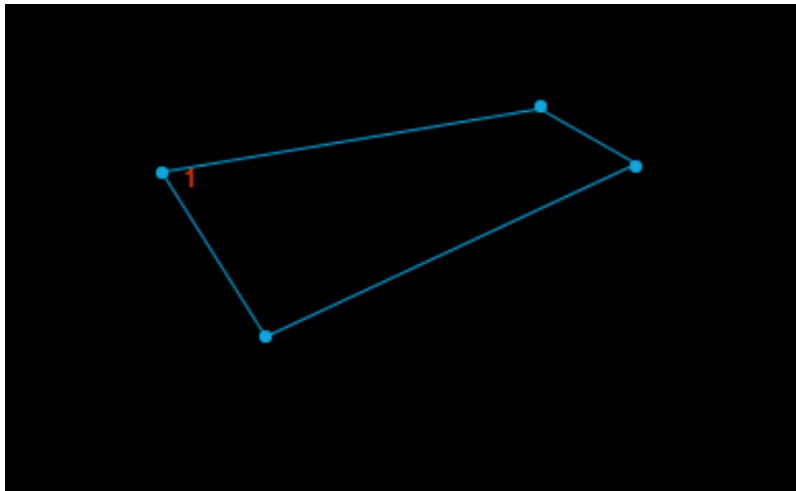**Note:**

1. Make sure your camera is Version 8.0.3-LPRn-r3 or above.
2. Make sure that the camera's model is Intelligent Traffic Series.

Region Settings

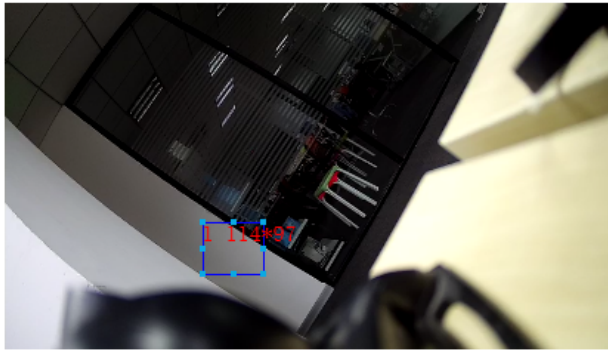


Note: Please draw the screen for settings!

ID	Name	Edit	Delete
1	ROI_1		

List Management

Make a license plate list for your own NVR ANPR system. You can upload license plates and set them with different license type here. 10000 plates can be added at most.

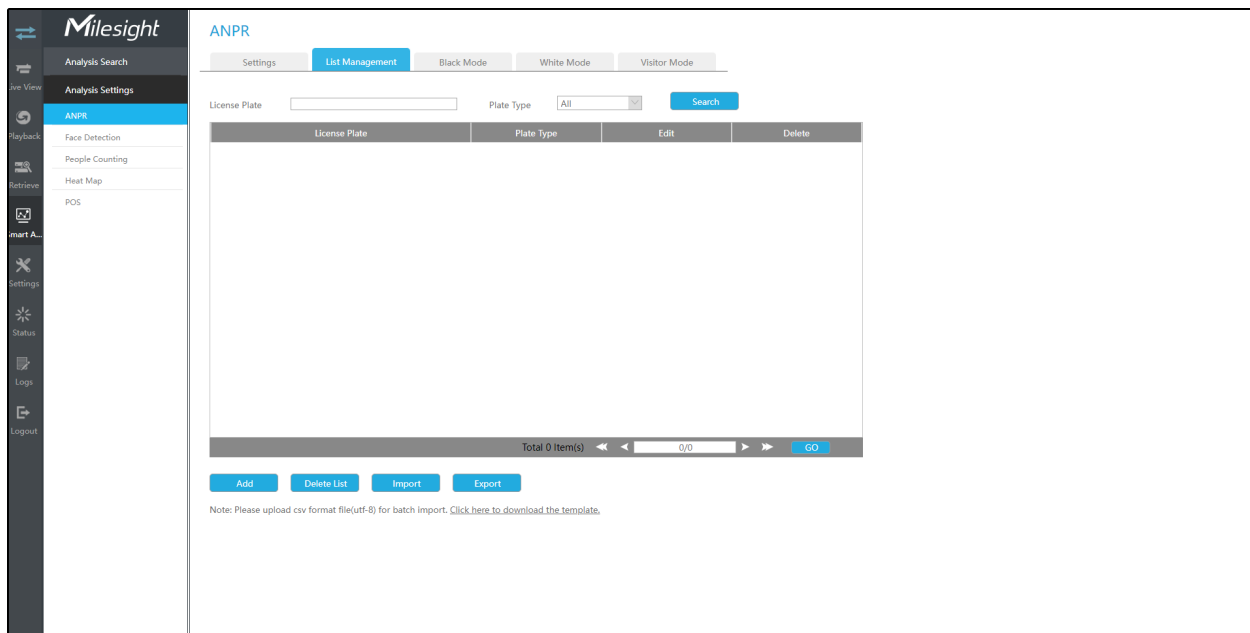


There are two methods to add license plates:

- Add one by one.

Step 1: Click Add button  ;

Step 2: Input the license plate and select license type;

Step 3: Click OK and then the license plate will be added into the list;

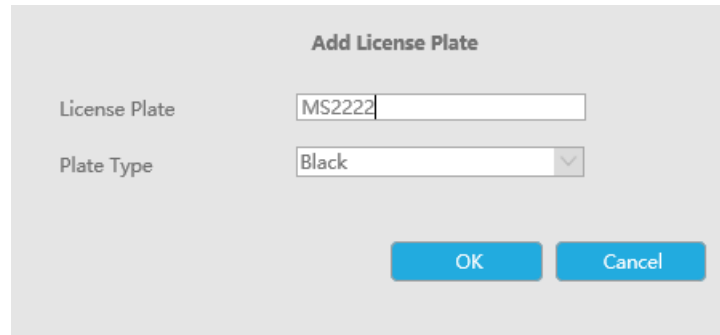

The dialog box titled "Add License Plate" contains two input fields. The "License Plate" field has the text "MS2222" entered. The "Plate Type" field is a dropdown menu with "Black" selected. At the bottom right, there are two buttons: "OK" and "Cancel".

- Batch adding by importing template.

Step 1: Click [Click here to download the template.](#) , select USB device folder and click OK to download Template;

Step 2: Input all license type and license plate number as Template shows;

	A	B
1	Type	Plate
2	White	2008ZGZ
3	Black	34AB1234
4		

Step 3: Click Import button  , select the file and click OK to add all license plates into list.


Black List Mode/White List Mode/Visitor Mode

We provide you three modes for better event management, which is based on two license types.

Black List Mode: Manage event for license plates in black list.

White List Mode: Manage event for license plates in white list.

Visitor Mode: Manage event for those license plates do not have license type.

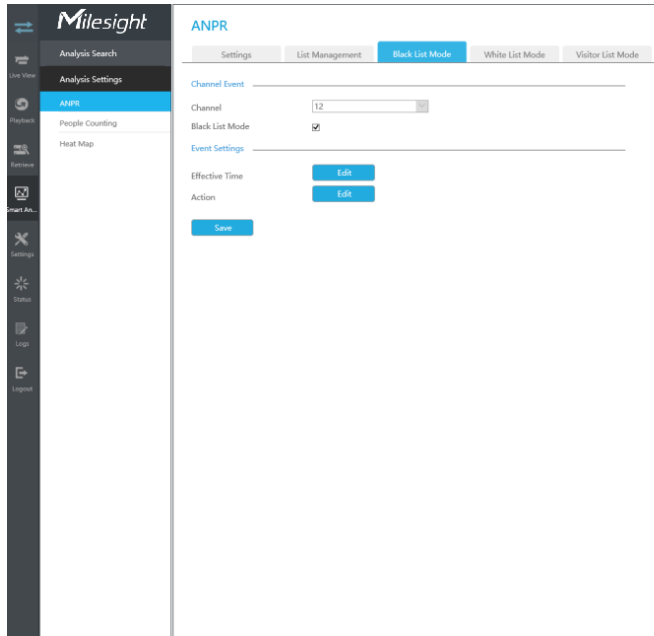

Step 1: Enable Black List Mode/White List Mode/Visitor Mode as your demand;

Step 2: Set effective time which means Mode works during that;

Step 3: Set action including Audible Warning, Email Linkage, Event Popup, PTZ Action, Alarm Output, White LED and Trigger Channels Record.


Audible Warning: NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval: The effective interval between two actions when event triggered.

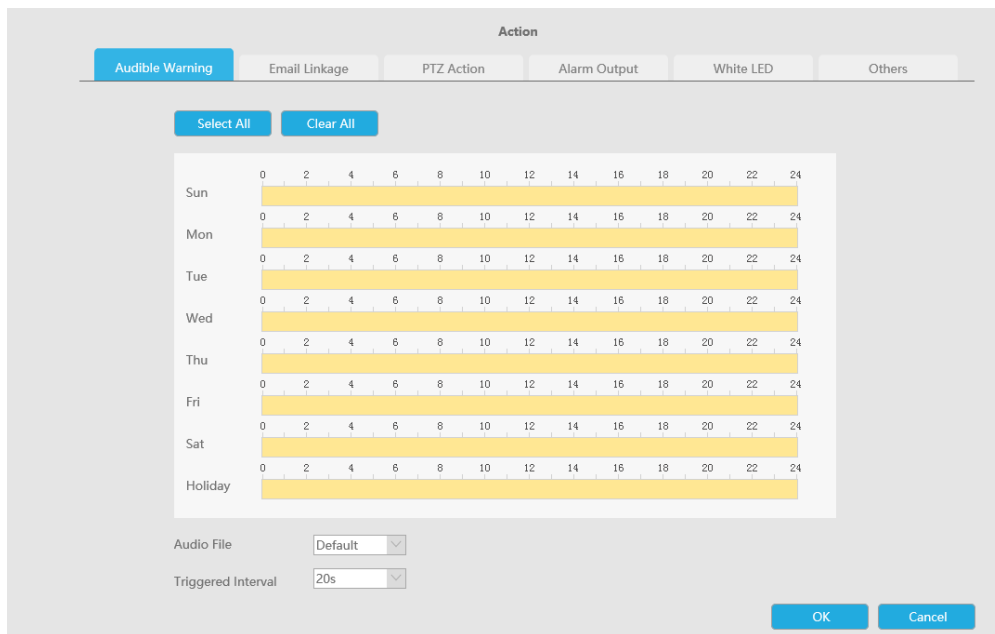


Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

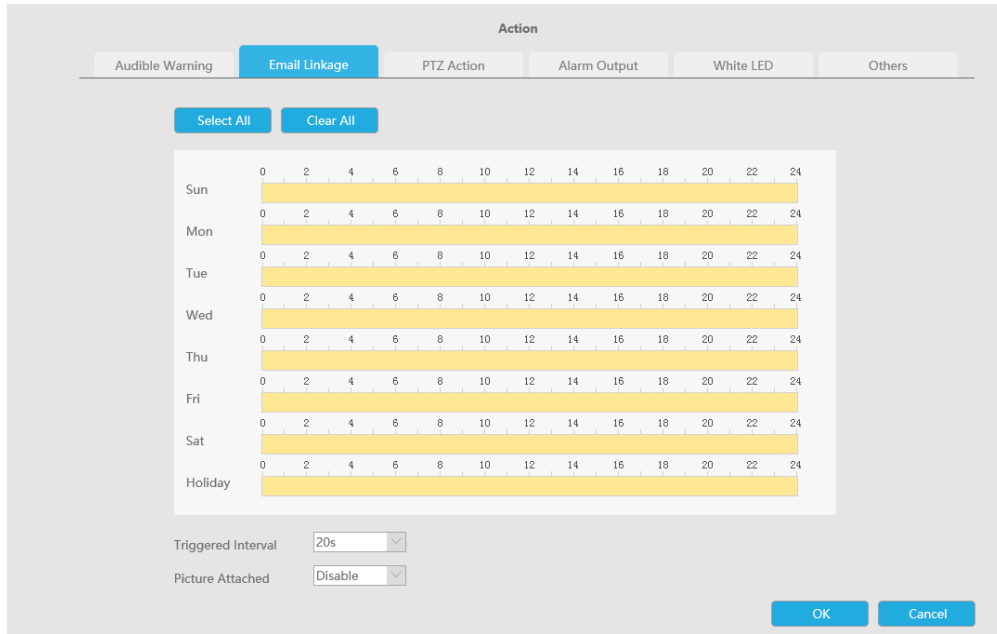


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

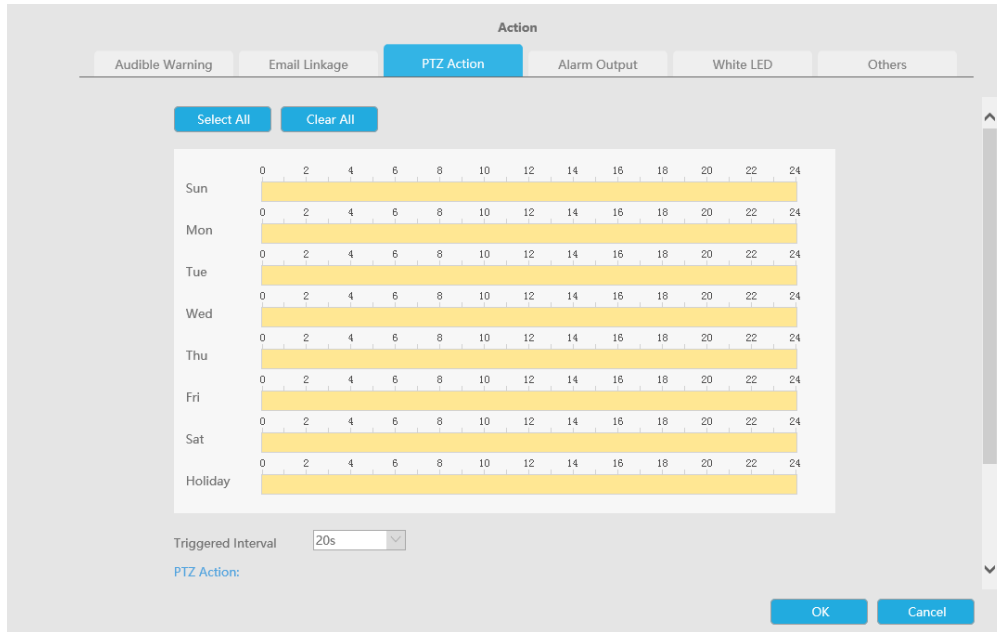

And you can add PTZ Action by clicking .

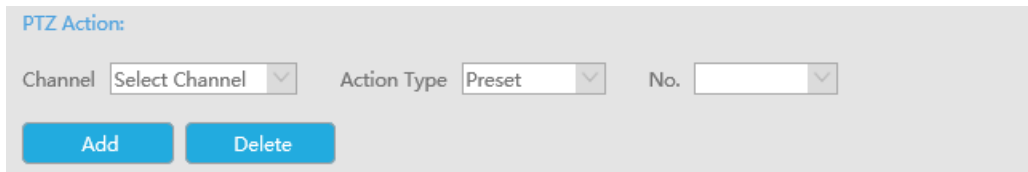


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2.etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

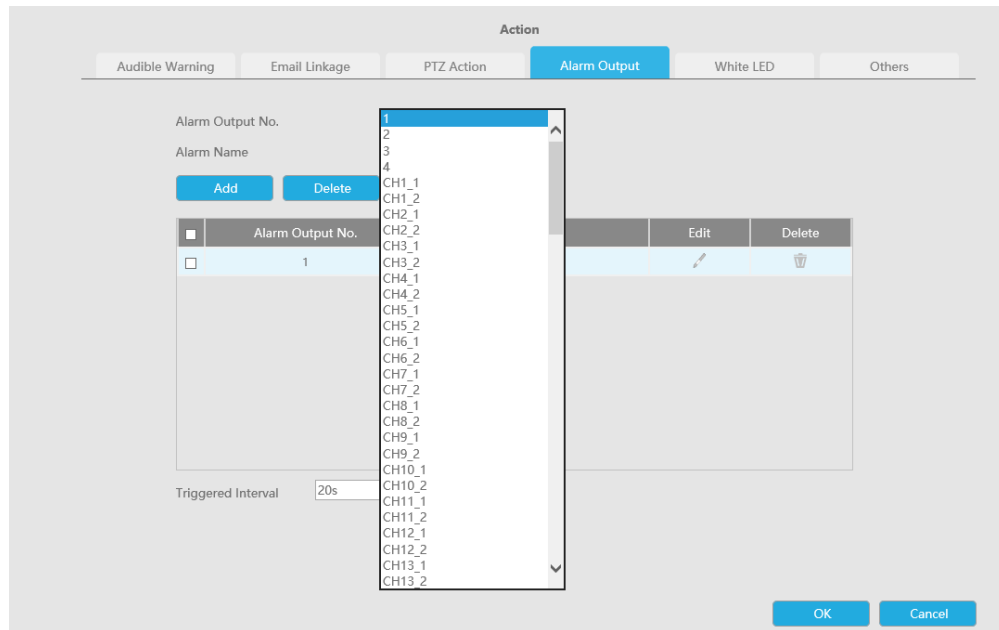


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:

User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

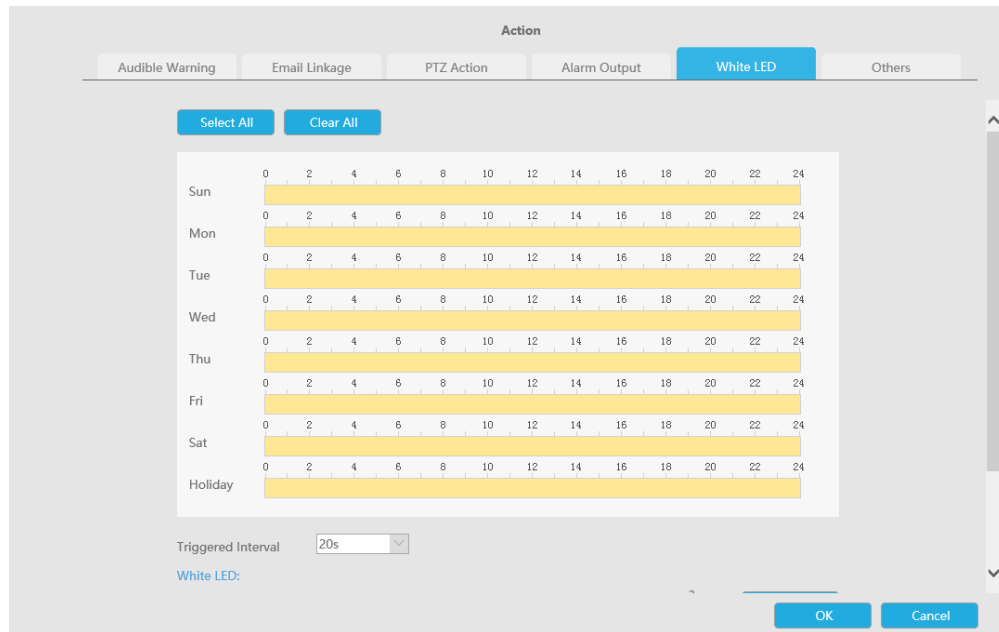

And you can add White LED by clicking .



Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.

Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.

Others: Trigger selected channels to record when alarm is triggered.

Action

Audible Warning
Email Linkage
PTZ Action
Alarm Output
White LED
Others

Trigger Channels Record

All

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Trigger Channels Snapshot

All

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Note: This page's configuration will not be copied into other channels.

OK
Cancel

 **Note:**


1. The list is exclusive for NVR, working with all LPR cameras you add. It won't synchronize with the list on camera side.
2. Do not forget to enable these modes, set effective time and record action for corresponded mode, ensuring that you can get real-time video when license plate is detected (Effective time and record action is enabled by default.)

3.5.2.2 Face Detection

Face Detection settings consist of Face Capture and Advanced. Here are some notes for using Face Detection function.

 **Note:**

1. Ensure that there is available HDD on NVR and correct record settings is made, so that you can check the record on live view.
2. Ensure that NVR can get the face information. Please set TCP which is the default mode as Post Type. It can be set in Camera web page -> Event -> Face Detection -> Face Capture interface.

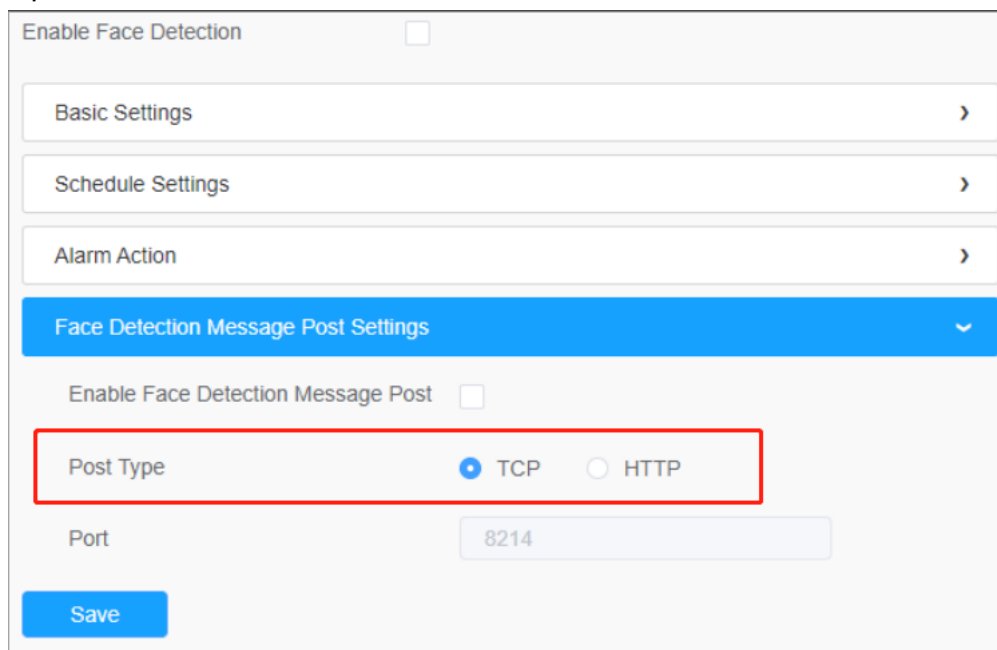

Enable Face Detection

Basic Settings >

Schedule Settings >

Alarm Action >

Face Detection Message Post Settings ▾

Enable Face Detection Message Post


Post Type TCP HTTP

Port 8214

Save

3. Make sure your camera is AI Series and version is V4x.7.0.79-r25 or above.
4. Make sure your NVR model is MS-Nxxxx-xxT/H.


 
Face Capture

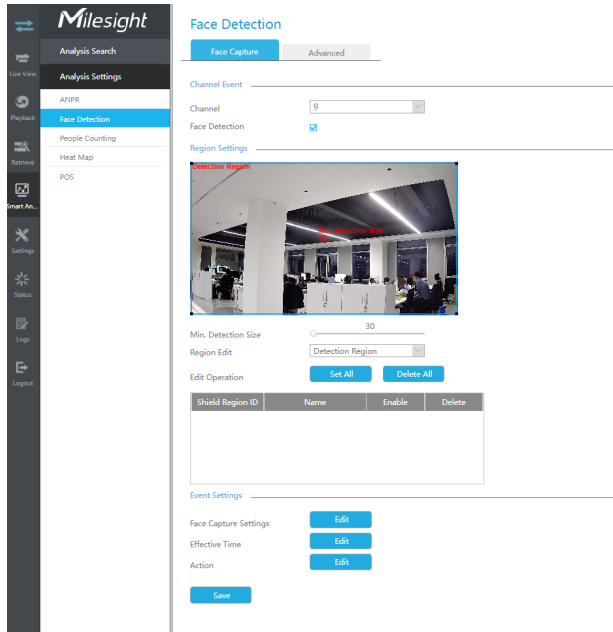

Step 1: Select a channel and enable Face Detection function;

Step 2: Set Min. Detection Size;

Step 3: Set detection region or Shield Region, you can draw the polygon region on the

screen directly, or you can also click  or  to select or delete the entire region. Only the faces in the detection region will be detected, and the faces in the shield region will not be detected.

Step 4: Make configuration for face capture snapshot.

The screenshot shows a 'Face Capture Settings' dialog box with the following configuration:

- Capture Mode: Quality Priority
- Capture Quality: 1
- Target Snapshot Type: Target Snapshot Type
- Background Snapshot: Disable
- Snapshot: 1

Buttons for 'OK' and 'Cancel' are located at the bottom right of the dialog.

Capture Mode: Quality Priority, Timeliness Priority, Customize are available.


- Quality Priority: In this mode, it will push a face screenshot of best quality when the face is detected.
- Timeliness Priority: In this mode, it will push a face screenshot in the shortest time when the face is detected.
- Customize: In this mode, you can customize some detect conditions, including Snapshot Interval, Oblique Face Angle Limit, Pitching Face Angle Limit, Side Face Angle Limit, Blur Limit.

 **Note:** It is recommended to choose Quality Priority Mode.

Target Snapshot Type: Face Only, Upper Body, Whole Body are available.

- Face Only: Capture the screenshot of face only.
- Upper Body: Capture the screenshot of upper body.
- Whole Body: Capture the screenshot of whole body.

If you check the "Background" option, it will take another screenshot of the entire image.

 **Note:** Whether or not the "Background" option is checked, the camera will push the entire image to the NVR side.

Snapshot Interval: 80 milliseconds, 200 milliseconds, 500 milliseconds, 1 second, 2 seconds and 4

seconds are available. This option is optional for Customize mode.

Oblique Face Angle Limit: Set Oblique Face Angle Limit to 1~180. The larger the value, the larger angle the oblique face that can be detected. This option is optional for Customize mode.

Pitching Face Angle Limit: Set Pitching Face Angle Limit to 1~180. The larger the value, the larger angle the pitching face that can be detected. This option is optional for Customize mode.

Side Face Angle Limit: Set Side Face Angle Limit to 1~180. The larger the value, the larger angle the side face that can be detected. This option is optional for Customize mode.

Blur Limit: Set Blur Limit to 1~10. The larger the value, the more blurred the face can be detected. This option is optional for Customize mode.

Snapshot: Set the number of screenshot to 1~5. It will take screenshot based on the snapshot interval you set.

Step 5: Set Face Detection function effective time;

Step 6: Set action including Audible Warning, Email Linkage, Event Popup, PTZ Action, Alarm Output, White LED and Trigger Channels Record.

For detailed settings of these actions, please refer to [Alarm Action \(page 66\)](#).




Note: The following functions cannot be enabled at the same time as Face Detection.

- VCA
- People Counting&Regional People Counting
- Corridor Mode
- Auto Tracking

Advanced

Here you can enable Attribute Recognition and configure the attributes you want to detect. Or enable the Face Privacy Mode for Face Detection.

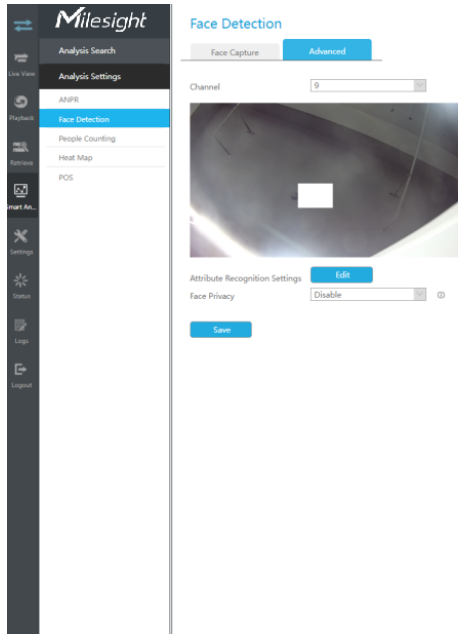

Attribute Recognition Settings: The attributes include Age, Gender, Glasses, Mask and Cap. Users can choose the attributes as needed.

Face Privacy: When Face Privacy Mode is enabled, the detected faces in the face detection area will be mosaic automatically.


Note:

1. Attribute Recognition function cannot be used together with Face Privacy function
2. To enable Face Privacy Mode, the video parameters will be changed to the recommended configuration as shown below:
 - H.265 video codec (all streams)
 - Primary Stream: 1080P@25fps
 - Secondary Stream: 704*576@25fps
 - Tertiary Stream: Disabled

3.5.2.3 People Counting

People Counting Settings

People counting is able to count that how many people enter or exit during the setting period.

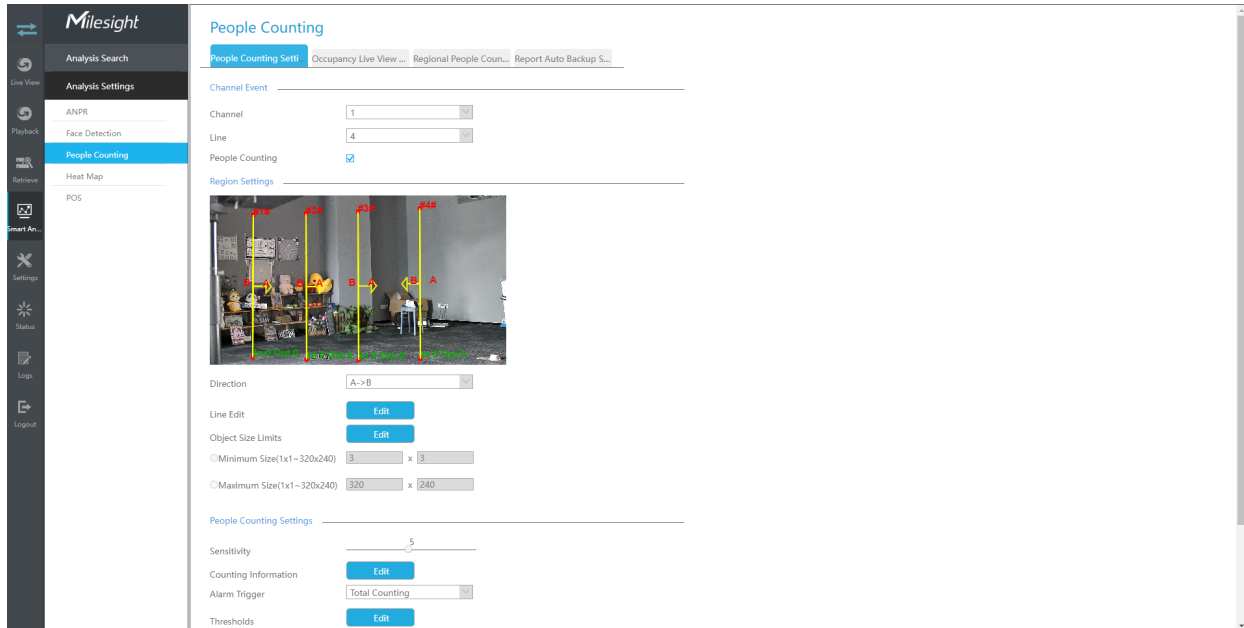

Step1. Enable Channel Event.

Select Channel and Detection Line, then enable People Counting.

Channel Event _____

Channel


Line

People Counting

Step 2. Set Detection Lines.

Select the direction and draw the line after clicking **Edit** button.

Region Settings

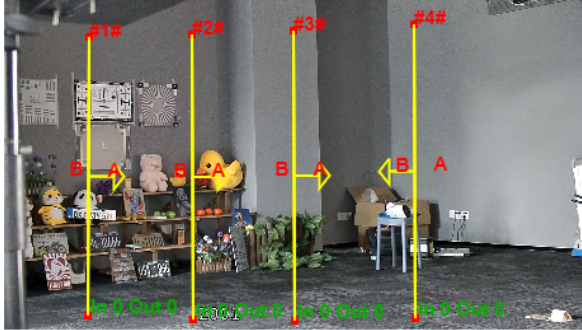

Direction: A->B

Line Edit: Finish, Delete

Note: It supports drawing up to 4 detection lines and configures them individually.

Step 3. Set Object Size Limits.

Object Size Limits Finish Reset

Minimum Size(1x1~320x240) x

Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for People Counting will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for People Counting will take effect.

Step 4. Set Detecting Sensitivity.

Step 5. Set Counting Information by clicking "Edit" button.

Counting Information Edit

Count Type All
 In Out Sum Capacity

OSD

OSD Font Size

OSD Text Position

Line Counting Information

Reset Counting Information ⓘ


Reset Counting Data ⓘ

Auto Reset

Day

Time

Table 6.

Parameters	Function Introduction
Count Type	Users can choose the information they want to display in Live Video.
OSD	Enable/disable the OSD shown.
OSD Font Size	The font size of the OSD display.
OSD Text Position	The text position of the OSD display.
Line Counting Information	Enable/disable the line counting information.
Reset Counting Information	Click this button to clear the count information on the OSD
Reset Counting Data	Click this button to clear the count information in the database.  Note: After enabling this option, the count information of the search interface will also be cleared.
Auto Reset	It is used to automatically clear the counting information according to your settings.
Day	The day of Auto Reset.
Time	The time of Auto Reset.

Step 6. Set Alarm Trigger and Alarm Action.


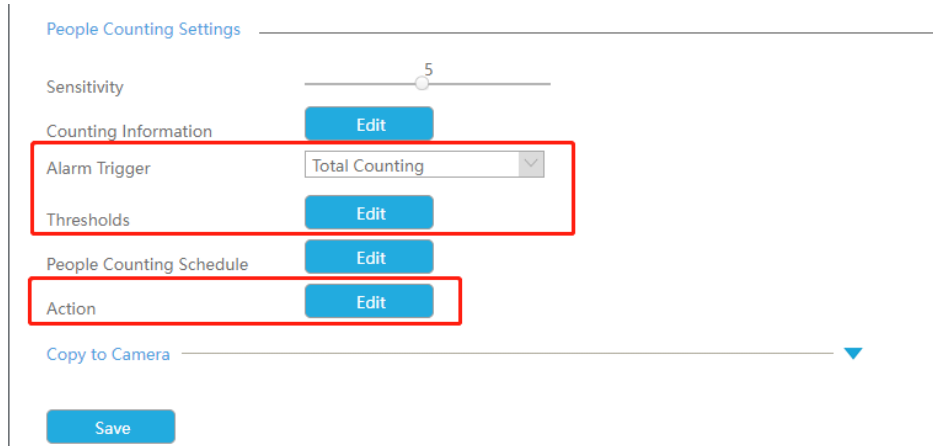


Table 7.

Parameters	Function Introduction																
<p>Alarm Trigger</p>	<p>Alarm will be triggered when the thresholds reaches to a certain value from 1 to 9999. Total Counting and Single Counting are available. You can set the Alarm Thresholds of In/Out/Capacity/Sum.</p> <div data-bbox="685 871 1284 1194" style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <p style="text-align: center; margin: 0;">Thresholds</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">In</td> <td style="width: 5%;"><input type="checkbox"/></td> <td style="width: 55%;"><input style="width: 90%;" type="text" value="9999"/></td> <td style="width: 25%;">1~9999</td> </tr> <tr> <td>Out</td> <td><input type="checkbox"/></td> <td><input style="width: 90%;" type="text" value="9999"/></td> <td>1~9999</td> </tr> <tr> <td>Capacity</td> <td><input type="checkbox"/></td> <td><input style="width: 90%;" type="text" value="9999"/></td> <td>1~9999</td> </tr> <tr> <td>Sum</td> <td><input type="checkbox"/></td> <td><input style="width: 90%;" type="text" value="9999"/></td> <td>1~9999</td> </tr> </table> <p style="text-align: right; margin: 10px 0;"> <input type="button" value="OK"/> <input type="button" value="Cancel"/> </p> </div> <p>Note:</p> <ul style="list-style-type: none"> For Total Counting, the thresholds are the sum of the total number of 4 detection lines. For Single Counting, the threshold is for the selected detection line. 	In	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999	Out	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999	Capacity	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999	Sum	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999
In	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999														
Out	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999														
Capacity	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999														
Sum	<input type="checkbox"/>	<input style="width: 90%;" type="text" value="9999"/>	1~9999														
<p>Alarm Action</p>	<p>Set action including Audible Warning, Email Linkage, PTZ Action, Alarm Output, White LED, HTTP Notification and Others. For detailed settings of these actions, please refer to Alarm Action (page 66).</p> <p>Note:</p> <ul style="list-style-type: none"> The alarm action is effective on 4 detection lines simultaneously. If you enable External Output and choose Constant External Output Action Time, when the thresholds reach to a certain value you set, External Output Action alarm time will be always constant till the alarm is released. 																


Step 7. Set People Counting detection schedule by clicking "Edit" button.

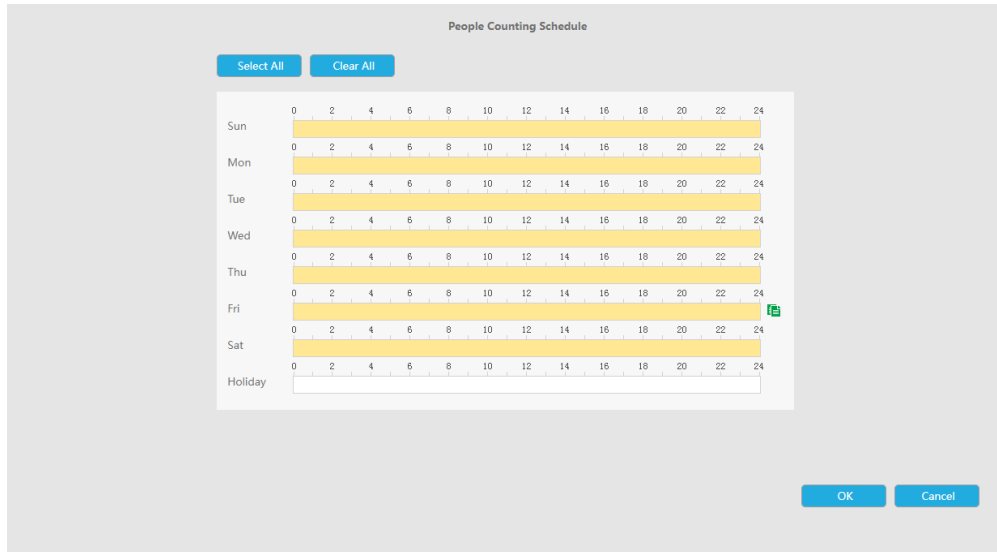

Step 8. Click [Copy to Camera] to copy the same configuration to other channels.



Occupancy Live View Settings

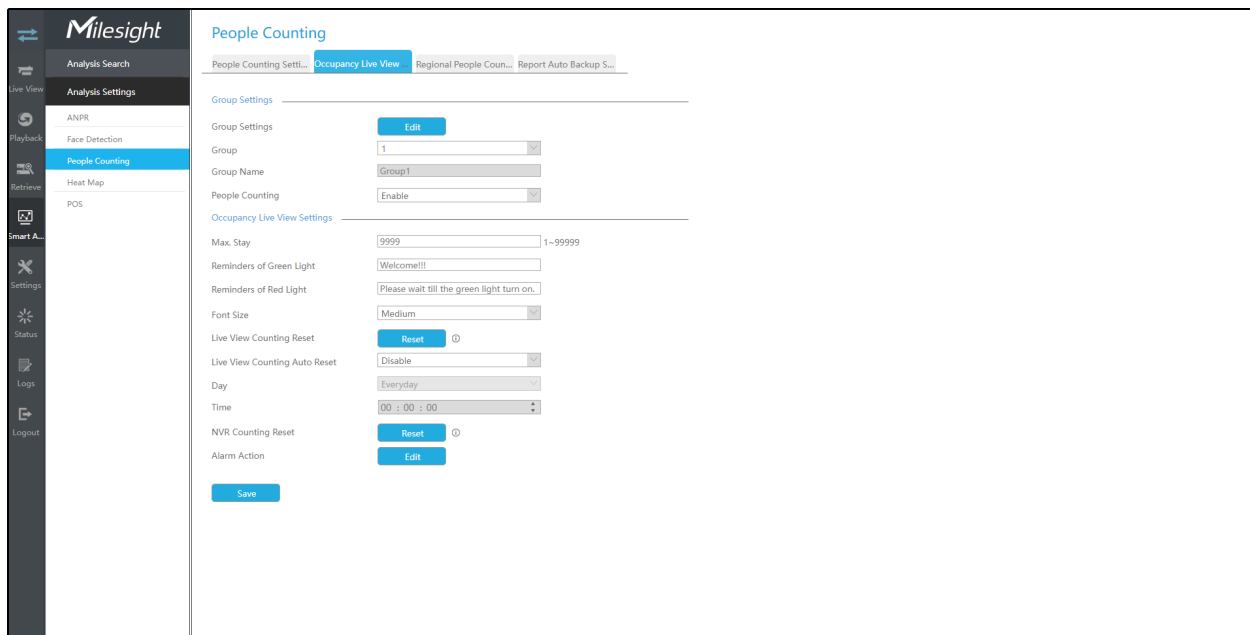
You can configure information about Occupancy Live View on the page.



Note: Make sure your camera's version is 4X.7.0.77 or above.

Step 1. Set Group.

Group Settings: Click  to pop up the Group Settings interface. Then you can click  to add Group in the interface, and edit the Group Name and select the Channels to join the Group in the Add Group interface. You can add up to 9 Groups.

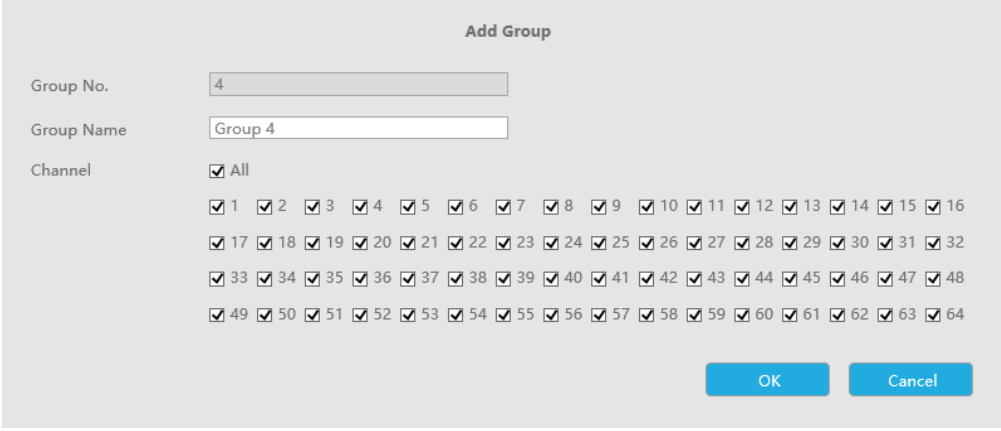

Add Group

Group No.

Group Name

Channel All

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16


17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32

33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48

49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Step 2. Select a Group from the added Groups.

Group

Group Name: The corresponding Group Name will be automatically obtained according to the Group No. you choose. You can modify the Group Name by clicking  on the corresponding Group in the Group Settings interface.

Step 3. Enable People Counting for the selected Group.

People Counting

Step 4. Set the relevant parameters of People Counting.

Max. Stays: Set the maximum number of people staying from 1 to 99999, the default value is 99999.

Reminders of Green Light: Set the prompt when Green Light is on in the Occupancy Live View interface, up to 45 characters. The default prompt is “Welcome!!!”.

Reminders of Red Light: Set the prompt when Red Light is on in the Occupancy Live View interface, up to 45 characters. The default prompt is “Please wait till the green light turns on.”.

Font Size: Select the font size of the prompt. There are three options: Small, Medium and Large.

Live View Counting Reset: Reset the Group counting data in the Occupancy Live View interface.

Live View Counting Auto Reset/Day/Time: The Group counting data is automatically reset at the set time when Live View Counting Auto Reset is enabled.

Live View Counting Auto Reset	<input type="text" value="Disable"/>
Day	<input type="text" value="Everyday"/>
Time	<input type="text" value="00 : 00 : 00"/>


NVR Counting Reset: Reset the Group counting data stored in NVR side, and also reset the Group counting data in the Occupancy Live View interface.

Alarm Action: Alarm is triggered when the number of people staying in the current group reaches the set maximum number of people staying. You can set alarm action including Audible Warning, Email Linkage, PTZ Action, Alarm Output and White LED.

For detailed settings of these actions, please refer to [Alarm Action \(page 66\)](#)

Regional People Counting Settings

When enabling Regional People Counting, users can check the real-time number of people and the time of each person's stay in the detection region.

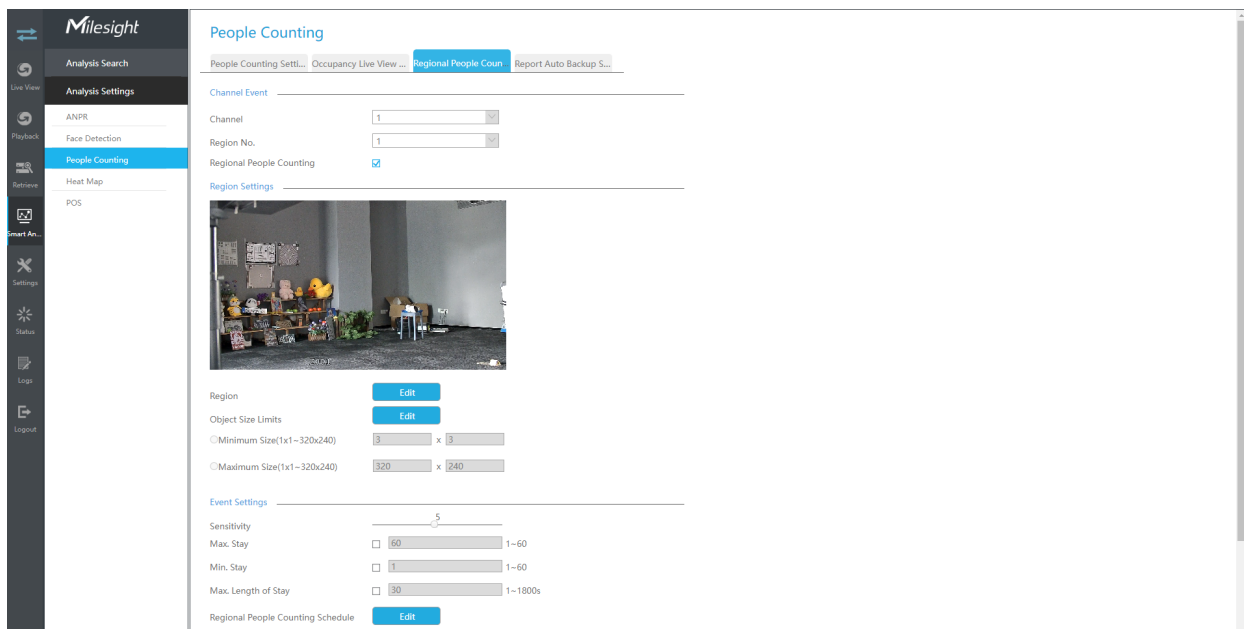

Step 1. Select channel and the region number to configure, then enable Regional People Counting.

Channel	<input type="text" value="1"/>
Region No.	<input type="text" value="1"/>
Regional People Counting	<input checked="" type="checkbox"/>

Note: Ensure that your camera model is MS-CXXXX-XXC and camera version is 4X.7.0.78 or above.

Step 2. Set detection region.



Region

Finish

Set All

Delete

Step3.Set Minimum Size and Maximum Size.

Object Size Limits	<input type="button" value="Finish"/>	<input type="button" value="Reset"/>
<input checked="" type="radio"/> Minimum Size(1x1~320x240)	<input type="text" value="3"/>	x <input type="text" value="3"/>
<input type="radio"/> Maximum Size(1x1~320x240)	<input type="text" value="320"/>	x <input type="text" value="240"/>

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Regional People Counting will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Regional People Counting will take effect.

Step4.Set Sensitivity.

Level 1~10 are available, the default level is 5. The higher the sensitivity, the easier the moving subjects to be recorded in the result.



Step5. Set alarm trigger. Alarm will be triggered when the threshold exceeds the certain value.

Max. Stay	<input type="checkbox"/>	<input type="text" value="60"/>	1~60
Min. Stay	<input type="checkbox"/>	<input type="text" value="1"/>	1~60
Max. Length of Stay	<input type="checkbox"/>	<input type="text" value="30"/>	1~1800s

Step 6. Set detection schedule by clicking "Edit" button.

Regional People Counting Schedule

Action

Copy to Camera


Please configure Regional People Counting schedule on camera side.

Step 7. Set alarm action including Audible Warning, Email Linkage, Event Popup, PTZ Action, Alarm Output, White LED and Trigger Channels Record.

For detailed settings of these actions, please refer to [Alarm Action \(page 66\)](#).

Report Auto Backup Settings

Here users can configure Auto Backup of People Counting reports. Then you can periodically export .CSV reports of the last day, last week, or all to the external device or Email.

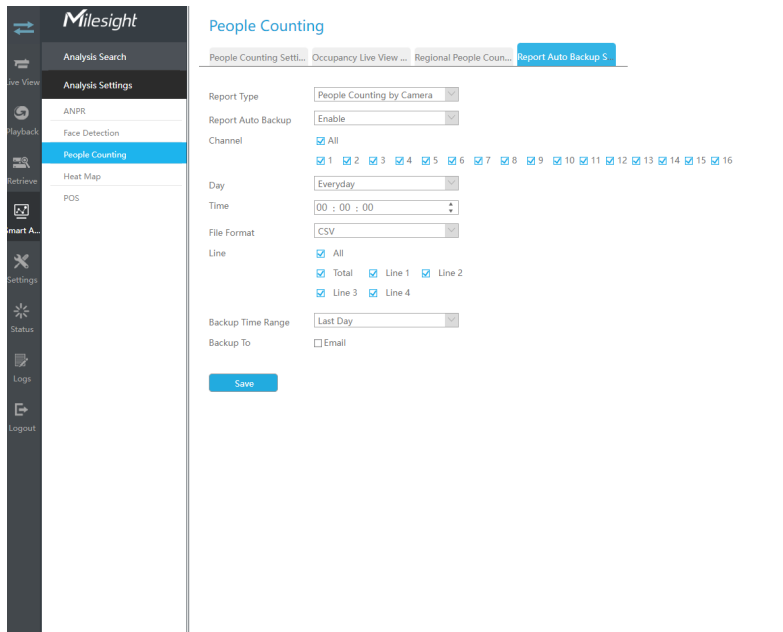

Step 1: Select Report Type including People Counting by Camera, People Counting by Group and Regional People Counting.

Step 2: Enable Report Auto Backup, and then select the Channel or Group.

Step 3: Set the day and the time.

Day	Everyday
Time	16 : 41 : 00

Step 4: Select the Detection Line.


Step 5: Select Backup Time Range including Last Day and Export All.

Step 6: Users can export the reports to the Email.

3.5.2.4 Heat Map

Milesight NVRs support the configuration of the Heat Map function of Milesight cameras on NVR directly and you can search and export the results of Heat Map in Smart Analysis.

Heat Map

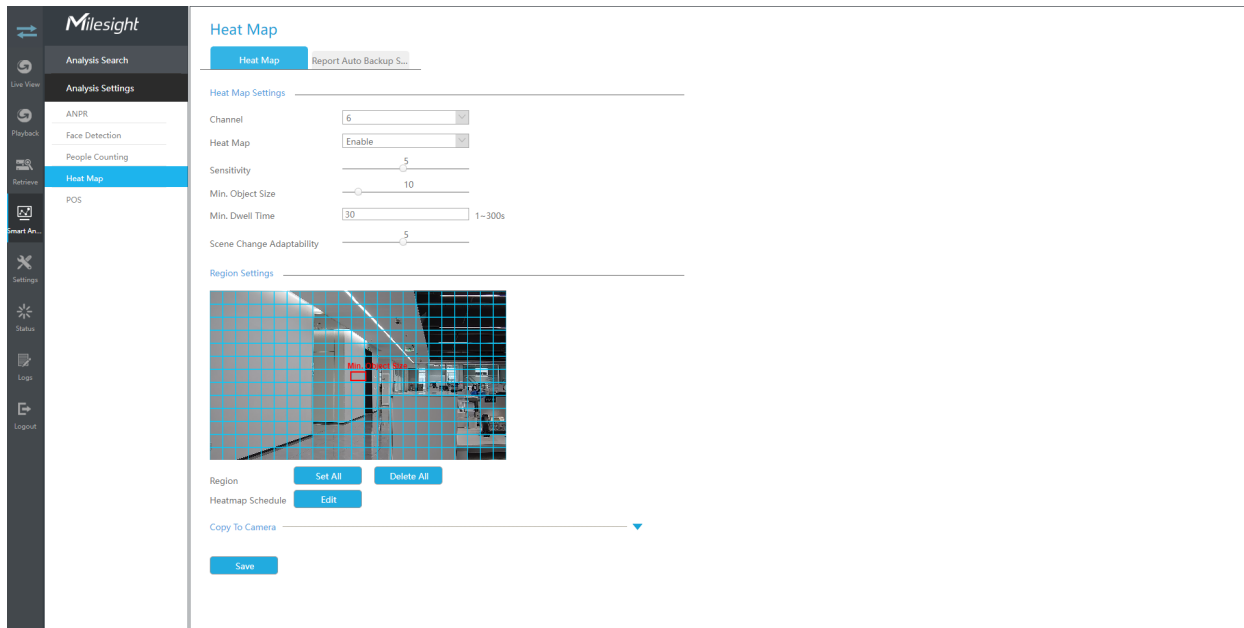

Sensitivity: Level 1~10 are available, the default level is 5. The higher the sensitivity, the easier the moving subjects to be recorded in the result.

Min. Object Size: Set the minimum object size from 1 to 100, the default value is 10. Objects smaller than this value will not be recorded in the result.

Min. Dwell Time: Set the minimum dwell time from 1 to 300, the default value is 30. If the object stays in the area longer than the set "Minimum Dwell Time", it will not be recorded in the result.

Scene Change Adaptability: Level 1~10 are available, the default level is 5. Scene Change Adaptability indicates the camera's adaptability to scene changes, which can increase the accuracy of detection. The camera adapts better to faster changing scenes if the value is higher.

Heat Map Region: Draw the screen to set the detection area. You can click "Set All" button to select all areas, or "Clear All" button to remove the current drawn area.

Heatmap Schedule: Set Heat Map schedule by clicking "Edit" button..

 **Note:**


1. Ensure that your camera's version is 4X.7.0.74 or above.
2. Please configure Heat Map schedule on camera side.
3. The Heat Map function only works on the following cameras:

Fisheye: Ensure that the dewarping mode is 1O and the dewarping rule is On-board Dewarping.

Panoramic Mini Bullet: Ensure to turn on the Lens Distort Correct function.

Report Auto Backup Settings

Here users can configure Auto Backup of Heat Map reports. Then you can periodically export .CSV reports of the last day, last week, or all to the external device or Email.

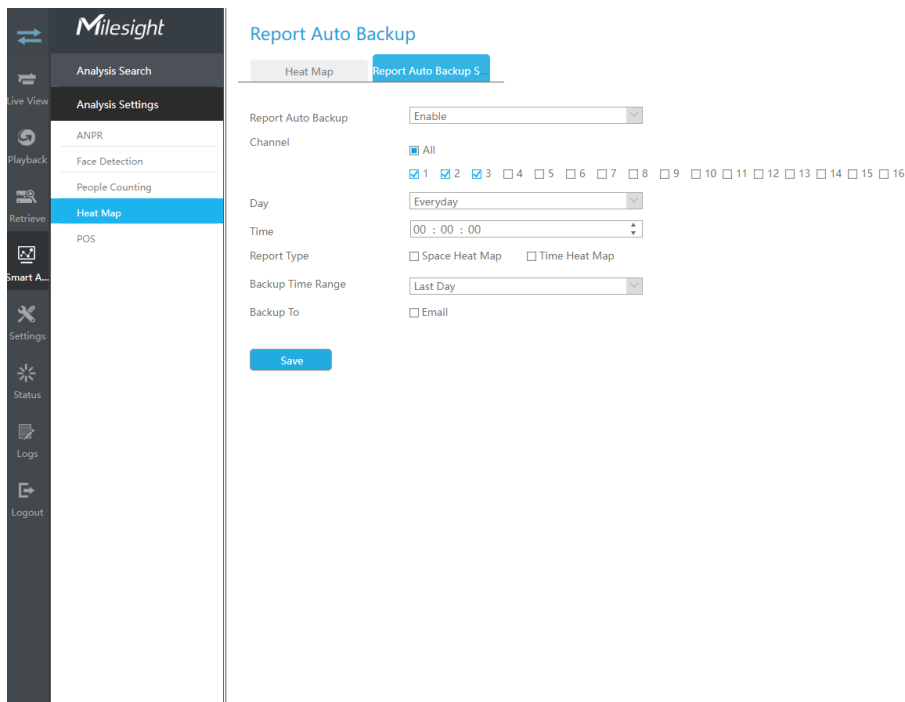

Step 1: Enable Report Auto Backup, and then select the channels.

Step 2: Set the day and the time.

Day	Everyday
Time	16 : 41 : 00


Step 3: Select Report Type including Space Heat Map and Time Heat Map.

Step 4: Select Backup Time Range including Last Day and Export All.

Step 5: Users can export the reports to the external device or Email.

3.5.2.5 POS

You can configure some basic POS information here. When the communication between the POS machine and NVR is available and POS function is enabled on NVR side, NVR can obtain the information transmitted by the POS machine and display the POS information on the configured channel Live View.

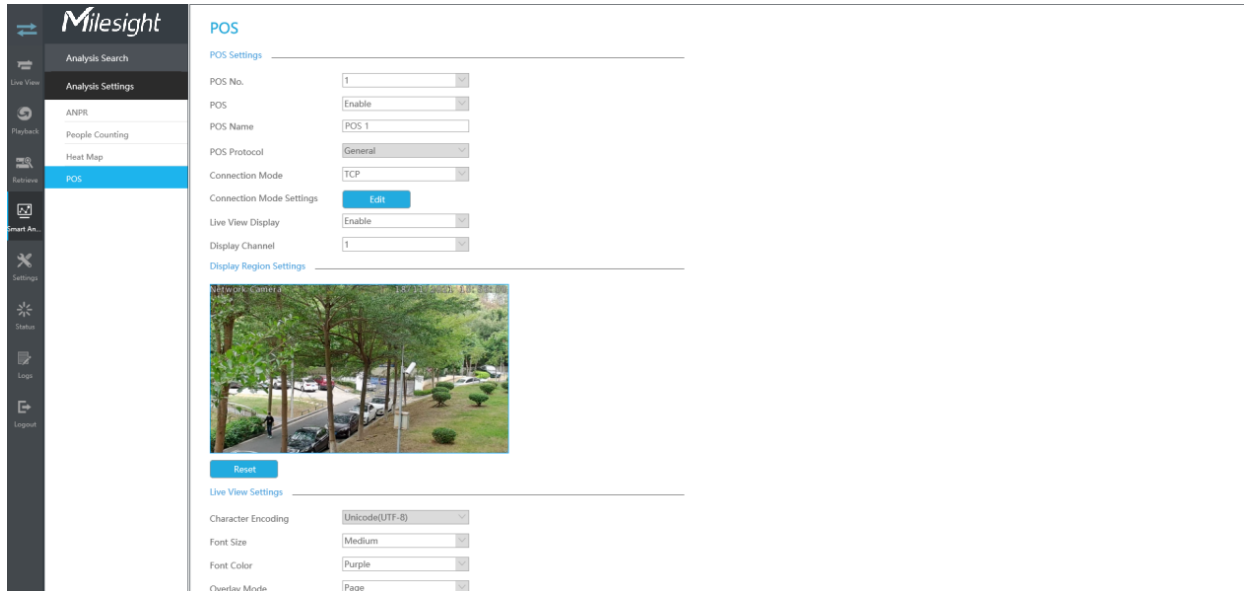

Step 1: Select the POS number and enable POS function;

POS Name: You can customize the POS name as needed


POS Protocol: Display the POS communication protocol. The default is General

Connection Mode: Select the connection mode with the POS machine, TCP or UDP is optional

Connection Mode Settings: Set the IP address and POS Port of the POS machine

Step 2: You can enable the Live View Display. When enabled, POS information will be displayed in the Live View and the preview box of each configuration page;

Display Channel: Select the channel on which POS information will be displayed

 **Note:** The information of different POS machines cannot be displayed in the same channel to prevent information overlap.

Display Region: Draw the area in the channel where POS information is displayed

Character Encoding: The encoding format of the information transmitted by the POS machine. The default is Unicode (UTF-8)

Font Size: Set the font size of POS information

Font Color: Set the font color of POS information

Overlay Mode: Set the overlay mode when the channel display area is full in the Live View. Page or Roll is optional

Display Time: Set the display time of single POS information in the Live View

Timeout: Set the expiration time of POS information, and multiple messages sent within the set time will be merged into the same message again

Privacy Settings: Some information can be set to * as needed to protect privacy

Step 3: Set POS function effective time;


Step 4: Alarm is triggered when NVR obtains the information transmitted by the POS machine. You can set alarm action including Audible Warning, Email Linkage, PTZ Action, Alarm Output, White LED and Others.

For detailed settings of these actions, please refer to **3.5.2.1 ANPR**.

3.6 Camera

Before configuration, please ensure that the camera is connected to the same network as your NVR and that the network setting for your NVR is properly set.

3.6.1 Camera Management

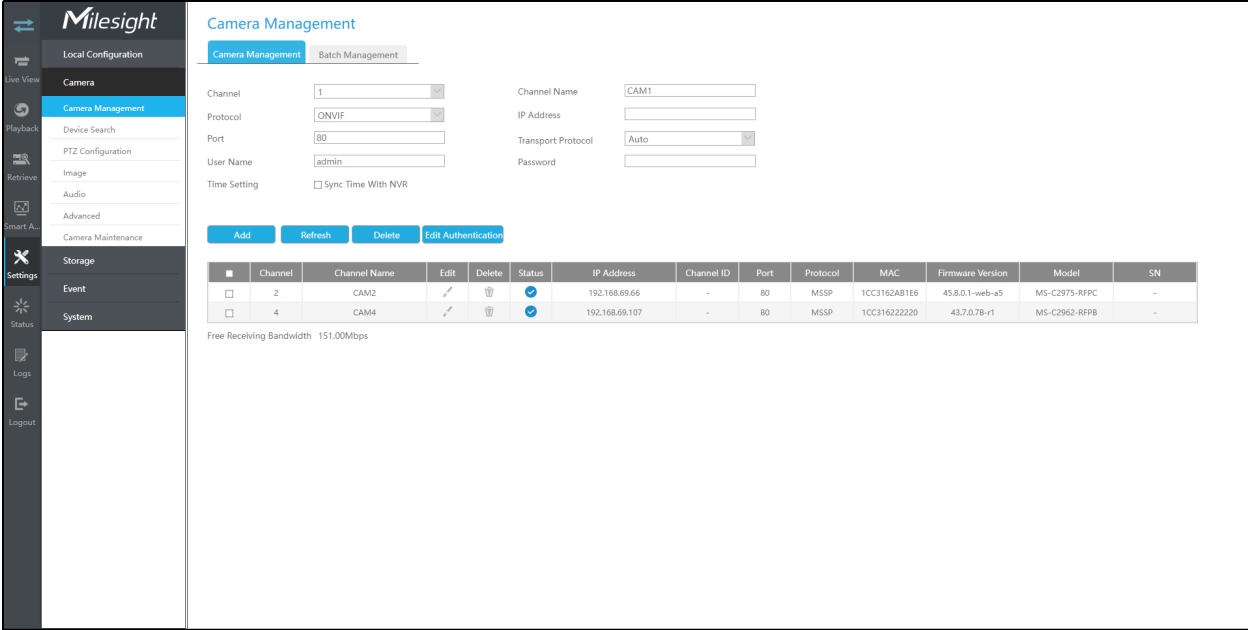


Step 1. Add camera.

Method 1. Add camera through Device Search interface. 'Camera'#'Device Search'.

1. Select IP Range, NIC and Protocol, which includes ALL, ONVIF and MSSP.



2. Click  button to search cameras at the same LAN with NVR.

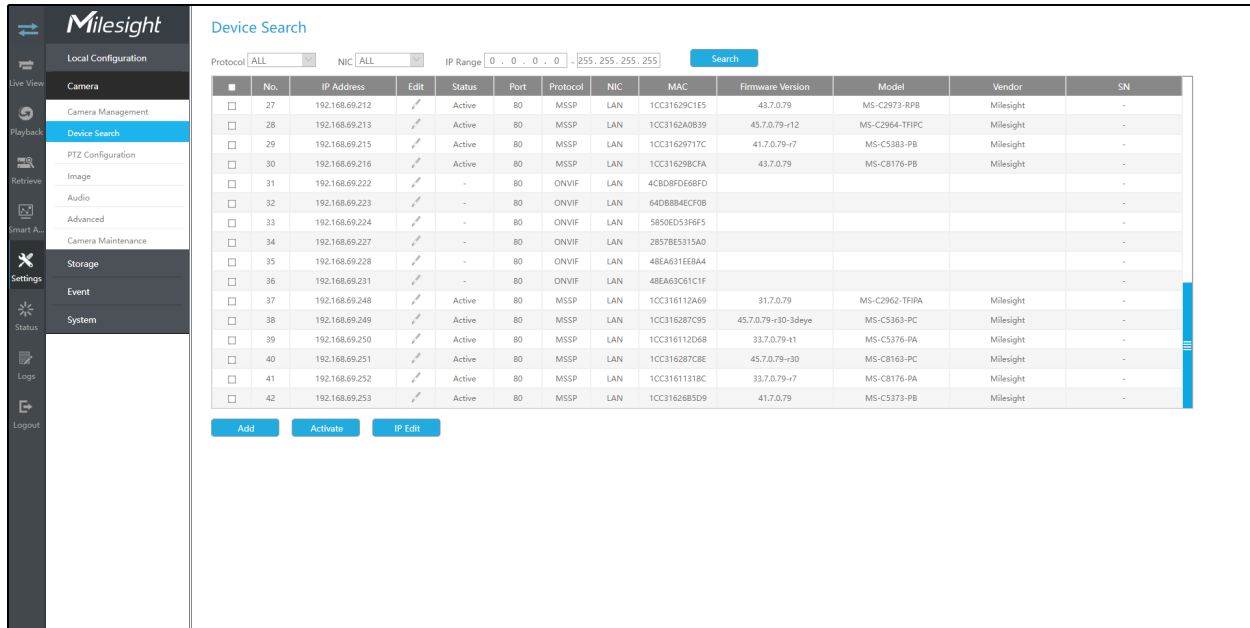

3. Select one channel, click  button, input password and click  button to finish.

Add Camera

MAC:

IP Address:

Channel:

User Name:

Transport Protocol:


 
Port:

Protocol:

Channel Name:

Password:

Time Setting: Sync Time With NVR

4. Check  to **batch adding** the network cameras if they are with the same password, you can choose TCP, UDP or Auto transport protocol for it. Click  to finish batch adding.

MSSP: You can search out all MileSight cameras which have different network segment in the LAN.

Add Camera

User Name

Password

Transport Protocol

Method 2. Add camera through camera management interface. 'Camera'#'Camera Management'.

Camera Management

Camera Management | Batch Management

Channel	<input type="text" value="6"/>	Channel Name	<input type="text" value="CAM6"/>
IP Address	<input type="text"/>	Port	<input type="text" value="80"/>
User Name	<input type="text" value="admin"/>	Password	<input type="password"/>
Transport Protocol	<input type="text" value="Auto"/>	Time Setting	<input type="checkbox"/> Sync Time With NVR
Protocol	<input type="text" value="ONVIF"/>		

Select channel ID, input complete information, then click [Add] button.

There are three protocols available for camera connection:

- **ONVIF:** You can add any ONVIF IP cameras with ONVIF protocols.

Camera Management

Camera Management		Batch Management	
Channel	<input type="text" value="5"/>	Channel Name	<input type="text" value="CAM5"/>
IP Address	<input type="text"/>	Port	<input type="text" value="80"/>
User Name	<input type="text" value="admin"/>	Password	<input type="text"/>
Transport Protocol	<input type="text" value="UDP"/>	Time Setting	<input type="checkbox"/> Sync Time With NVR
Protocol	<input type="text" value="ONVIF"/>		

- **RTSP:** You can add any IP cameras with RTSP protocol streams (Port: 554). It needs you to input complete resource path of the IP camera to add it. Take Milesight device for example, the resource path of main stream is “rtsp://IP:port/main” and secondary stream is “rtsp://IP:port/sub”. The length of RTSP can be up to 128 bits.

Camera Management

Camera Management		Batch Management	
Channel	<input type="text" value="5"/>	Channel Name	<input type="text" value="CAM5"/>
User Name	<input type="text" value="admin"/>	Password	<input type="text" value="••••••"/>
Transport Protocol	<input type="text" value="UDP"/>	Time Setting	<input type="checkbox"/> Sync Time With NVR
Protocol	<input type="text" value="RTSP"/>	Primary	<input type="text" value="rtsp://192.168.7.222:554/main"/>
		Secondary	<input type="text" value="rtsp://192.168.7.222:554/sub"/>

- **MSSP:** You can add Milesight cameras which are in the same LAN with MSSP protocol.

Camera Management

Camera Management | Batch Management

Channel: 1

Protocol: **MSSP**

Port: 80

User Name: admin

Time Setting: Sync Time With NVR

Channel Name: CAM1

IP Address:

Transport Protocol: Auto

Password:

Note: Support RTSP over HTTPS transmission between Milesight IPC and NVR.

You can select MSSP as the Protocol and choose Encryption for the Transport Protocol.

Camera Management

Camera Management | Batch Management

Channel: 3

Protocol: MSSP

Port: 80

User Name: admin

Time Setting: Sync Time With NVR

Channel Name: CAM3

IP Address:

Transport Protocol: **Encryption**

Buttons: Add, Refresh, Delete, Edit Authentication

Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Port	Protocol	MAC	Firmware Version	Model	SN
1	CAM1			✓	192.168.69.120	-	80	ONVIF	1CC316112900	33.8.0.3-r3-c13	MS-C2862-RFIPA	-
2	CAM2			✓	192.168.69.153	-	80	ONVIF	1CC3162AFAEE	45.8.0.2-AIoT-r2-c1	MS-C5366-X12GO PC	123456

Free Receiving Bandwidth 74.50Mbps

- **Milesight DDNS:** You can add Milesight cameras via Milesight DDNS. After enabling DDNS on Milesight camera and selecting “ddns.milesight.com” as provider, you can add the camera via the Domain Address “ddns.milesight.com/MAC address”.

Camera Management

Camera Management
Batch Management

Channel

Protocol

Transport Protocol

Password

Channel Name

Domain Address

User Name


Time Setting Sync Time With NVR

Add
Refresh
Delete
Edit Authentication

You can add offline cameras to Milesight NVRs by method2. As long as the device information you fill in is correct, NVR will determine whether the device is connected and update the camera status automatically.

Note:

1. When adding a fisheye camera in Multi-Stream Mode, NVR would distinguish all of its channels as independent channels for adding, which depends on its Display Mode. For Example, if a Fisheye camera's Display Mode is 1O3R, there would be 4 Channels to be added. The original view gets Channel ID as 1, and the first region view gets Channel ID as 2, and so on. Thus you can select the ID to add as your demand.

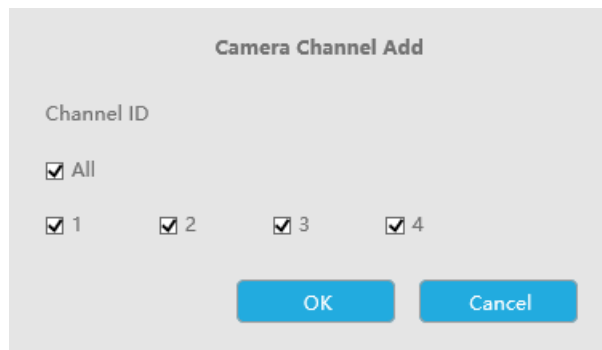



 



 

 
 
 

 


2. Only Fisheye camera has Channel ID.

■	Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Port	Protocol	MAC	Firmware Version	Model
<input type="checkbox"/>	1	CAM1				192.168.14.102	-	8081	ONVIF	1CC316210991	40.7.0.78	MS-C2962-FPB
<input type="checkbox"/>	2	CAM2				192.168.14.103	-	8083	ONVIF	1CC316219804	40.7.0.78	MS-C2961-EB
<input type="checkbox"/>	3	CAM3				192.168.14.104	-	8084	ONVIF	1CC316238D13	40.7.0.78	MS-C2942-B
<input type="checkbox"/>	4	CAM4				192.168.14.105	1	8085	ONVIF	1CC316220D8D	43.7.0.78	MS-C9674-PB
<input type="checkbox"/>	5	CAM5				192.168.7.234	-	80	ONVIF	1CC316287C75	45.7.0.78	MS-C2864-RFPC

Step 2. Check the connection status.


After adding the IP channels, click  button on Camera Management interface, then  appears under Status.

If it shows the  icon, users can move the mouse to the corresponding icon in the status bar to check the reason for the disconnection.

Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Port	Protocol	MAC	Firmware Version	Model	
<input type="checkbox"/>	1	CAM1				192.168.14.102	-	8081	ONVIF	1CC316210991	40.7.0.78	MS-C2962-FPB
<input type="checkbox"/>	2	CAM2				192.168.14.103	-	8083	ONVIF	1CC316219004	40.7.0.78	MS-C2961-EB
<input type="checkbox"/>	3	CAM3				192.168.14.104	-	8084	ONVIF	1CC316238D13	40.7.0.78	MS-C2942-B
<input type="checkbox"/>	4	CAM4				192.168.14.105	1	8085	ONVIF	1CC316220D8D	43.7.0.78	MS-C9674-PB
<input type="checkbox"/>	5	CAM5				192.168.7.234	-	80	ONVIF			

Step 3. Configure camera.

Configure one camera

After successfully adding the camera, click  to re-edit the channel info.

Camera Edit

Settings
Parameters

Channel:

IP Address:

User Name:

Transport Protocol:

Protocol:

Channel Name:

Port:

Password:

Time Setting: Sync Time With NVR

Go to Parameters page to re-edit parameters of this channel, select the Record Stream Type as General or Event to set different parameters separately. It is recommended to set lower parameters for General Stream to save certain storage. Click [OK] to save after your configuration.

 **Note:**

1. Event Record Stream Configuration includes Events like Motion Detection, VCA, Camera Alarm Input and Smart Analysis.
2. For Fisheye camera, you can change its Transfer Mode, Installation Mode, Display Mode and Channel ID through Camera Edit Settings interface.

3. Make sure your camera's firmware version is 4X7.0.75 or above.

Batch configuring camera

Click **Batch Settings**, select multiple channels and set parameters of cameras.

Camera Management

Camera Management | **Batch Management**

Transport Protocol: Auto | Secondary Stream: Enable
 Video Codec: H.264 | Video Codec: H.264
 Frame Size: 1920*1080 | Frame Size: 640*480
 Max Frame Rate: 25 | Max Frame Rate: 25
 Bit Rate: 4096 | Bit Rate: 512
 Bit Rate Control: CBR | Bit Rate Control: CBR
 I-frame Interval: 50 | I-frame Interval: 50
 Smart Stream: Off | Time Setting: Sync Time With NVR

Save Refresh Delete Edit Authentication

<input checked="" type="checkbox"/>	Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Port	Protocol	MAC	Firmware Version	Model	SN
<input checked="" type="checkbox"/>	1	CAM1				192.168.68.42	-	80	MSSP	1CC316500027	61.8.0.2-Image307-ispd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2				192.168.69.161	-	80	MSSP	1CC316282E02	45.8.25.3-a4	MS-C5341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3				192.168.69.135	-	8088	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4				192.168.69.166	-	80	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5				192.168.69.182	-	80	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6				192.168.69.162	-	80	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TFIPA	-
<input checked="" type="checkbox"/>	7	CAM7				192.168.69.204	-	80	MSSP	1CC3162851CC	45.7.0.79-1-o5	MS-C2866-X4RPC	-
<input checked="" type="checkbox"/>	8	CAM8				192.168.69.161	-	12,80	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9				192.168.69.60	-	80	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Free Receiving Bandwidth 139.44Mbps

Step 4. Delete camera.

You can delete this channel by clicking , or you can select multiple devices and then click **Delete** to delete.

Add Refresh **Delete** Edit Authentication

<input type="checkbox"/>	Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Port	Protocol	MAC	Firmware Version	Model
<input type="checkbox"/>	1	CAM1				192.168.14.102	-	8081	ONVIF	1CC316210991	40.7.0.78	MS-C2962-FPB
<input type="checkbox"/>	2	CAM2				192.168.14.103	-	8083	ONVIF	1CC316219804	40.7.0.78	MS-C2961-EB
<input type="checkbox"/>	3	CAM3				192.168.14.104	-	8084	ONVIF	1CC316238D13	40.7.0.78	MS-C2942-B
<input type="checkbox"/>	4	CAM4				192.168.14.105	1	8085	ONVIF	1CC316220D8D	43.7.0.78	MS-C9674-PB
<input type="checkbox"/>	5	CAM5				192.168.7.234	-	80	ONVIF	1CC316287C75	45.7.0.78	MS-C2864-RFPC

Step 5. Configure PoE Channel(Only for PoE NVR)

1. Connect MileSight camera to PoE port, it will detect the camera automatically.

2. If the camera's password is the same with NVR admin password, it will be successfully authenticated and be changed into the same network segment with internal NIC IPv4 address, then the camera will be connected successfully.

3. If the camera's password is different with NVR admin password, the PoE channel will show disconnect status. You need to input the camera's password by clicking **Edit Authentication** to realize authentication (you can also multi-select the devices and then click this button). Then the camera will be changed into the same network segment with internal NIC IPv4 address and will be successfully connected. Next time, NVR will use the password you input to authenticate this camera when you re-plug it.

 **Note:**


1. When NVR detects the inactive camera connected via PoE port, the camera will synchronize the password of NVR, and then camera will be successfully connected. For Fisheye camera in Multi-stream Mode, it would add all channels by default.
2. The steps for adding the third party PoE cameras plugged into The PoE NVR:
 - Set camera's IP segment to the same as NVR PoE NIC before plugging to PoE NVR;
 - Select PoE for NIC in Device Search interface, click Search button to search out cameras;
 - Select cameras and click Add button to add them.

Edit Authentication

User Name

Password

Note: Edit authentication for selected cameras.

4. You can **access to cameras website** directly by clicking  , which can save much steps to configure cameras with complete settings which were unavailable.

Camera Management

Camera Management Batch Management

Channel: Channel Name:
 IP Address: Port:
 User Name: Password:
 Transport Protocol: Time Setting: Sync Time With NVR
 Protocol:

[Add](#) [Refresh](#) [Delete](#) [Edit Authentication](#)

Channel	Channel Name	Edit	Delete	Status	IP Address	Channel ID	Access	Port	Protocol	MAC	Firmware Version	Model
1	CAM1				192.168.14.102	-		8081	ONVIF	1CC316210991	40.7.0.78	MS-C2962-FPB
2	CAM2				192.168.14.103	-		8083	ONVIF	1CC316219804	40.7.0.78	MS-C2961-EB
3	CAM3				192.168.14.104	-		8084	ONVIF	1CC316238D13	40.7.0.78	MS-C2942-B
4	CAM4				192.168.14.105	1		8085	ONVIF	1CC316220D8D	43.7.0.78	MS-C9674-PB
5	CAM5				192.168.7.234	-		80	ONVIF	1CC316287C75	45.7.0.78	MS-C2864-RFPC

Free Receiving Bandwidth 129.31Mbps

Note:

1. Please enable Channel Access in Network->More first;
2. Please select HTTP as transport protocol for PoE-connected cameras;
3. Please upgrade the NVR firmware version to xx.8.0.6 or above.

3.6.2 Device Search

Select Protocol and NIC, then set the IP range, and click [Search](#) to quickly search the IP devices that support selected protocol and NIC at the same LAN with NVR.

Milesight

Local Configuration

- Camera
- Camera Management
- Device Search**
- PTZ Configuration
- Image
- Audio
- Advanced
- Camera Maintenance
- Storage
- Event
- System
- Logs
- Logout

Device Search

Protocol: NIC: IP Range: [Search](#)

No.	IP Address	Edit	Status	Port	Protocol	NIC	MAC	Firmware Version	Model	Vendor	SN
27	192.168.69.212		Active	80	MSSP	LAN	1CC31629C1E5	43.7.0.79	MS-C2973-RPB	Milesight	-
28	192.168.69.213		Active	80	MSSP	LAN	1CC3162A0839	45.7.0.79+12	MS-C2964-TRPC	Milesight	-
29	192.168.69.215		Active	80	MSSP	LAN	1CC31629717C	41.7.0.79+7	MS-C5383-PB	Milesight	-
30	192.168.69.216		Active	80	MSSP	LAN	1CC316298CFA	43.7.0.79	MS-C8176-PB	Milesight	-
31	192.168.69.222		-	80	ONVIF	LAN	4C8D8FD68FD	-	-	-	-
32	192.168.69.223		-	80	ONVIF	LAN	64DB884ECF0B	-	-	-	-
33	192.168.69.224		-	80	ONVIF	LAN	5850ED53FGF5	-	-	-	-
34	192.168.69.227		-	80	ONVIF	LAN	2857BE5315A0	-	-	-	-
35	192.168.69.228		-	80	ONVIF	LAN	48EA631E8AA4	-	-	-	-
36	192.168.69.231		-	80	ONVIF	LAN	48EA63C91C1F	-	-	-	-
37	192.168.69.248		Active	80	MSSP	LAN	1CC316112A69	31.7.0.79	MS-C2962-TRPA	Milesight	-
38	192.168.69.249		Active	80	MSSP	LAN	1CC316287C95	45.7.0.79+30-3deye	MS-C5363-PC	Milesight	-
39	192.168.69.250		Active	80	MSSP	LAN	1CC316112D68	33.7.0.79+41	MS-C5376-PA	Milesight	-
40	192.168.69.251		Active	80	MSSP	LAN	1CC316287C0E	45.7.0.79+30	MS-C8163-PC	Milesight	-
41	192.168.69.252		Active	80	MSSP	LAN	1CC31611318C	33.7.0.79+7	MS-C8176-PA	Milesight	-
42	192.168.69.253		Active	80	MSSP	LAN	1CC3162885D9	41.7.0.79	MS-C5373-PB	Milesight	-

[Add](#) [Activate](#) [IP Edit](#)

If the camera status shows Inactive, please select camera and click "Activate" button to activate it first before adding to NVR.

Protocol NIC IP Range -

Besides, you can select channels and click "IP Edit" to **batch editing** their IP information.

For Fisheye camera in Multi-stream Mode, it would add all channels by default when batch editing the IP information.


IP Edit

MAC	<input type="text" value="1CC31621EC5A"/>
IP Address	<input type="text" value="192.168.7.222"/>
Subnet Mask	<input type="text" value="255.255.240.0"/>
Gateway	<input type="text" value="192.168.7.1"/>
DNS	<input type="text" value="8.8.8.8"/>
Port	<input type="text" value="80"/>
User Name	<input type="text" value="admin"/>
Password	<input type="text"/>

3.6.3 PTZ Configuration

Basic

Users can configure the functions and parameters about Pan/Tilt/Zoom.

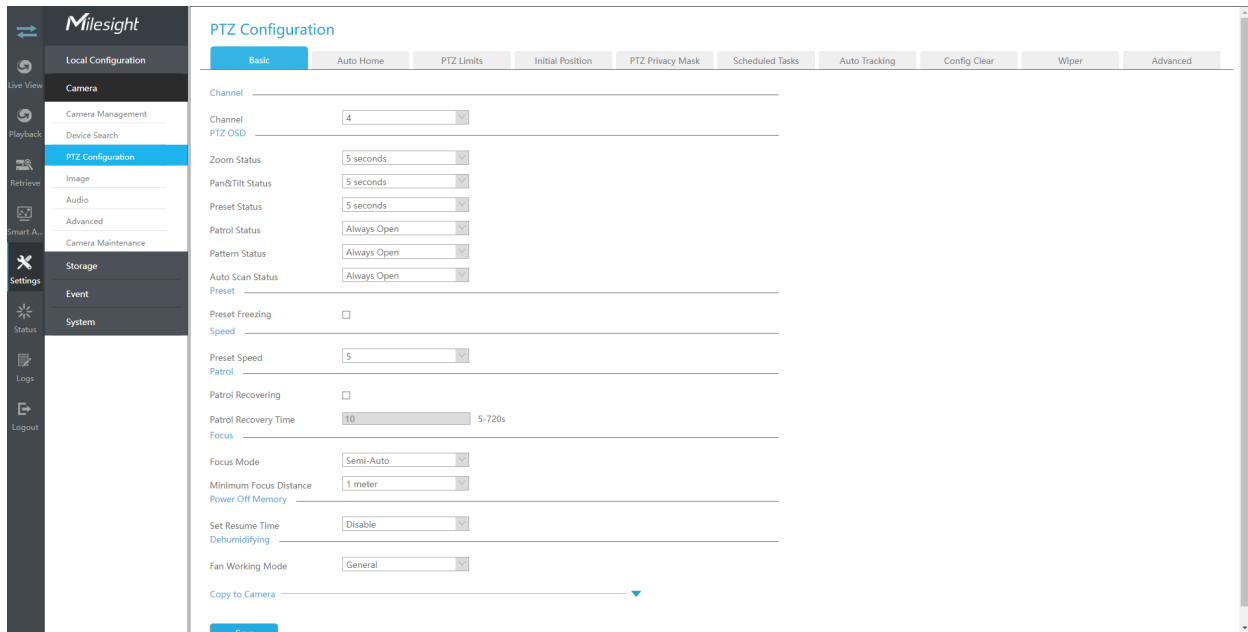

Step1. Select channel.

Step2. Configure the PTZ OSD parameter. You can set the Zoom status, Pan&Tilt Status, Preset Status with Always Close/Always Open/2s/5s/10s, and Patrol Status, Pattern Status, Auto Scan Status with Always Open/ Always Close

Step3. If you enabled Preset Freezing, the live view of preset position will be showed directly instead of showing both the moving path to the position and the live view. It can also reduce the use of bandwidth in the digital network system.

Step4. Set Speed.

Preset Speed: It determines the speed of calling presets. Level 1~10 are available

Manual Speed: It is only for Speed Dome, and it determines the PTZ speed of Manually control. Low/ Medium/ High are available

Step5. Set Patrol.

Patrol Recovering: Enable Patrol Recovering

Patrol Recovering Time: Set time for Patrol Recovering, which is between 5 to 720 seconds

Step6. Set Focus.

Focus Mode: Three focus modes are available: Auto/Semi-Auto/Manual

Minimum focus Distance: Set the minimum focus distance to adjust the step length of each focus. 1 meter, 1.5 meters, 3 meters, 6 meters, 10 meters and 20 meters are available. The default minimum focus distance is 1 meter

Step7. Set Power Off Memory

If the camera stop working for a longer time than predefined, the position of it will be recorded. And it will resume to the position after going back to the normal work from power off. You can set the resume time to 30 seconds, 60 seconds, 300 seconds or 600 seconds to record its position

Step8. Set Dehumidifying.

Fan Working Mode: Three fan working modes are available: General/Enhancement/Constant **General:** The fans are turned on from 4am to 7am and 5pm to 8pm every day

Enhancement: The fans are turned on from 5pm to 7am every day

Constant: The fans work 24 hours a day

Auto Home

The NVR supports setting Auto Home for PTZ camera. Auto Home allows the PTZ camera to return to a predefined Home Position automatically after a period of latency time.

You can set up the Auto Home feature by following steps:

Step1. Select channel and enable Auto Home.

Step2. Set a latency time to trigger Auto Home mode, 5-720s.

Step3. Select a predefined preset in the list, press "Call" to check the location. Also support to select current location.

PTZ Limits

The NVR supports setting PTZ Limits for PTZ camera. The PTZ camera can be programmed to move within the configurable PTZ Limits (Left/Right).

Step1. Check the checkbox to enable the PTZ Limit function.

Step2. Choose the limit mode as Manual limit or scanning limit.

- **Manual Limit:**

When Manual limit stops are set, you can operate the PTZ control panel manually only in the limited surveillance area.


- **Scan Limit:**

When Scan limit stops are set, the auto scan is performed only in the limited surveillance area.

Step3. Click the PTZ controller buttons to set the left/right limit stops; you can also call the defined presets and set them as the limits of the PTZ camera.

Step4. Click Set to save the limits or Clear to clear the limits.

Initial Position

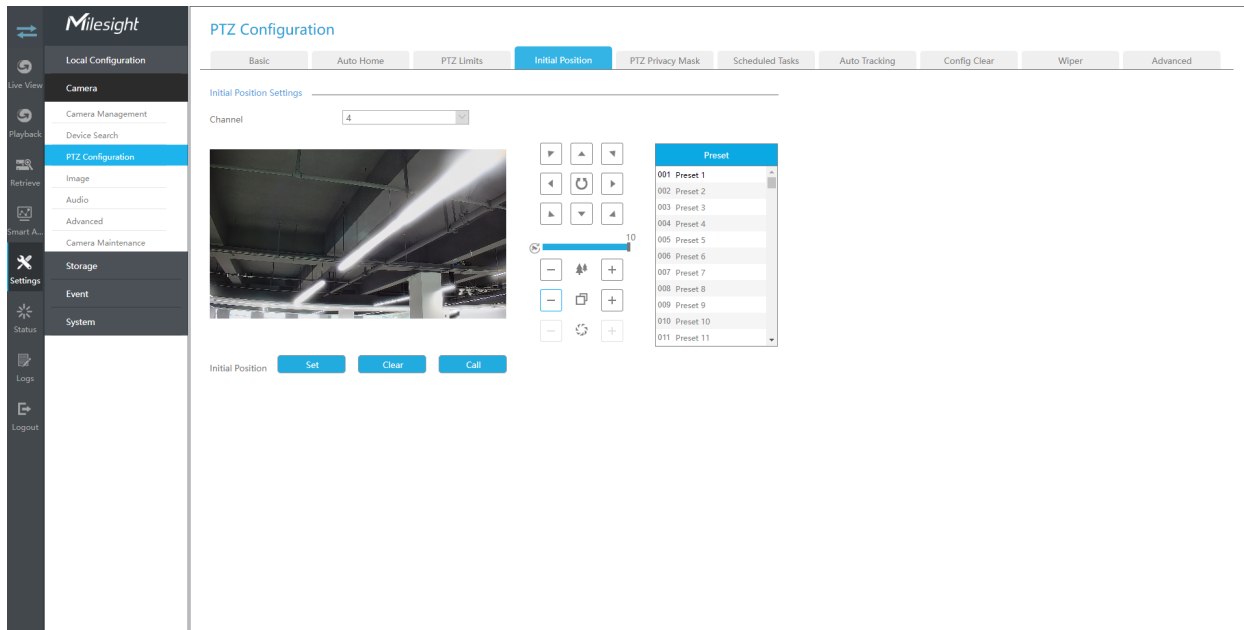

You can configure the Initial Position for PTZ cameras as a zero point.

Step1. Click the PTZ control buttons as the Initial Position of the PTZ bullet, you can also call a defined preset and set it as the Initial Position.

Step2. Click Set to save the position as the Initial Position.

PTZ Privacy Mask

The NVR supports setting privacy mask for PTZ camera. Different from the general Privacy Mask, it is featured with a 3D coordinate system to protect object's privacy and keep the specified area masked through manual operations from monitoring no matter how cameras pan/tilt/zoom.

The screenshot displays the 'PTZ Configuration' page in the Milesight NVR web interface. The 'PTZ Privacy Mask' tab is active, showing settings for channel 4. A live video feed is visible with a white privacy mask overlaid on a portion of the scene. Below the video, the 'Region Settings' section allows for configuring the mask type (Mask) and color (White). A table lists the configured privacy mask, and a 'Save' button is provided to apply the changes.

You can add a privacy mask by following steps:


Step1. Select channel and enable Privacy Mask.

Step2. Select the Region Type as Mask or Mosaic.

Step3. Drag the mouse to select the area which needs to be protected on the live view window and then click "Add" button to add the area to the table. You can add 24 masks and 4 mosaic areas at most and each zone can be enabled and disabled. Please note that the areas added to the table will not take effect until you click "Save".

Note:

- Ensure that your camera model isn't Lite series, or camera's version isn't 40.X.X.XX, 41.X.X.XX, and 46.X.X.XX.
- Ensure that your NVR version is V7x.9.0.14 or above, and camera version is Vxx.7.0.79 or above to support the mosaic area.

Step4. Click  to edit PTZ Privacy Mask Name, the Privacy Mask Type and Active Zoom Ratio.

The screenshot displays the MileSight NVR web interface. The left sidebar contains navigation options like Local Configuration, Camera, Playback, and Settings. The main content area is titled 'PTZ Configuration' and has several tabs: Basic, Auto Home, PTZ Limits, Initial Position, PTZ Privacy Mask (selected), Scheduled Tasks, Auto Tracking, Config Clear, Wiper, and Advanced. Under the 'PTZ Privacy Mask' tab, there are settings for Channel (4), PTZ Privacy Mask (checked), and Region Settings. A live camera feed shows a white rectangular mask over a portion of the scene. A dialog box titled 'PTZ Privacy Mask Edit' is overlaid on the feed, with fields for Name (PTZ Privacy Mask 1), Mask Color (White), and Active Zoom Ratio (1). Below the feed, there are buttons for 'Add', 'Clear', and 'Delete All'. A table lists the configured mask:

ID	Name	Type	Enable	Active Zoom Ratio	Edit	Area Edit	Delete
1	PTZ Privacy Mask 1	White	<input checked="" type="checkbox"/>	1			

Below the table, a note states: 'Support up to 24 mask and 4 mosaic areas.' A 'Save' button is located at the bottom of the configuration area.


Step4. Select "OK" to save the settings.

Note:

1. Ensure that your camera's version is 4X.7.0.73 or above.
2. There are two interfaces for Privacy Mask configuration. PTZ Privacy Mask is only applied in PTZ cameras while Privacy Mask can also be applied in other cameras.

Scheduled Tasks


The NVR supports setting scheduled tasks for PTZ camera. You can configure the PTZ camera to perform a certain action automatically in a user-defined time period.

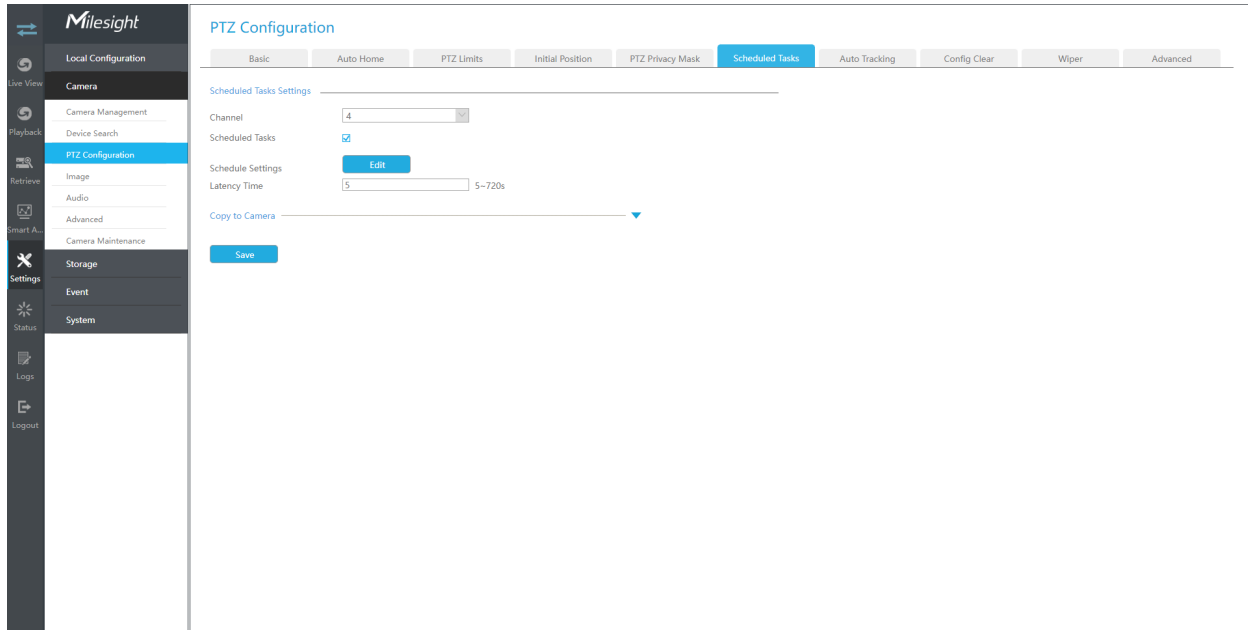

You can edit Scheduled Tasks by following steps:

Step1. Select channel and enable Scheduled Tasks.

Step2. Click **Edit** to set the schedule and task details.

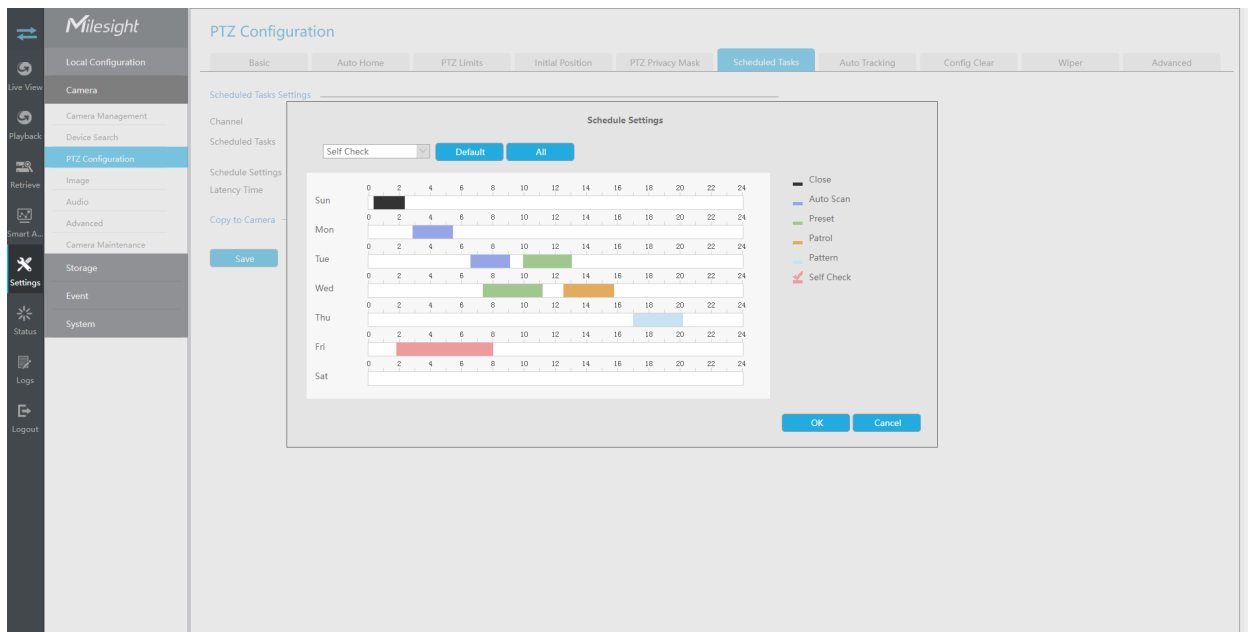

Step3. Set the Task Recovery Time (from 5 to 720 seconds). You can set the time(a period of inactivity) before the PTZ camera starts the schedule and task details.

Step4. Click **OK** to save all the configurations.

Note:

- The Schedule Tasks feature is only supported by the front-end version XX.8.0.3-c4-t4 of the IPC.
- The time of each task cannot be overlapped. Up to 10 tasks can be configured for each day.
- The Scheduled Tasks function is prior to Auto Home function. When these two functions are set at the same time, only the Scheduled Tasks function takes effect.
- You can click button to select or close all schedule of different kinds of tasks.

Auto tracking

PTZ camera series supports to track the moving objects automatically after you configure this function.

The screenshot displays the Misesight PTZ Configuration interface. The left sidebar shows the navigation menu with 'PTZ Configuration' selected. The main content area is titled 'PTZ Configuration' and has four tabs: 'Basic', 'PTZ Privacy Mask', 'Auto Tracking', and 'Advanced'. The 'Auto Tracking' tab is active, showing the following settings:

- Channel Event:** Channel is set to 4. Auto Tracking is checked. Report to Motion Detection is checked.
- Region Settings:** A live video feed of a conference room is shown. A region is defined by a blue box. A 'Preset' list on the right shows 11 presets (001 to 011).
- Auto Tracking Settings:** Show Tracking is checked. Sensitivity is set to 5. Max Tracking Time is 30 (5-300s). Tracking Zoom Ratio is set to Auto Mode. Tracking Object is set to Vehicle (Human and Vehicle checkboxes are present).
- Auto Tracking Schedule:** An 'Edit' button is visible.
- Copy to Camera:** A dropdown menu is present at the bottom.

Step1. Check the checkbox to enable Auto Tracking.

Step2. Enable "Report to Motion Detection" to trigger Motion Detection alarm during auto tracking.




Step3. Enable "Show Tracking" to show tracking in Auto Tracking function.


Step4. Set detection region.

Step5. Set detecting sensitivity.

Step6. Set Max. Tracking Time which must be between 5~300s. The camera will stop tracking when the tracking time is used up.

Step7. Select Tracking Zoom Ratio, which includes Auto Mode and Customize.

- Tracking Zoom Ratio is used to adjust the zoom ratio of the moving object when using Auto Tracking. PTZ would adjust the zoom ratio automatically according to the distance and speed of moving object under Auto Mode. If select Customize, PTZ would adjust to the zoom ratio you set before when tracking the target.
- How to set Customize Tracking Zoom Ratio:
 - Set zoom ratio by    button.
 - Click "Set" to save your configuration.

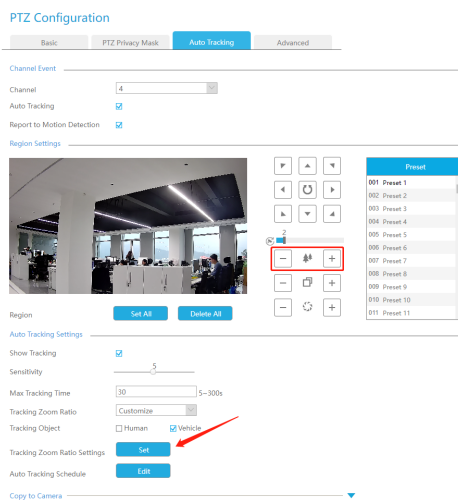


Step8. Check the type of tracking object as Human or Vehicle.

Step9. Click "Edit" to edit Auto Tracking Schedule which will be synchronized to IP Camera.

Step10. Click [Copy to Camera] to copy the same configuration to other channels.

Step11. Click "Save" to apply configurations.

 **Note:** Ensure that your camera's version is 4X.7.0.75 or above.


Config Clear

Here you can clear PTZ configurations, including all PTZ configurations, Presets, Patrols, Patterns, Auto Homes, PTZ Limits, Initial Position (PTZ Bullet), Privacy Masks and Scheduled Tasks.

The screenshot displays the Mlesight web interface for PTZ Configuration. The left sidebar contains navigation options: Local Configuration, Camera, Playback, Retrieve, Smart A.I., Settings, Status, Logs, and Logout. The main content area is titled 'PTZ Configuration' and features several tabs: Basic, Auto Home, PTZ Limits, Initial Position, PTZ Privacy Mask, Scheduled Tasks, Auto Tracking, Config Clear (selected), Wiper, and Advanced. The 'Config Clear Settings' section includes a 'Channel' dropdown menu set to '4'. Below this, the 'Config Clear' section contains a grid of checkboxes for clearing various configurations: All, All Presets, All Patrols, All Patterns, All Auto Homes, All PTZ Limits, All Scheduled Tasks, All Privacy Masks, Initial Position, and Auto Tracking. A 'Copy to Camera' dropdown menu is also present, and a 'Save' button is located at the bottom of the configuration area.

Wiper


Here you can turn on the smart wiper function to control the wiper of speed dome camera. After the smart wiper function is enabled, the wiper of the speed dome camera will automatically start working in rainy weather, and the working frequency of the wiper will be adjusted intelligently according to the rainfall.

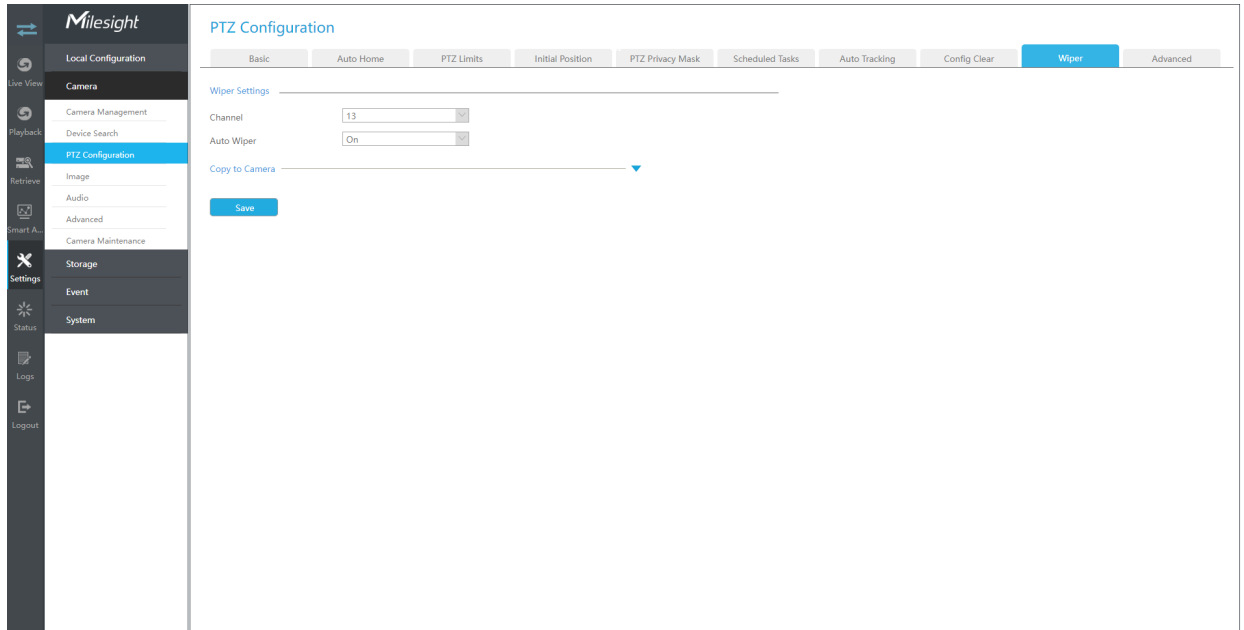

Note: The Wiper function is available in AI 36X/42X Speed Dome with Smart Rain-Sensing Wiper.

Advanced

Choose a channel and set the PTZ parameters. Besides, you can click "Copy" to copy the same configuration to other channels.

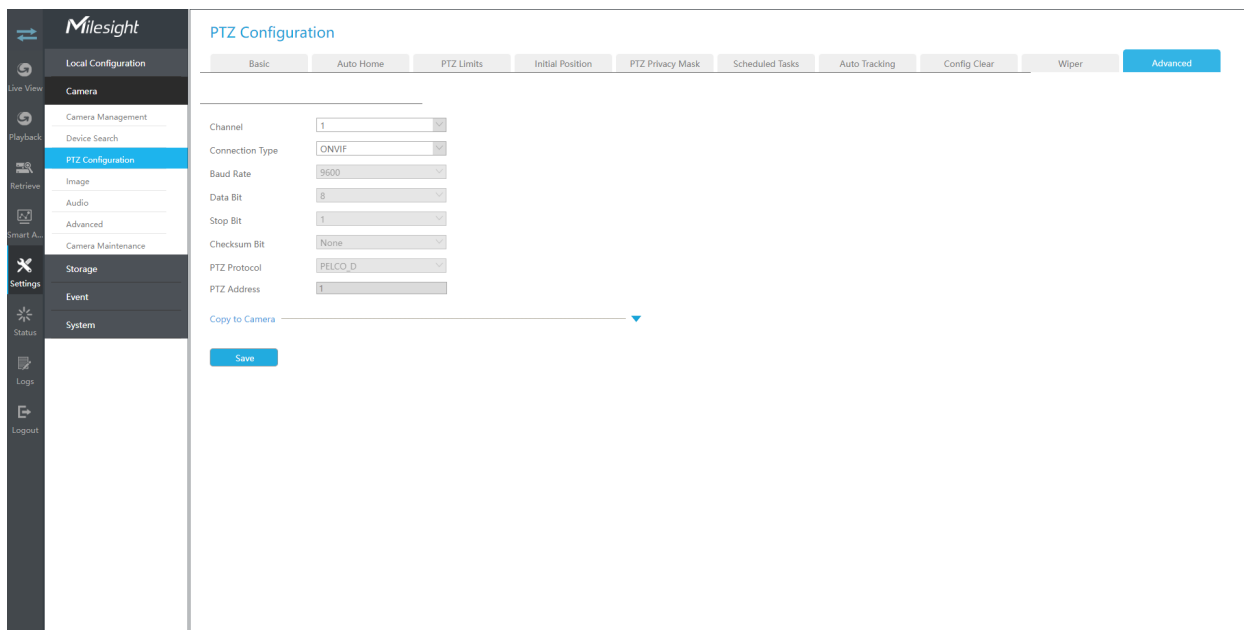


Note:

1. Settings for a PTZ camera must be configured before it can be used. Make sure that the PTZ and RS-485 of the NVR are connected properly.
2. The PTZ protocol and address of IP channel must be consistent with those of the PTZ decoder.

3.6.4 Image

3.6.4.1 Display

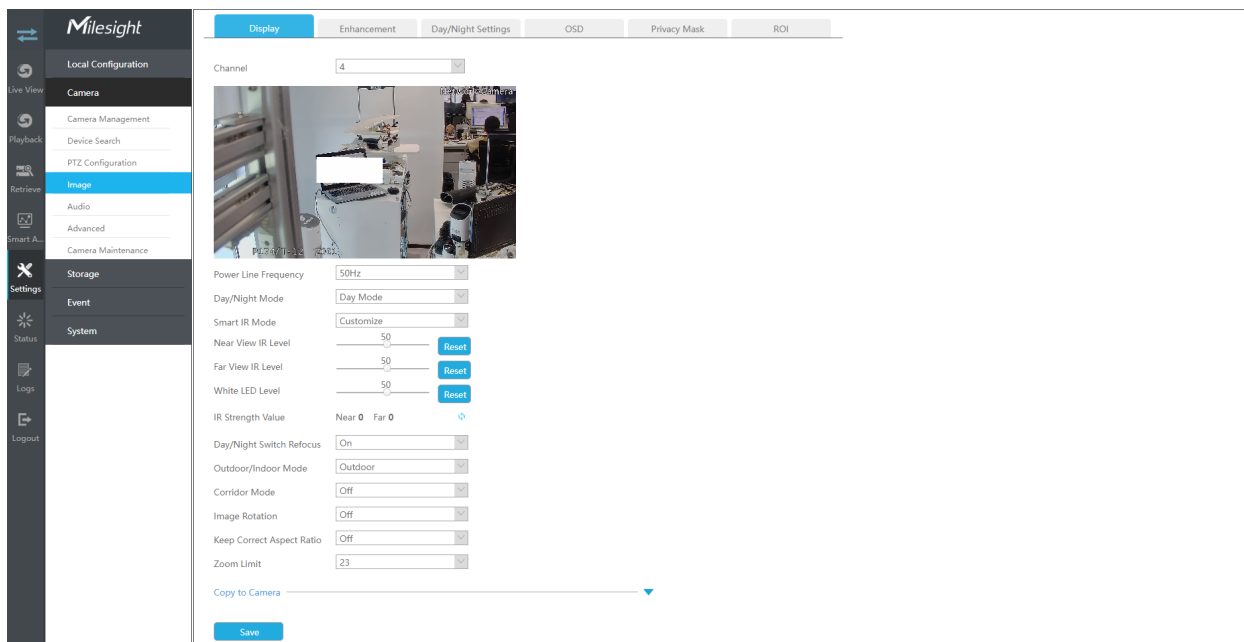

Step1. Select channel.

Step2. Set the configuration.

Power Line Frequency: 50Hz and 60Hz are available.

Day/Night Mode:Set the Day/Night mode for the channel.


White LED Light Control:There are four options available, you can select one to meet your need.

Auto mode: Automatically turn on/off LED lights with the change of day and night. You can adjust the sensitivity and delay time in this mode.

Always On: Keep LED lights on.

Off: Turn off LED lights.

Customize: You can set the time for turning on and off the LED lights.

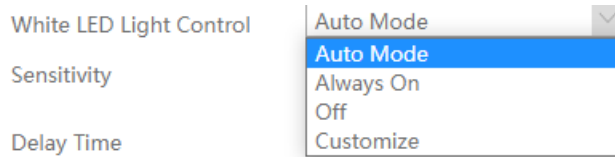

Note: Make sure the camera's model is MS-Cxx64-(R)UPD and version is 5x.7.0.77 or above

Smart IR Mode: With the combination of the High Beam and Low Beam, The IR LEDs technology has been upgraded to provide better image clarity and quality regardless of the object distance. Also, the Low Beam and High Beam's brightness can be adjusted manually or automatically on the basis of the Zoom ratio. Moreover, with the IR anti-reflection panel, the infrared light transmittance is highly increased. Support to set the strength of the IR to Auto Mode or Customize to achieve the best effect.

Near view IR level: Adjust the light strength of Low-Beams LED light level from 0 to 100.

Far view IR level: Adjust the light strength of High-Beams LED light level from 0 to 100.

White LED Level: Adjust the White LED level from 0 to 100.

IR Strength Value: The current value of Low-Beams LED and High-Beams LED light value.

IR LED Level: Adjust the IR LED level from 0 to 100.

Day/Night Switch Refocus: With this option enabled, the camera will refocus when switching between day mode and night mode.

Outdoor/Indoor Mode: Set Outdoor/Indoor mode for the channel.

Day to Night Sensitivity: Set the Sensitivity to trigger Night Mode.

Night to Day Sensitivity: Set the Sensitivity to trigger Day Mode.

Day to Night Value: Set the Minimum illumination intensity to trigger Night Mode.

Night to Day Value: Set the Maximum illumination intensity to trigger Day Mode.

IR Light Sensor Value: Shows the current value of IR light sensor.

Corridor Mode: Set corridor mode.

Image Rotation: Set image rotation.

Smoked Dome Cover: This function is only for Pro Dome. If Pro Dome is equipped with a Smoked Dome Cover, enable this function to display a normal image.

Local Display Video: Select NTSC or PAL for local display.

Keep Correct Aspect Ratio: With this option enabled, the camera will prevent the image from distortion when resolution ratio is changed.

Zoom Limit: Set the Zoom Limit.

 **Note:**


1. Smoked Dome Cover is only supported for Pro Dome and PTZ Dome cameras.
2. Smart IR Mode and IR LED Level are supported for cameras with IR LEDs.
3. White LED Level is only supported for PTZ Bullet cameras.
4. Day to Night Sensitivity and Night to Day Sensitivity under Auto Mode are only available under Auto Mode when camera are 180° Panoramic Bullet and Mini Bullet whose firmware version is 4X.7.0.74 or above.
5. White LED Light Control is only supported for MS-Cxx64-(R)UPD(camera version is 5x.7.0.77 or above).
6. Zoom Limit is only supported for the PTZ Network Camera with optical zoom of 20X or above.

Step 3. Copy the image settings to other channels by clicking "Copy to Camera" on the bottom of the windows.

Step 4. Select "Save" to save the settings.

3.6.4.2 Enhancement

You can set Image Enhancement on NVR, and the configuration will be synchronized to Camera.

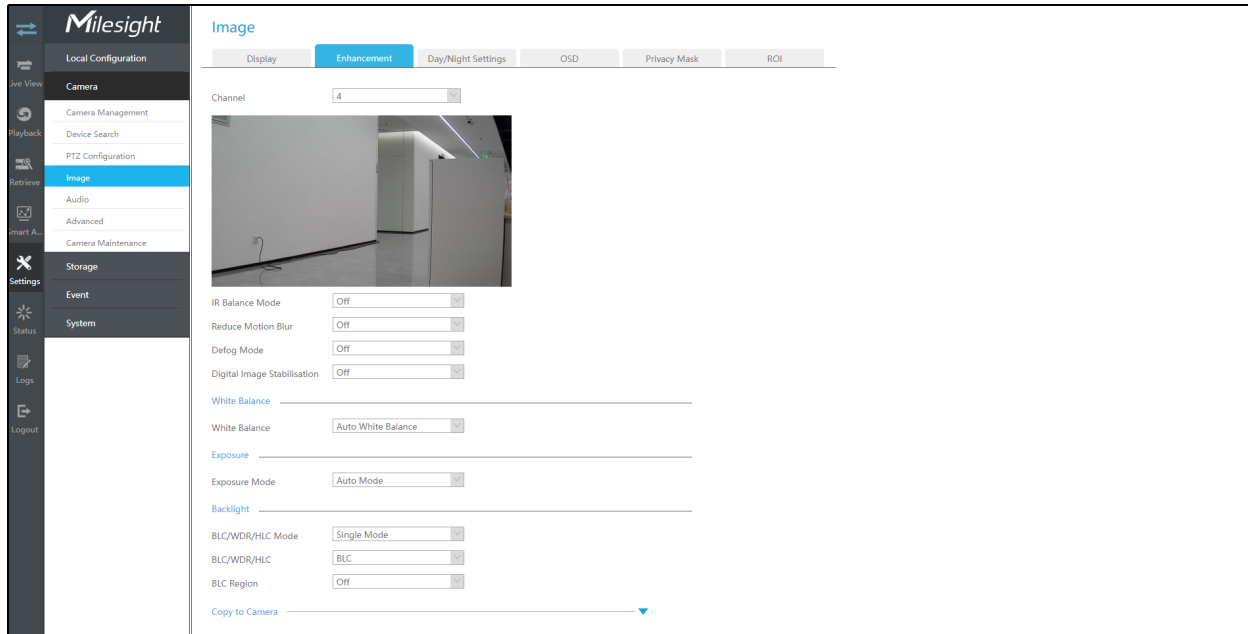

Step1. Select channel.

Step2. Set the configuration.

Reduce Motion Blur: Enable this function to reduce the motion blur of objects effectively.

You can adjust the deblur level from 1 to 100.

Reduce Video Stuttering: This function is only supported by the cameras of 5MP@20fps to decrease the unstable phenomenon.

White Balance: Choose a white balance mode for the channel.

Defog Mode: Better image effect in foggy weather.

Digital Image Stabilization: Decrease the blur and shakiness of the image.

Exposure Mode: Auto Mode, Manual Mode, and Schedule Mode are available.

IR Balance Mode: Turn on to avoid IR overexposure.

BLC/WDR/HLC Mode: Click to choose Single Mode, Day/Night Mode or Schedule Mode.

BLC/WDR/HLC: Click to configure Back Light Compensation, Wide Dynamic Range or High Light Control.

Wide Dynamic Range: Off, Customize, and On are available.

Wide Dynamic Level: Set WDR with Low/High/Auto level.

BLC Region: Off, Customize, and Centre are available (in single mode, only enable when WDR is disable).

HLC Level: Select level for HLC.


Anti-flicker Level: Reduce flickers that appear on screen in some lighting conditions and there are 10 levels of anti-flicker adjustments.

Step 3. Copy the image settings to other channels by clicking "Copy to Camera" on the bottom of the windows.



Step 4. Select "Save" to save the settings.

3.6.4.3 Day/Night Settings

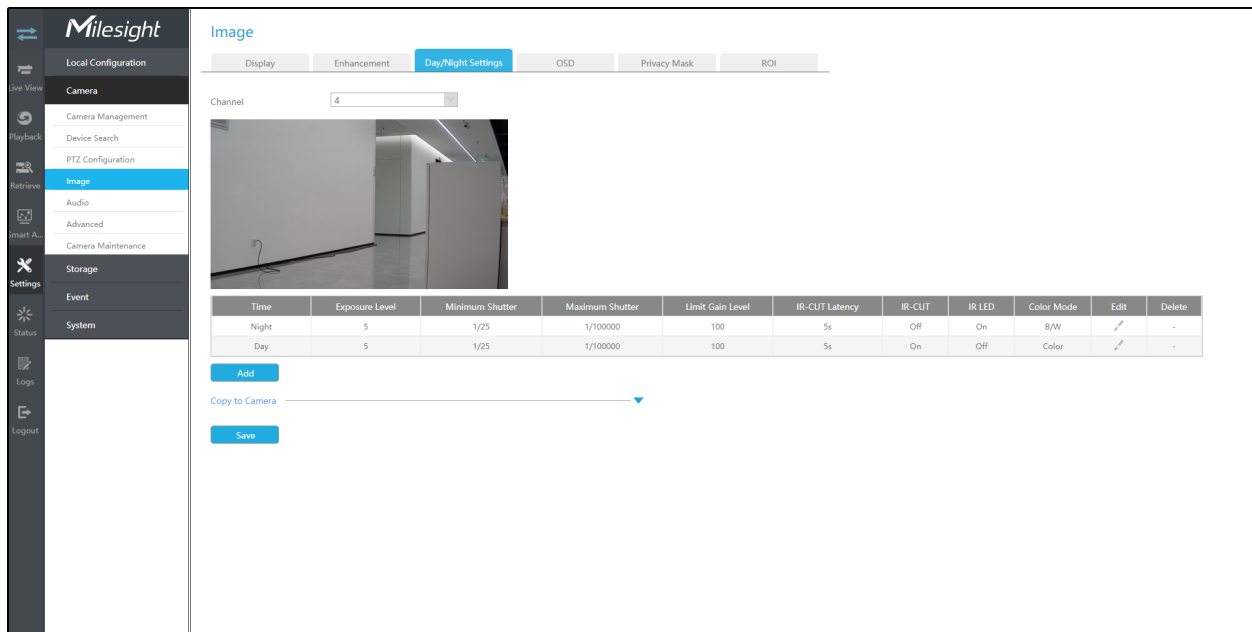

Step 1. Select channel.

Step 2. Set the configuration.

Exposure Level: Level 0~10 are available to meet your need.

Minimum Shutter: Set the Minimum Shutter to 1~1/100000s.

Maximum Shutter: Set the Maximum Shutter to 1~1/100000s.

Limit Gain Level: Set the Limit Gain Level to 1~100.

IR-CUT Latency: The interval time of switching one mode to another.

IR-CUT: Turn on or turn off IR-CUT.

IR LED: Turn on or turn off IR-LED.

Color Mode: Select B/W or Color mode under Day/Night mode.

Edit: Edit the parameters above.


Step 3. Copy the image settings to other channels by clicking "Copy to Camera" on the bottom of the windows.



Step 4. Select "Save" to save the settings.

3.6.4.4 OSD

You can set OSD (On Screen Display) on NVR, and the OSD will be synchronized to Camera.

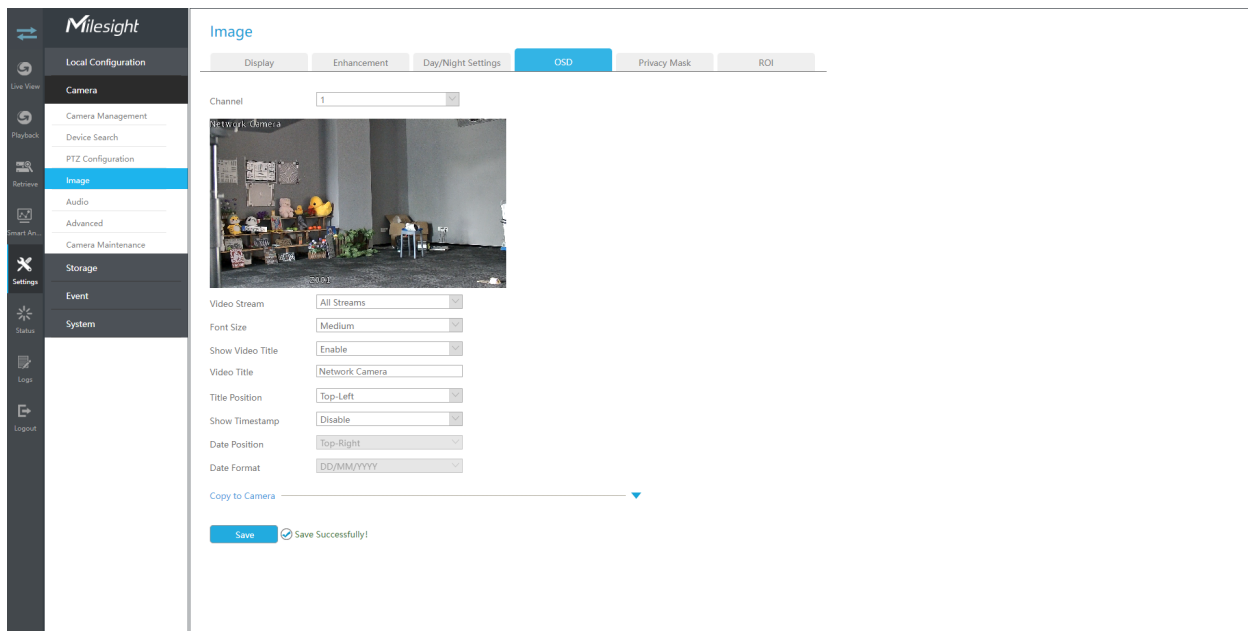

Step 1. Select channel.

Step 2. Select Video Stream, including All Streams, Primary Stream and Secondary Stream.

Step 3. Select OSD Font Size, including Smallest, Small, Medium, Large, Largest and Auto.

Step 4. Enable video title and timestamp.

Show Video Title: Enable it and the video title will be shown on screen.

Title Position: Set the position for the video title: Top-Left or Top-Right.

Date Position: Set the position for the date: Top-Left, Top-Right, Bottom-Left or Bottom-Right.

Date Format: Set format for date: YYYY-MM-DD, MM/DD/YY or DD/MM/YYYY.


Step 5. Copy the OSD settings to the other channels by clicking the "Copy to Camera" button on the button of the windows.

Step 6. Select "Save" to save the settings.



3.6.4.5 Privacy Mask

The NVR supports to set privacy mask. It is used to cover some privacy area which is not proper to appear on monitor.

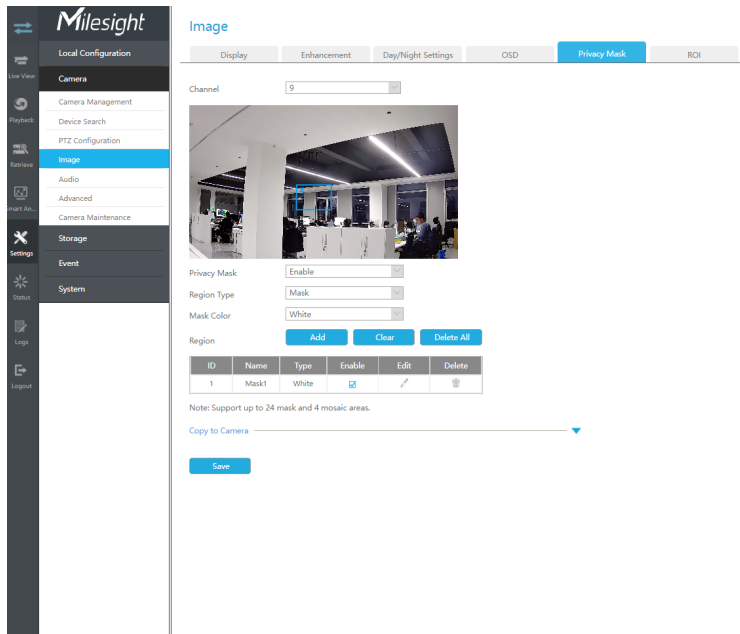

You can add a privacy mask by following steps:

Step1. Select channel and enable privacy mask.

Step2. Select the Region Type as Mask or Mosaic.

Step 3. Drag the mouse to select the area which needs to be protected on the live view window and then click "Add" button to add the area to the table. You can add 24 masks and 4 mosaic areas at most and each zone can be enabled and disabled. Please note that the areas added to the table will not take effect until you click "Apply".

Note:

- Ensure that your camera model isn't Lite series, or camera's version isn't 40.X.X.XX, 41.X.X.XX, and 46.X.X.XX.
- Ensure that your NVR version is V7x.9.0.14 or above, and camera version is Vxx.7.0.79 or above to support the mosaic area.


Step3. Copy the privacy area to the other channels by clicking the "Copy to Camera" button on the bottom of the windows.

Step4. Select "Save" to save the settings.

Note: Ensure the firmware version of the network camera is 4X.7.0.70 or above.

3.6.4.6 ROI

The NVR supports to set ROI (Region Of Interest). It is an image cropping feature designed to assist users in achieving bandwidth and storage optimization.

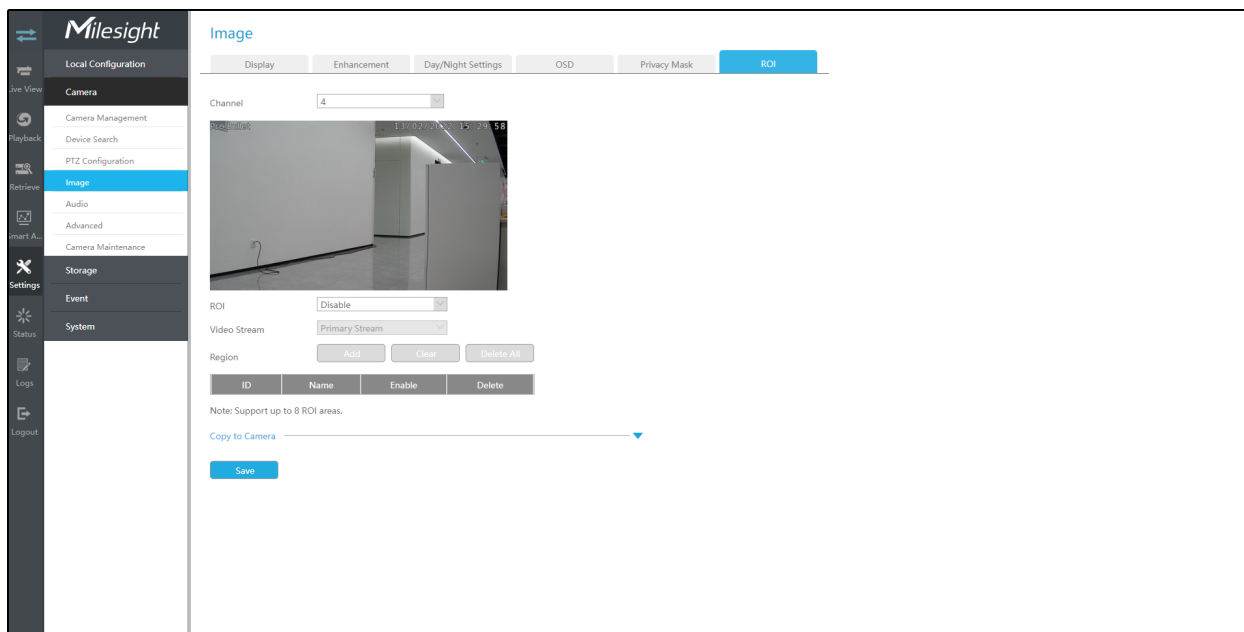

You can add a ROI by following steps:

Step1. Select channel and enable ROI.

Step2. Set the video stream type to achieve bandwidth and storage optimization, including Primary Stream and Secondary Stream. And drag the mouse to select the area in the preview window. Then click "Add"


button to add the area to the table. You can add 8 areas at most and each zone can be enabled and disabled. Please note that the areas added to the table will not take effect until you click "Apply".

Step3. Copy the ROI area to the other channels by clicking the "Copy to Camera" button on the bottom of the windows.

Step4. Select "Save" to save the settings.

Note: Ensure the firmware version of the network camera is 4X.7.0.70 or above.

3.6.5 Audio

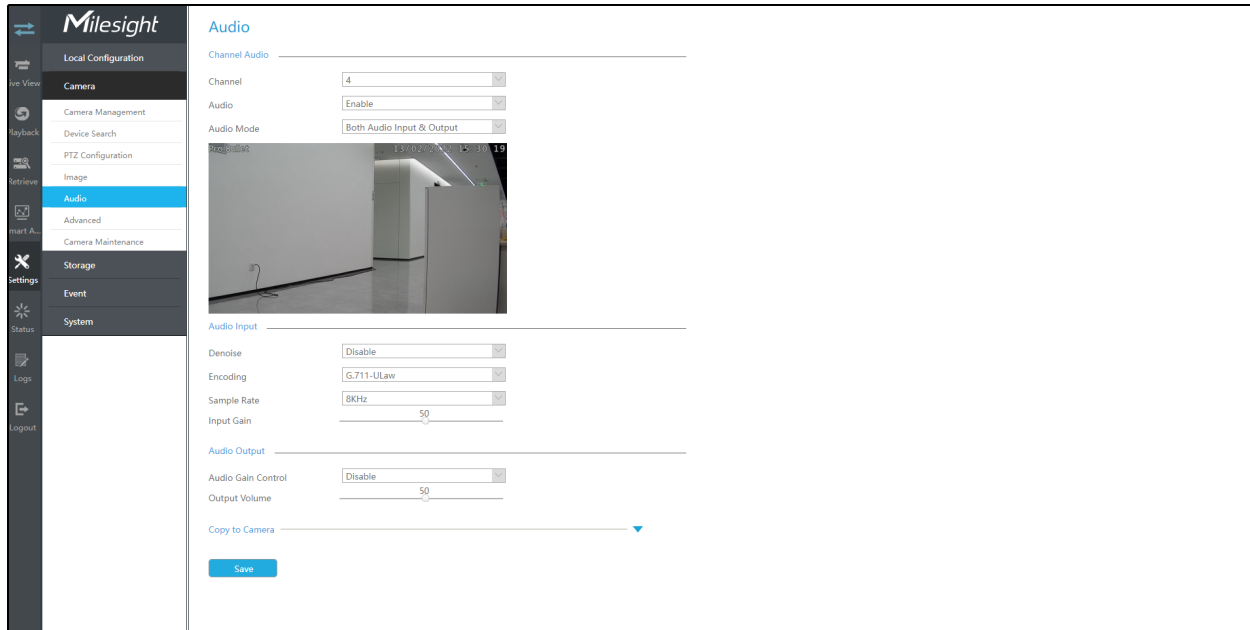

This audio function allows to configure the audio interface parameters for camera.

Enable Audio: Check on the check box to enable audio feature.

Denoise: Set it as On/Off. When you set the function on, the noise detected can be filtered.

Encoding: G.711-ULaw, G.711-ALaw, AAC LC, G.722 and G.726 are available.

Sample Rate: 8KHz, 16KHz, 32KHz, 44.1KHz, and 48KHz are available.

Audio Bit Rate: The function is available only for AAC LC, and supports up to 256kbps.

Input Gain: Input audio gain level, which is 0-100.

Auto Gain Control: This function is only for H.265 series, improve the quality of audio.

Output Volume: Adjust volume of output.

 **Note:** Make sure you camera version is xx.7.0.76 or above.


3.6.6 Advanced

3.6.6.1 Watermark

Advanced

Watermark

Channel



Watermark

Watermark String

Copy To Camera

Save

You can add a watermark by following steps:

Step 1. Select channel.

Step 2. Click the checkbox to enable Watermark.

Step 3. Enter Watermark String.

Step 4. Copy the image settings to other channels by clicking "Copy" on the bottom of the windows.

Step 5. Select "Apply" to save the settings.

 **Note:** Watermark only appears when exporting by a third party.

3.6.7 Camera Maintenance

Milesight NVRs support both Online Upgrade and Local Upgrade of Milesight Cameras. Also, Milesight NVRs support batch maintenance of cameras including Import&Export Configuration, Reboot, Reset, etc., making Milesight NVRs become the central management site to manage the cameras more easily.

Local Upgrade

Step 1. Click "Browse" and select the corresponding firmware you downloaded in your USB.

Camera Maintenance

Local Upgrade | Online Upgrade | Import/Export Config... | Reboot | Reset | Diagnosis Information | Logs

Upgrade

Firmware **Browse**

Reset settings to factory default (except IP Address and User information)

Upgrade **Refresh**

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Upgrade Progress
<input type="checkbox"/>	1	CAM1	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-app-a1	MS-C2971-X23RPE	-
<input type="checkbox"/>	2	CAM2	192.168.69.161	-	MSSP	1CC316282E02	45.8.0.2-r1	MS-CS341-X23PC	-
<input type="checkbox"/>	3	CAM3	192.168.69.135	-	MSSP				-
<input type="checkbox"/>	4	CAM4	192.168.69.166	-	MSSP				-
<input type="checkbox"/>	5	CAM5	192.168.69.182	-	MSSP				-
<input type="checkbox"/>	6	CAM6	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.1-r1	MS-C2962-TTIPA	-
<input type="checkbox"/>	7	CAM7	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
<input type="checkbox"/>	8	CAM8	192.168.69.161	-	MSSP				-
<input type="checkbox"/>	9	CAM9	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Step 2. Check if you need to reset settings to factory default (except IP Address and User Information) after upgrade.

Camera Maintenance

Local Upgrade | Online Upgrade | Import/Export Config... | Reboot | Reset | Diagnosis Information | Logs

Upgrade


Firmware **Browse**

Reset settings to factory default (except IP Address and User information)

Upgrade **Refresh**

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Upgrade Progress
<input type="checkbox"/>	1	CAM1	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-app-a1	MS-C2971-X23RPE	-
<input type="checkbox"/>	2	CAM2	192.168.69.161	-	MSSP	1CC316282E02	45.8.0.2-r1	MS-CS341-X23PC	-
<input type="checkbox"/>	3	CAM3	192.168.69.135	-	MSSP				-
<input type="checkbox"/>	4	CAM4	192.168.69.166	-	MSSP				-
<input type="checkbox"/>	5	CAM5	192.168.69.182	-	MSSP				-
<input type="checkbox"/>	6	CAM6	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.1-r1	MS-C2962-TTIPA	-
<input type="checkbox"/>	7	CAM7	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
<input type="checkbox"/>	8	CAM8	192.168.69.161	-	MSSP				-
<input type="checkbox"/>	9	CAM9	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-


Step 3. Choose the corresponding channel you want to upgrade and click "Upgrade" to upgrade the camera.

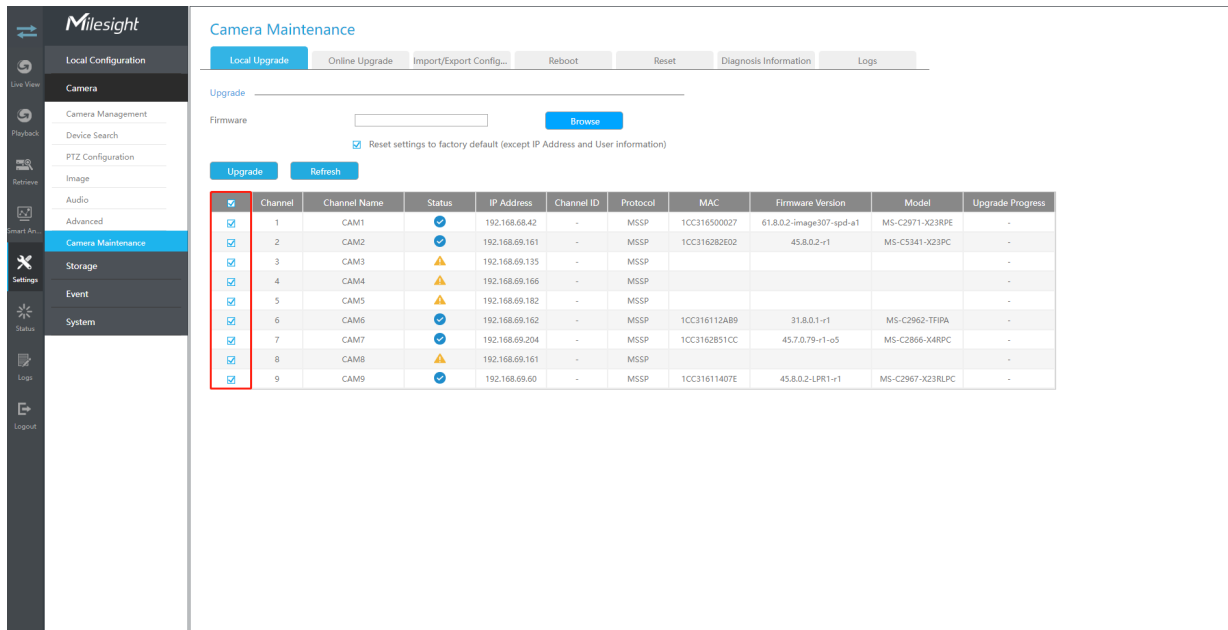

Online Upgrade

Step 1. Click "Check" to confirm whether there is a new version for the camera added to NVR.

If there is a new version for camera, the icon  in corresponding Upgrade column will turn blue and the latest version will be displayed in Latest Version column.

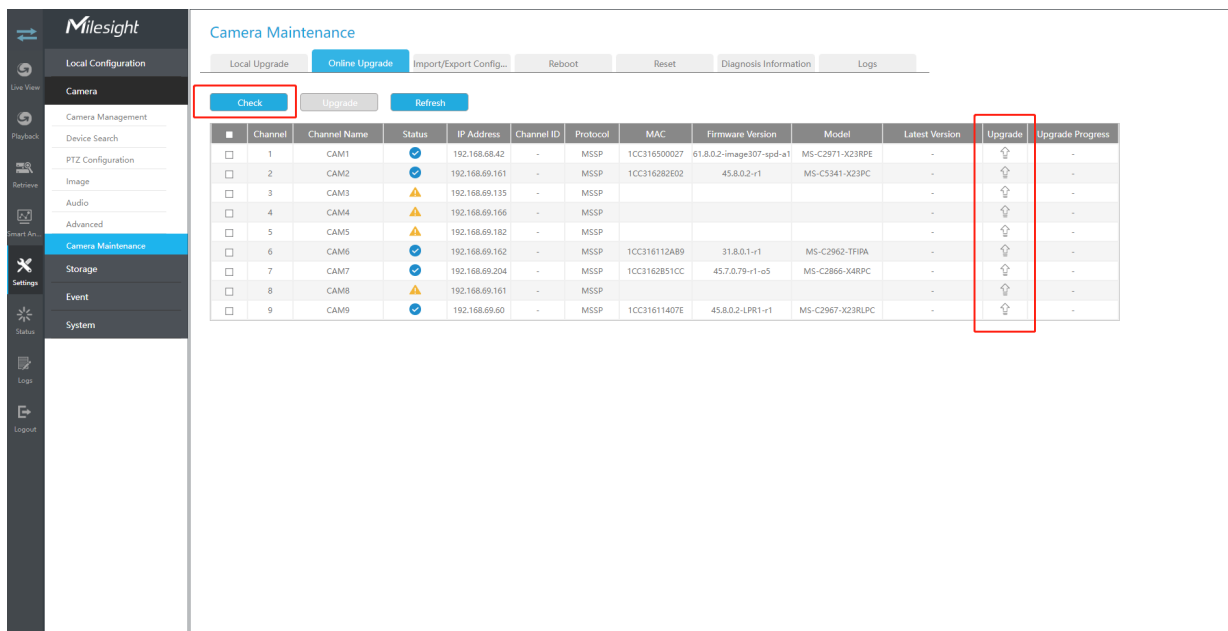

Step 2. There are two ways to confirm the upgrade.

- Click the blue icon in corresponding Upgrade column to upgrade camera.

Camera Maintenance

Local Upgrade Online Upgrade

Check Upgrade Refresh

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Latest Version	Upgrade	Upgrade Progress
<input type="checkbox"/>	1	CAM1	192.168.69.60	-	MSSP	1CC3162A0733	45.8.0.1-LPR_EU-t1	MS-C2967-X23RLPC	-	⬆️	-
<input type="checkbox"/>	2	CAM2	192.168.69.66	-	MSSP	1CC3162AB1E6	45.8.0.1-web-a5	MS-C2975-RFPC	-	⬆️	-
<input type="checkbox"/>	4	CAM4	192.168.69.107	-	MSSP	1CC316222220	43.7.0.78-r1	MS-C2962-RFPB	-	⬆️	-

- A way to achieve batch upgrade. Just select the cameras you want to upgrade and then click "Upgrade" button.

Camera Maintenance

Local Upgrade Online Upgrade

Check Upgrade Refresh

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Latest Version	Upgrade	Upgrade Progress
<input checked="" type="checkbox"/>	1	CAM1	192.168.69.60	-	MSSP	1CC3162A0733	45.8.0.1-LPR_EU-t1	MS-C2967-X23RLPC	-	⬆️	-
<input checked="" type="checkbox"/>	2	CAM2	192.168.69.66	-	MSSP	1CC3162AB1E6	45.8.0.1-web-a5	MS-C2975-RFPC	-	⬆️	-
<input checked="" type="checkbox"/>	4	CAM4	192.168.69.107	-	MSSP	1CC316222220	43.7.0.78-r1	MS-C2962-RFPB	-	⬆️	-

Import/Export Configuration

Step 1. Choose the corresponding channel you want to import/export configuration files.

The screenshot shows the 'Camera Maintenance' page with the 'Import/Export Config' tab active. Below the 'Import Configuration File' section, there is a table of camera channels. The first column of the table contains checkboxes, all of which are checked. A red box highlights this column. The table columns are: Channel, Channel Name, Status, IP Address, Channel ID, Protocol, MAC, Firmware Version, Model, and Progress.

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Progress
1	CAM1	✔	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
2	CAM2	✔	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
3	CAM3	⚠	192.168.69.135	-	MSSP				-
4	CAM4	⚠	192.168.69.166	-	MSSP				-
5	CAM5	⚠	192.168.69.182	-	MSSP				-
6	CAM6	✔	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TFIPA	-
7	CAM7	✔	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-e5	MS-C2866-X48PC	-
8	CAM8	⚠	192.168.69.161	-	MSSP				-
9	CAM9	✔	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

• **Import Configuration File:**

Step 2. Click "Browse" and select a .cfg file.

Step 3. Click "Import" to import a configuration file.

The screenshot shows the 'Camera Maintenance' page with the 'Import/Export Config' tab active. The 'Configuration File' input field is empty. The 'Browse' button is highlighted with a red box and labeled '1'. The 'Import' button is highlighted with a red box and labeled '2'. The table of camera channels is visible below, with all checkboxes in the first column checked.

• **Export Configuration File:**

Step 2. Click "Backup" to export configuration file.

The screenshot shows the Milesight web interface. The left sidebar contains navigation options like 'Local Configuration', 'Camera', 'Storage', 'Event', and 'System'. The main content area is titled 'Camera Maintenance' and has several tabs: 'Local Upgrade', 'Online Upgrade', 'Import/Export Config', 'Reboot', 'Reset', 'Diagnosis Information', and 'Logs'. The 'Import/Export Config' tab is active. It features an 'Import Configuration File' section with a 'Browse' button and an 'Import' button. Below it is an 'Export Configuration File' section with a 'Backup' button highlighted by a red rectangle. At the bottom, there is a 'Channel' section with a 'Refresh' button and a table of camera channels.

<input type="checkbox"/>	Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Progress
<input checked="" type="checkbox"/>	1	CAM1	●	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2	●	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3	▲	192.168.69.135	-	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4	▲	192.168.69.166	-	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5	▲	192.168.69.182	-	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6	●	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TFIPA	-
<input checked="" type="checkbox"/>	7	CAM7	●	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-e05	MS-C2866-X48PC	-
<input checked="" type="checkbox"/>	8	CAM8	▲	192.168.69.161	-	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9	●	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Reboot

Step 1. Choose the corresponding channel you want to reboot.

The screenshot shows the Milesight web interface with the 'Reboot' tab selected. The 'Reboot' button is highlighted with a red box. Below it is a 'Refresh' button and a table of camera channels. The first row of the table is also highlighted with a red box.

<input type="checkbox"/>	Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Reboot Progress
<input checked="" type="checkbox"/>	1	CAM1	●	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2	●	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3	▲	192.168.69.135	-	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4	▲	192.168.69.166	-	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5	▲	192.168.69.182	-	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6	●	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TFIPA	-
<input checked="" type="checkbox"/>	7	CAM7	●	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-e05	MS-C2866-X48PC	-
<input checked="" type="checkbox"/>	8	CAM8	▲	192.168.69.161	-	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9	●	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Step 2. Click “Reboot” button to restart the selected channels.

The screenshot shows the Milesight NVR web interface. On the left is a navigation menu with options like Local Configuration, Camera, and Camera Maintenance. The main area is titled 'Camera Maintenance' and contains several tabs: Local Upgrade, Online Upgrade, Import/Export Config..., Reboot, Reset, Diagnosis Information, and Logs. The 'Reboot' tab is active and highlighted with a red box. Below the tabs are two buttons: 'Reboot' and 'Refresh'. A table lists 9 channels with their respective details. All channels have their checkboxes selected.

<input checked="" type="checkbox"/>	Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Reboot Progress
<input checked="" type="checkbox"/>	1	CAM1	●	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-ispd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2	●	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-C5341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3	▲	192.168.69.135	-	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4	▲	192.168.69.166	-	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5	▲	192.168.69.182	-	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6	●	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TTIPA	-
<input checked="" type="checkbox"/>	7	CAM7	●	192.168.69.204	-	MSSP	1CC3162B51CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
<input checked="" type="checkbox"/>	8	CAM8	▲	192.168.69.161	-	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9	●	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Reset

Step 1. Choose the corresponding channel you want to reset.

Step 2. Enable the “Keep the IP” option to keep the IP configuration when resetting the selected channels. And enable the “Keep the User” option to keep the User configuration when resetting the selected channels.

Step 3. Click “Reset” button to reset the selected cameras to factory default settings.

Camera Maintenance

Local Upgrade Online Upgrade Import/Export Config... Reboot **Reset** Diagnosis Information Logs

Keep the IP Configuration
 Keep the User Information

Reset Refresh

	Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Reset Progress
<input checked="" type="checkbox"/>	1	CAM1	●	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2	●	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3	▲	192.168.69.135	-	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4	▲	192.168.69.166	-	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5	▲	192.168.69.182	-	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6	●	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TI9PA	-
<input checked="" type="checkbox"/>	7	CAM7	●	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
<input checked="" type="checkbox"/>	8	CAM8	▲	192.168.69.161	-	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9	●	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Diagnosis Information

Step 1. Choose the corresponding channel you want to diagnose the information.

Step 2. Click “Backup” button to export the diagnosis file .

Camera Maintenance

Local Upgrade Online Upgrade Import/Export Config... Reboot Reset **Diagnosis Information** Logs

Backup Refresh

	Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Backup Progress
<input checked="" type="checkbox"/>	1	CAM1	●	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
<input checked="" type="checkbox"/>	2	CAM2	●	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
<input checked="" type="checkbox"/>	3	CAM3	▲	192.168.69.135	-	MSSP				-
<input checked="" type="checkbox"/>	4	CAM4	▲	192.168.69.166	-	MSSP				-
<input checked="" type="checkbox"/>	5	CAM5	▲	192.168.69.182	-	MSSP				-
<input checked="" type="checkbox"/>	6	CAM6	●	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TI9PA	-
<input checked="" type="checkbox"/>	7	CAM7	●	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
<input checked="" type="checkbox"/>	8	CAM8	▲	192.168.69.161	-	MSSP				-
<input checked="" type="checkbox"/>	9	CAM9	●	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

Logs

The user can check, search and export channel logs in Logs interface. By selecting the Main Type, Sub Type, Start Time and End Time, which can narrow down the scale of logs, you can search for logs that you need.

Step 1. Choose the corresponding channel you want to search for logs.

Step 2. Select the Main Type, Sub Type, Start Time and End Time

Step 3. Click "Backup" to export searched logs to media device.


The screenshot displays the Milesight NVR web interface. The left sidebar contains navigation options: Local Configuration, Camera, Storage, Event, and System. The main content area is titled "Camera Maintenance" and includes tabs for Local Upgrade, Online Upgrade, Import/Export Config..., Reboot, Reset, Diagnosis Information, and Logs. The Logs tab is active, showing search filters for Main Type (All Types), Sub Type (All), Start Time (2022-10-17 00:00:00), and End Time (2022-10-17 23:59:59). A Backup button is visible below the filters. Below the filters is a table with the following data:

Channel	Channel Name	Status	IP Address	Channel ID	Protocol	MAC	Firmware Version	Model	Backup Progress
1	CAM1	✓	192.168.68.42	-	MSSP	1CC316500027	61.8.0.2-image307-spd-a1	MS-C2971-X23RPE	-
2	CAM2	✓	192.168.69.161	-	MSSP	1CC316282E02	45.8.25.3-a4	MS-CS341-X23PC	-
3	CAM3	⚠	192.168.69.135	-	MSSP				-
4	CAM4	⚠	192.168.69.166	-	MSSP				-
5	CAM5	⚠	192.168.69.182	-	MSSP				-
6	CAM6	✓	192.168.69.162	-	MSSP	1CC316112AB9	31.8.0.3-a4	MS-C2962-TFIPA	-
7	CAM7	✓	192.168.69.204	-	MSSP	1CC3162851CC	45.7.0.79-r1-o5	MS-C2866-X48PC	-
8	CAM8	⚠	192.168.69.161	-	MSSP				-
9	CAM9	✓	192.168.69.60	-	MSSP	1CC31611407E	45.8.0.2-LPR1-r1	MS-C2967-X23RLPC	-

3.7 Storage


Preparation for Record

Step1. Ensure your NVR has been installed and the HDD has been initialized, please check it on "Storage" -> "Disk Management" interface.

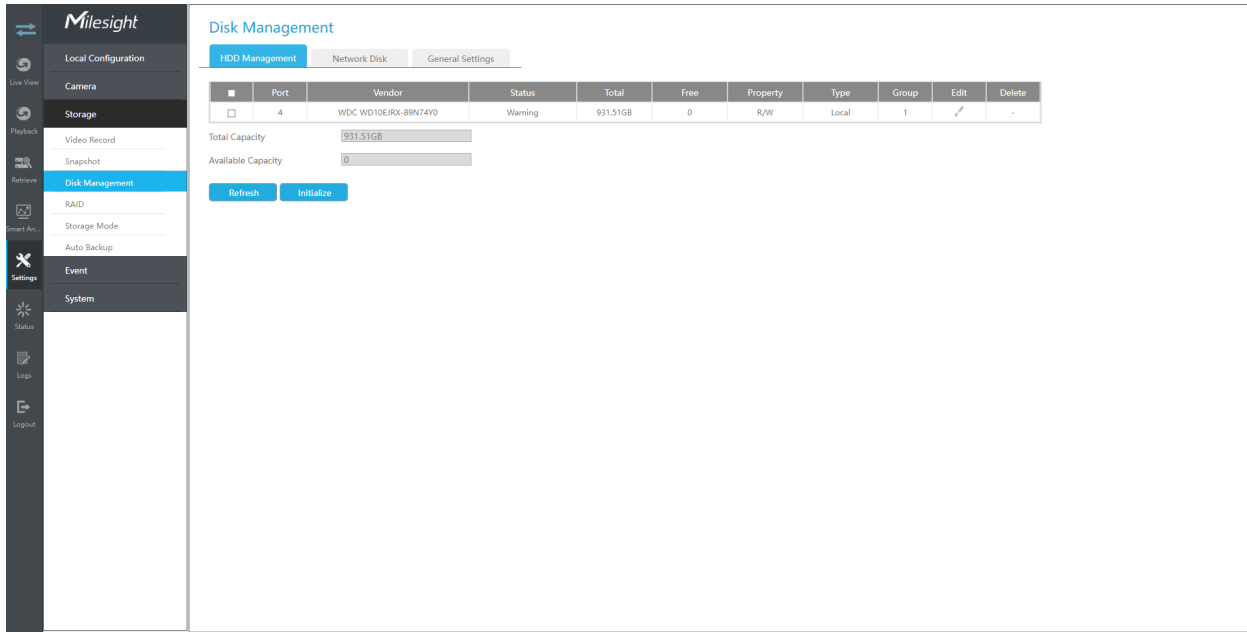


Step2. Ensure that the HDD has sufficient storage space.

Enable [Recycle Mode] in the case of insufficient capacity of storage device on Storage -> Disk Management -> General Settings interface .

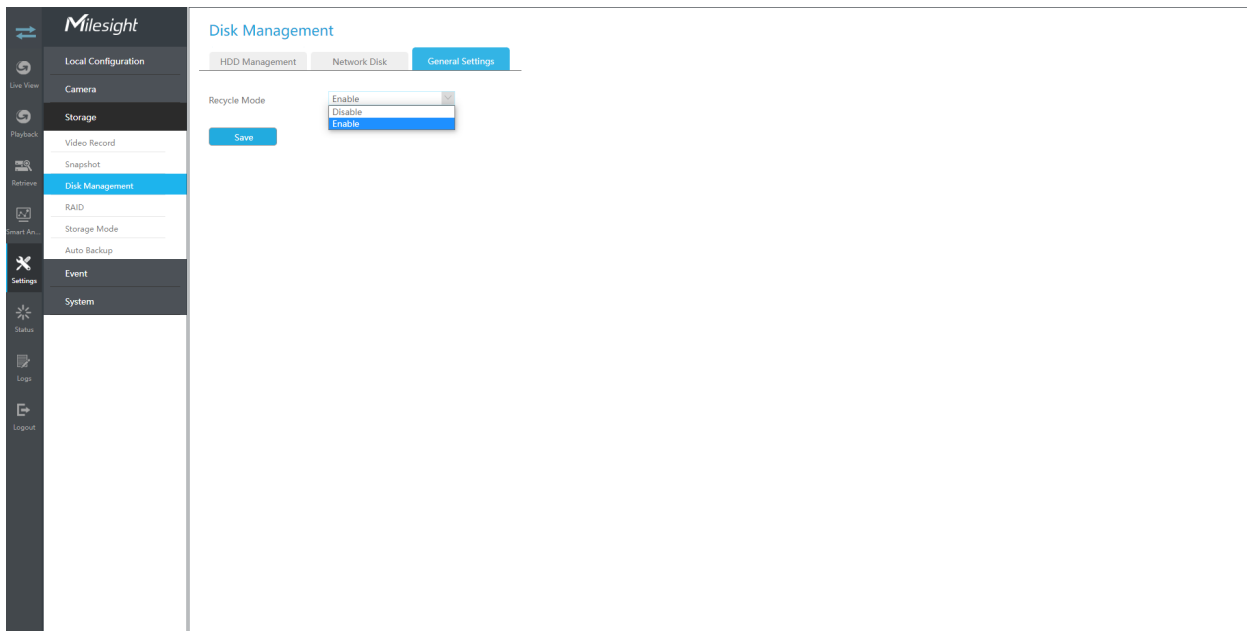

Recycle Mode: You can enable or disable Recycle Mode for all storage device.


eSATA Function: Both storage and backup are available.

 **Note:** eSATA Function is only available for NVR 8000 Series.

3.7.1 Video Record

Record Schedule

Step 1. Select channel.

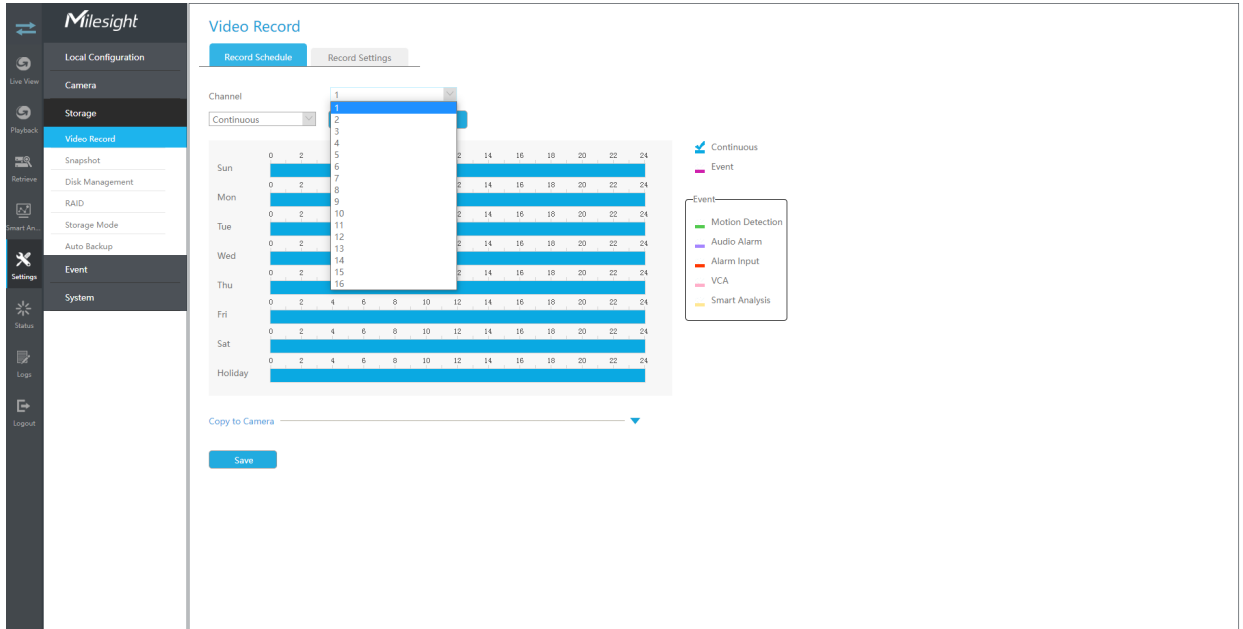

The screenshot displays the 'Video Record' configuration interface. The 'Record Schedule' tab is active, showing a 24-hour time table for each day of the week (Sun-Sat) and a 'Holiday' row. The table has columns for hours 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, and 24. A legend on the right indicates 'Continuous' (blue bar) and 'Event' (pink bar). The 'Event' legend includes Motion Detection (green), Audio Alarm (purple), Alarm Input (orange), VCA (red), and Smart Analysis (yellow). At the bottom, there is a 'Copy to Camera' dropdown and a 'Save' button.

Step 2. Set record schedule.

Select operation type: Continuous, Event (including Motion, Alarm, VCA and Smart Analysis) or Erase. Then drag a square in the time table to set record effective time. It is convenient for you to set or clear all corresponding schedule by clicking "Select All" or "Clear All".

Channel 1

Continuous ▼ Select All Clear All

The interface displays a 24-hour grid for each day of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and a 'Holiday' row. Each day's grid has time markers at 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, and 24. A blue bar indicates continuous recording for all days. A legend on the right shows event types: Continuous (blue checkmark), Event (purple line), Motion Detection (green line), Alarm (red line), VCA (pink line), and Smart Analysis (yellow line).

Copy to Camera ▼

Save

Also, you can click the time bar and reedit the record time.

The screenshot shows a close-up of the time bar editing interface. A time selection dialog box is open, showing a range from 02:08 to 24:00. Below the dialog, a green bar is visible on the time axis, indicating a specific recording event.

Click to copy time setting to other days.

The screenshot shows the 'Copy To...' dialog box. It has a 'Select All' checkbox and checkboxes for each day of the week: Sun, Mon, Tue, Wed, Thu, Fri, Sat, and Holiday. The 'Sat' checkbox is checked. There are 'OK' and 'Cancel' buttons at the bottom. A red box highlights the copy icon in the background interface.

Step 3. Click [Copy to Camera] to copy the same record configuration to other channels.

Copy to Camera

All

- 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
- 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
- 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
- 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64


Note: Here are steps for setting ANPR record correctly so that NVR will record when license plate is detected.

Step 1: Set Smart Analysis as Record Type in Storage -> Video Record -> Record Schedule interface; The exclamation mark next to Smart Analysis is used to indicate that Smart Analysis includes ANPR.

The screenshot shows the 'Video Record' configuration page. The 'Record Schedule' tab is selected. Under 'Channel', a dropdown menu shows '1'. Below that, a 'Smart Analysis' dropdown menu is open, displaying a list of event types: Motion Detection, Alarm, VCA, and Smart Analysis. The 'Smart Analysis' option is highlighted with a red box and a red arrow. The main area of the page shows a 7-day grid (Sun through Holiday) with yellow bars indicating recording schedules for all days from 0 to 24 hours. A 'Save' button is located at the bottom of the page.


Step 2: Ensure Black List Mode or White List Mode or Visitor Mode is enabled as your demand.

Step 3: Effective time and Trigger Channels Record action of Black List Mode/White List Mode/Visitor Mode are set (Full effective time and trigger channel record are set by default).

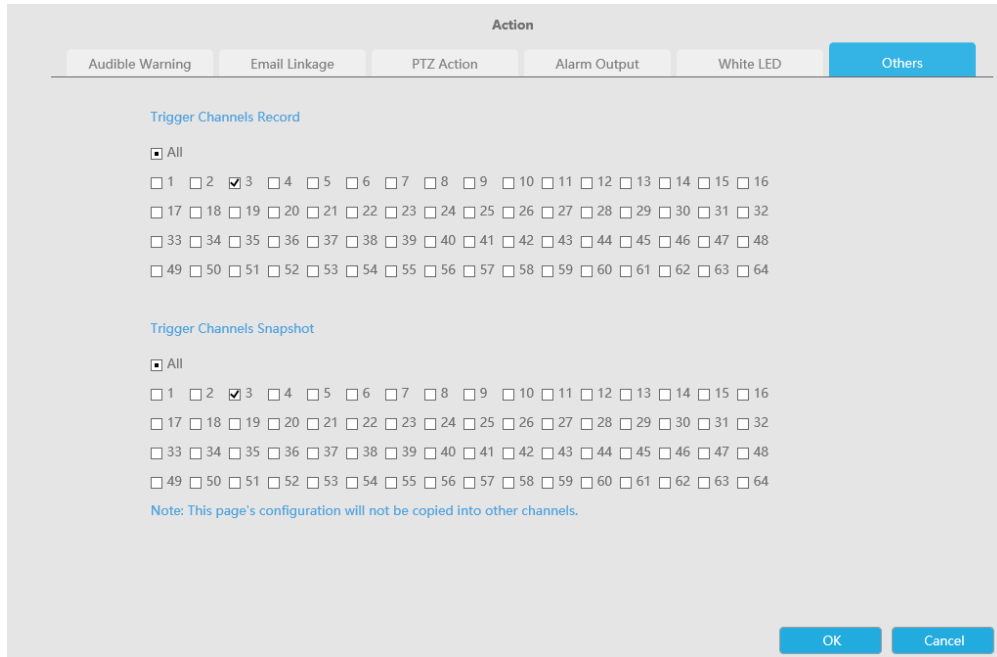

Record Settings

Make general configuration for selected channels. Click [Copy to Camera] to copy the same configuration to other channels.

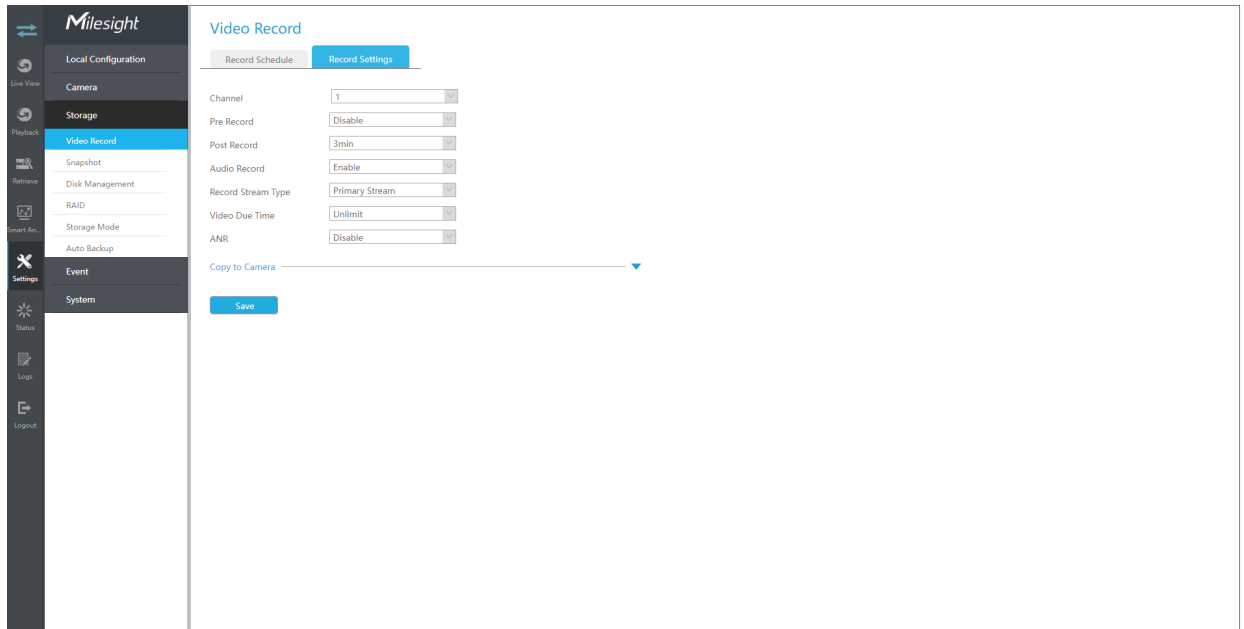

Channel: Select the channel which will be set.

Pre Record : Event pre-record duration time. It will start recording before the event is triggered.

Post Record: Event post-record duration time. It will keep recording after the event is over.


Audio Record: Select to record audio or not.

Record Stream Type: Select Main stream or sub stream for record. Primary+Secondary Stream is available for NVR model ends with T & G and make sure the version of the G series is 7X.9.0.19 or above.

. If secondary stream is selected for recording while it is disabled, a prompt indicating that the secondary stream is unavailable will pop up.

Video Due Time: Set the due time of recording files, 1~120days or unlimit are available.

ANR (Automatic Network Replenishment) : Can automatically replenish the recording gap due to internet interruptions. As the picture shows below, NVR stores videos when the network connection between NVR and cameras is normal. When the connection lost, the camera would start continuous recording and store videos in SD card instead. Then after reconnection, NVR automatically retrieves the missed videos from camera's SD card in a period of time to prevent data missing.

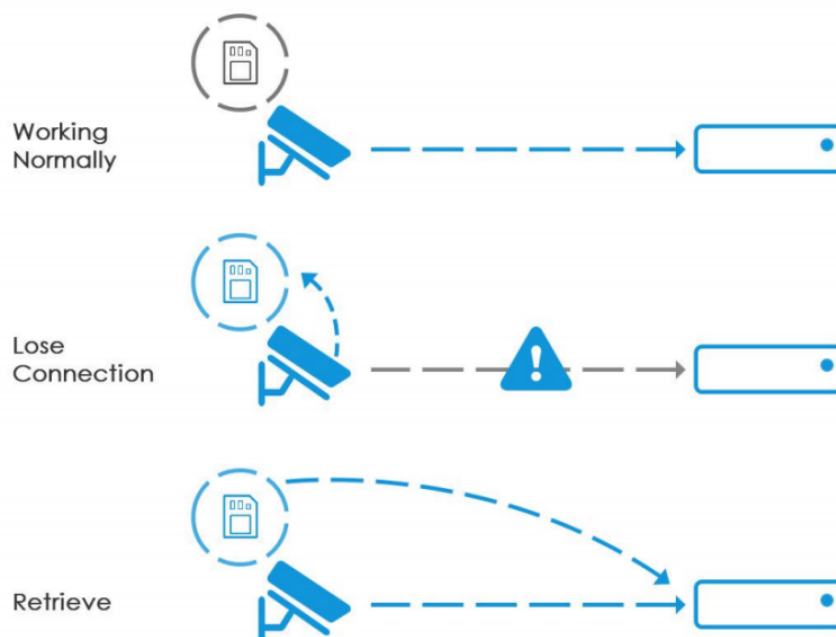

Here are some notes for using ANR below:

 **Note:**

1. Ensure that your devices are with the correct firmware versions.
 - Camera: V4X.7.0.72 or above
 - NVR: V7X.9.0.6 or above
 - Firmware download link: <https://www.milesight.com/support/download#firmware>
2. Camera should be equipped with on-board SD card.
3. Camera should be added to NVR by MSSP protocol.
4. No matter whether NVR has recording schedule or not, camera will do ANR recording and then retrieve back to NVR after reconnection.

No matter whether NVR has recording schedule or not, camera will do ANR recording and then retrieve back to NVR after reconnection.

3.7.2 Snapshot


Note: NVR models ending with the letter C do not support this function.

Snapshot Schedule


Step 1. Select channel.


Step 2. Set snapshot schedule.

Select operation type: Continuous, Event or Erase. Event record includes events like Motion Detection, Alarm, VCA and Smart Analysis, which can be searched in Event Playback. Then drag a square in the time table to set record effective time. It is convenient for you to set or clear all corresponding schedule by clicking "Select All" or "Clear All".

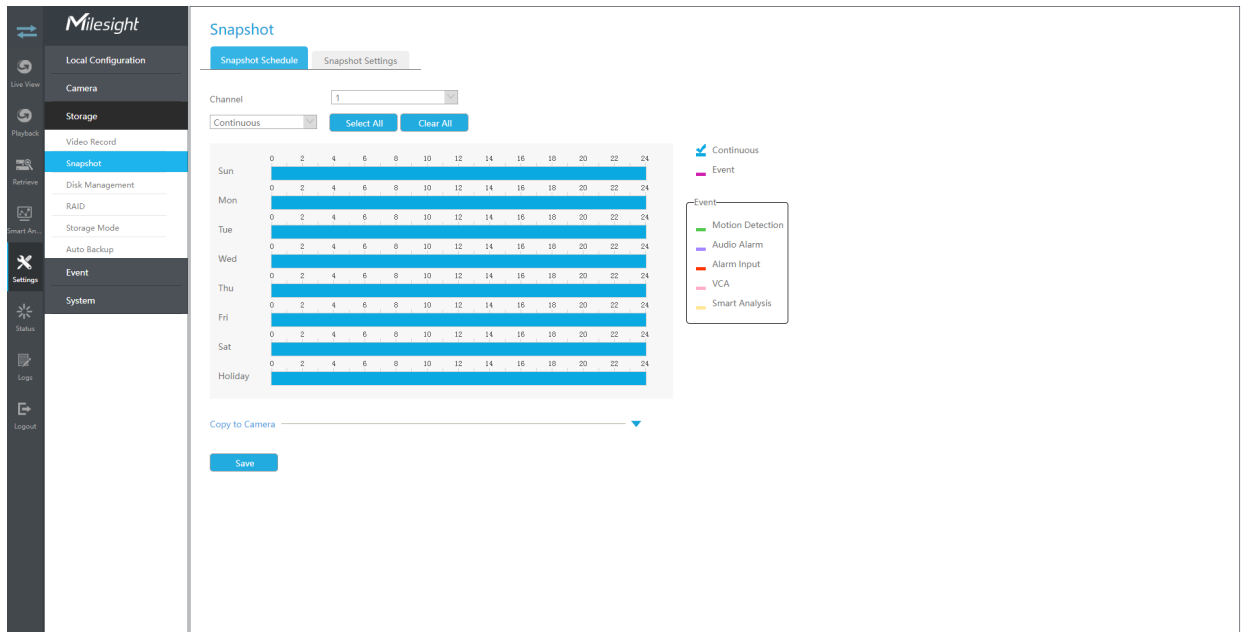

Also, you can click the time bar and reedit the record time.

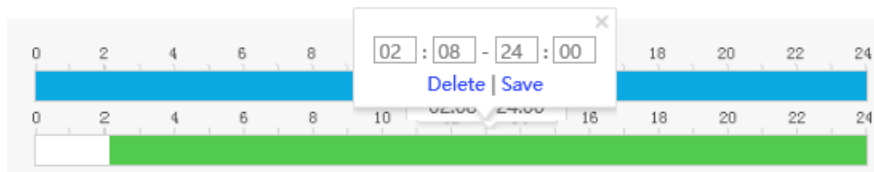

Click  to copy time setting to other days.



Step 3. Click "Copy" to copy the same snapshot configuration to other channels.




Snapshot Settings

Make general configuration for selected channels. Click [Copy to Camera] to copy the same configuration to other channels.

Channel: Select the channel which will be set.

Snapshot Interval: Set the snapshot Interval, 3~86400 seconds are available.

Snapshot Due Time: Set the due time of snapshot files, 1~120days or unlimit are available.

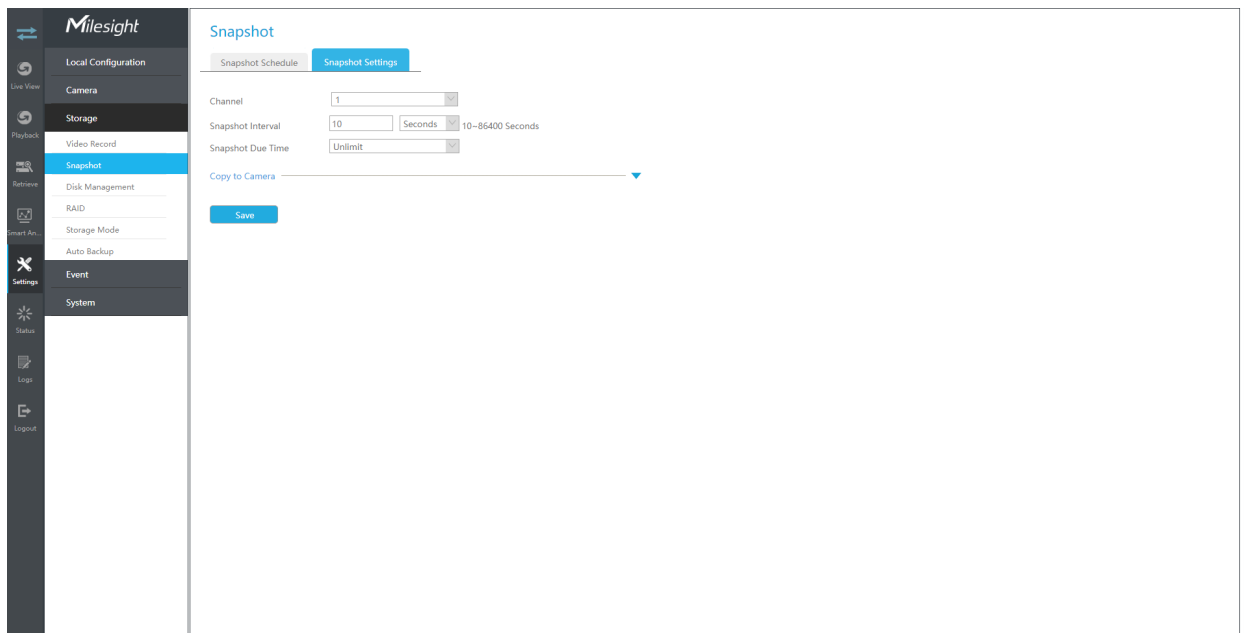

3.7.3 Disk Management

You can check Disk status, add Network Disk and set Recycle Mode here.

HDD Mangement

Property: R/W and Read-only are available for this option.

Note: Initializing the HDD before you set record schedule to ensure that record properly works.

Disk Management

HDD Management | Network Disk | General Settings

No.	Port	Vendor	Status	Total	Free	Property	Type	Group	Edit	Delete
<input type="checkbox"/>	2	ST1000VX000-1E5162	Normal	931.51GB	0	R/W	Local	1		-

Total Capacity: 931.51GB
Available Capacity: 0

Refresh Initialize

Network Disk

NAS (Network-Attached Storage) should be available within the network and properly configured to store the recorded files and snapshots. You can click and then input corresponded NAS information to add NAS.

Note:

1. NAS with NFS format is the only type for network disk adding.
2. It's recommended to use Hard Disk rather than Network Disk.

Disk Management

HDD Management | Network Disk | General Settings

Disk Name:

Type:

IP Address:

Directory:

Add Batch Add Delete


No.	Disk Edit	Delete	Disk Name	IP Address	Directory	Type
-----	-----------	--------	-----------	------------	-----------	------

Note: It is risky to the data safety if too much bandwidth is occupied by NAS.

Edit the Property by clicking . After that the storage device will be ready.

HDD Type: RAID means RAID, NAS means network attached storage while LOCAL means normal disk mode.

You can add it manually or search local NAS by clicking "Batch Add".

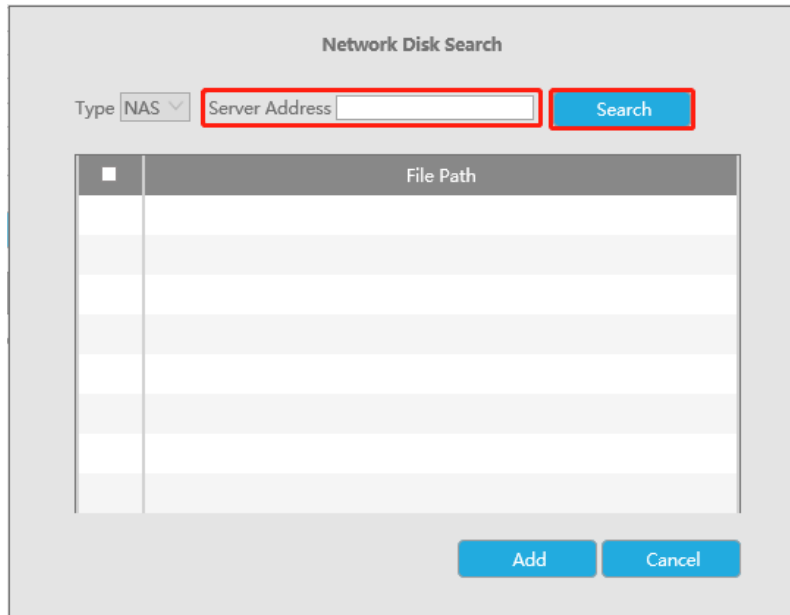


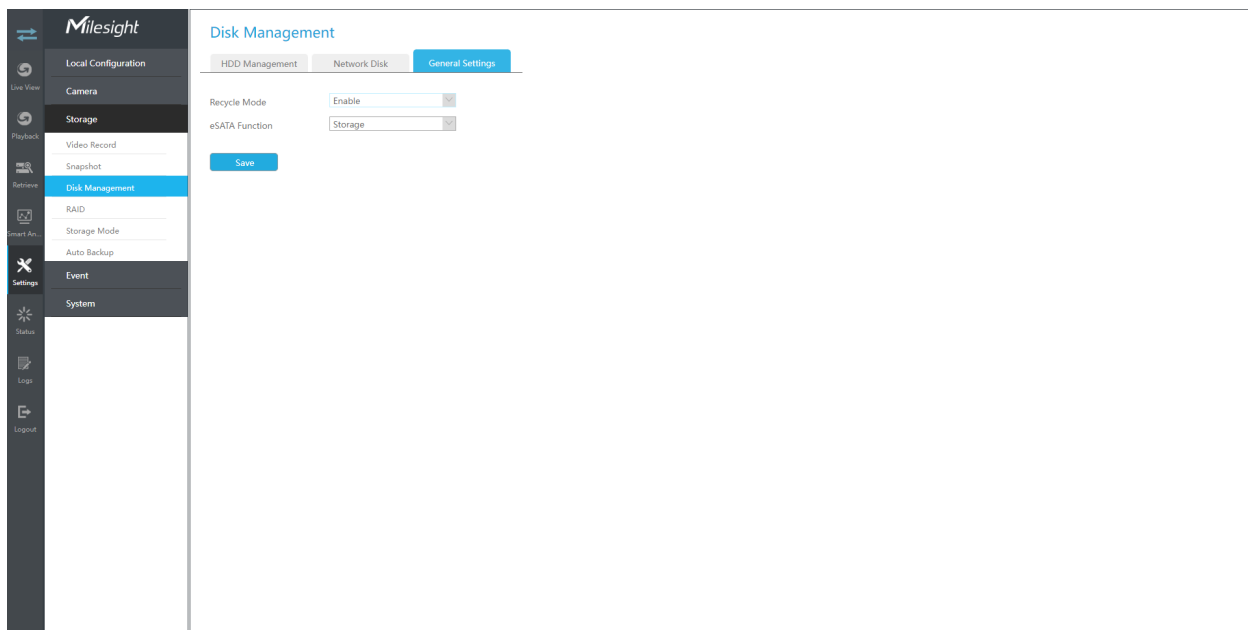
The image shows a 'Network Disk Search' dialog box. At the top, it has a title 'Network Disk Search'. Below the title, there is a 'Type' dropdown menu set to 'NAS'. To its right is a 'Server Address' text input field, which is highlighted with a red border. Further right is a blue 'Search' button, also highlighted with a red border. Below these elements is a table with a header 'File Path' and a single empty row. At the bottom of the dialog, there are two blue buttons: 'Add' and 'Cancel'.

General Settings

Recycle Mode: You can enable or disable Recycle Mode for all storage devices.


eSATA Function: Both storage and backup are available.

 **Note:** eSATA Function is only available for NVR 8000 Series.




The image shows the 'Disk Management' page in the Milesight web interface. The left sidebar contains a navigation menu with categories: Local Configuration, Camera, Storage, Playback, Retrieve, Smart An., Settings, Status, Logs, and Logout. The 'Storage' category is expanded, showing sub-items: Video Record, Snapshot, Disk Management (highlighted), RAID, Storage Mode, Auto Backup, Event, and System. The main content area is titled 'Disk Management' and has three tabs: 'HDD Management', 'Network Disk', and 'General Settings' (selected). Under 'General Settings', there are two settings: 'Recycle Mode' with a dropdown menu set to 'Enable', and 'eSATA Function' with a dropdown menu set to 'Storage'. A blue 'Save' button is located below these settings.

3.7.4 RAID

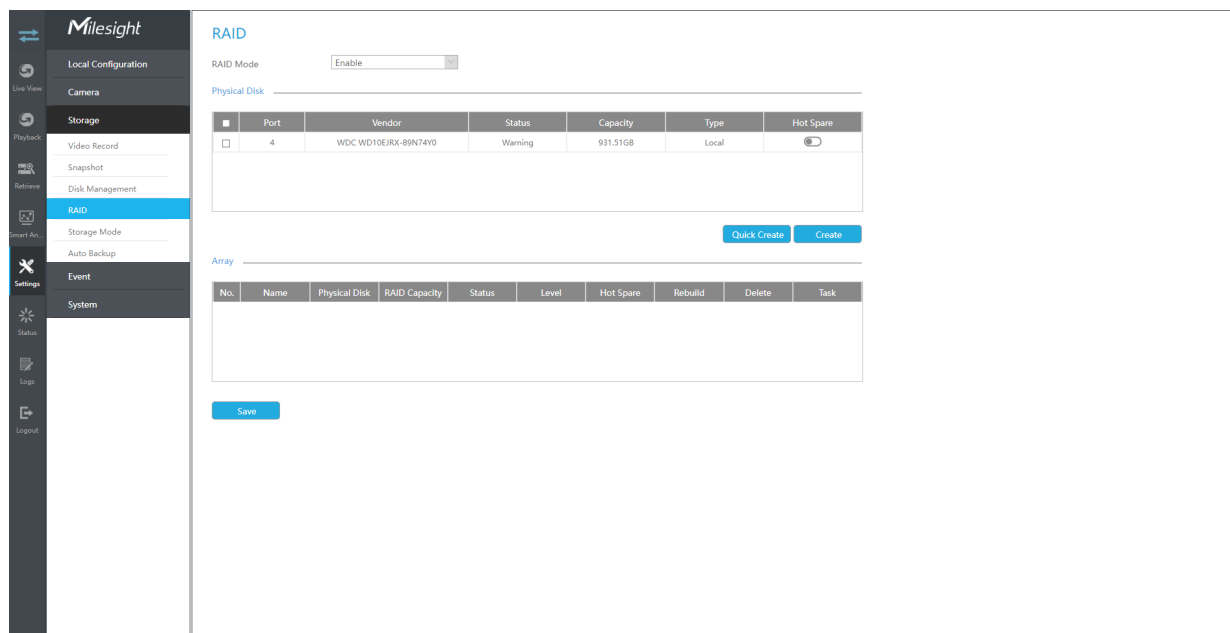


RAID (Redundant Array of Independent Disks) is a storage technology that combines multiple disk drive components into a logical unit. A RAID setup stores data over multiple hard disk drives to provide enough redundancy so that data can be recovered if one disk fails.

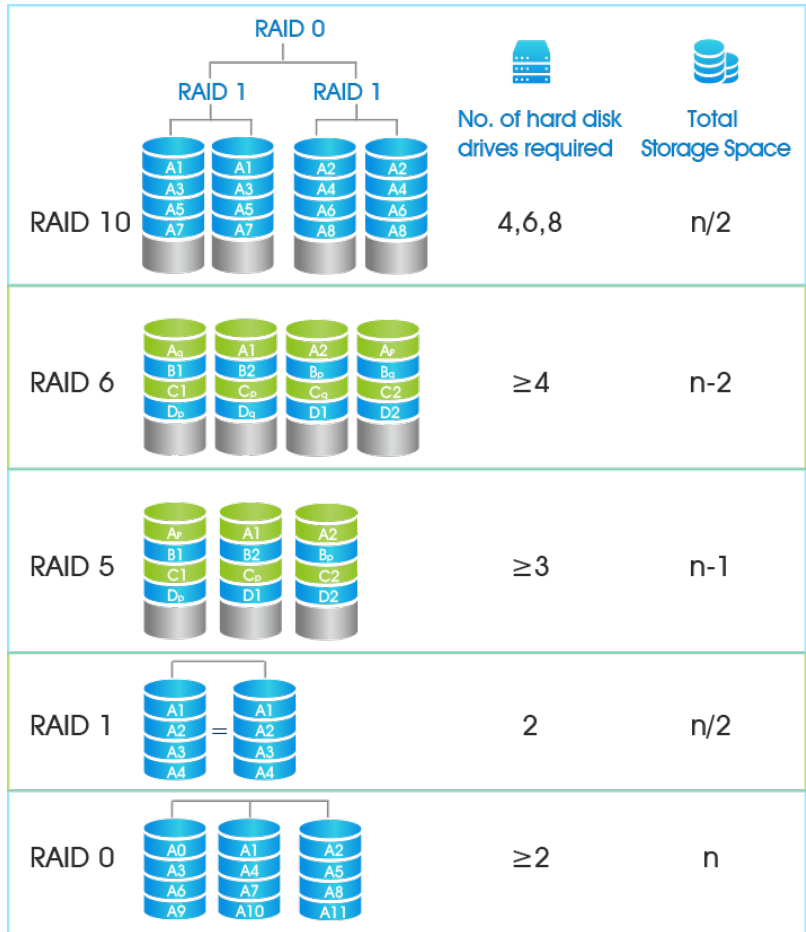

Step1. Enable RAID. NVR will reboot after enabling.

Step2. Select HDD and click "Create" or "Quick Create" to create a new array. New array will be available after a while.

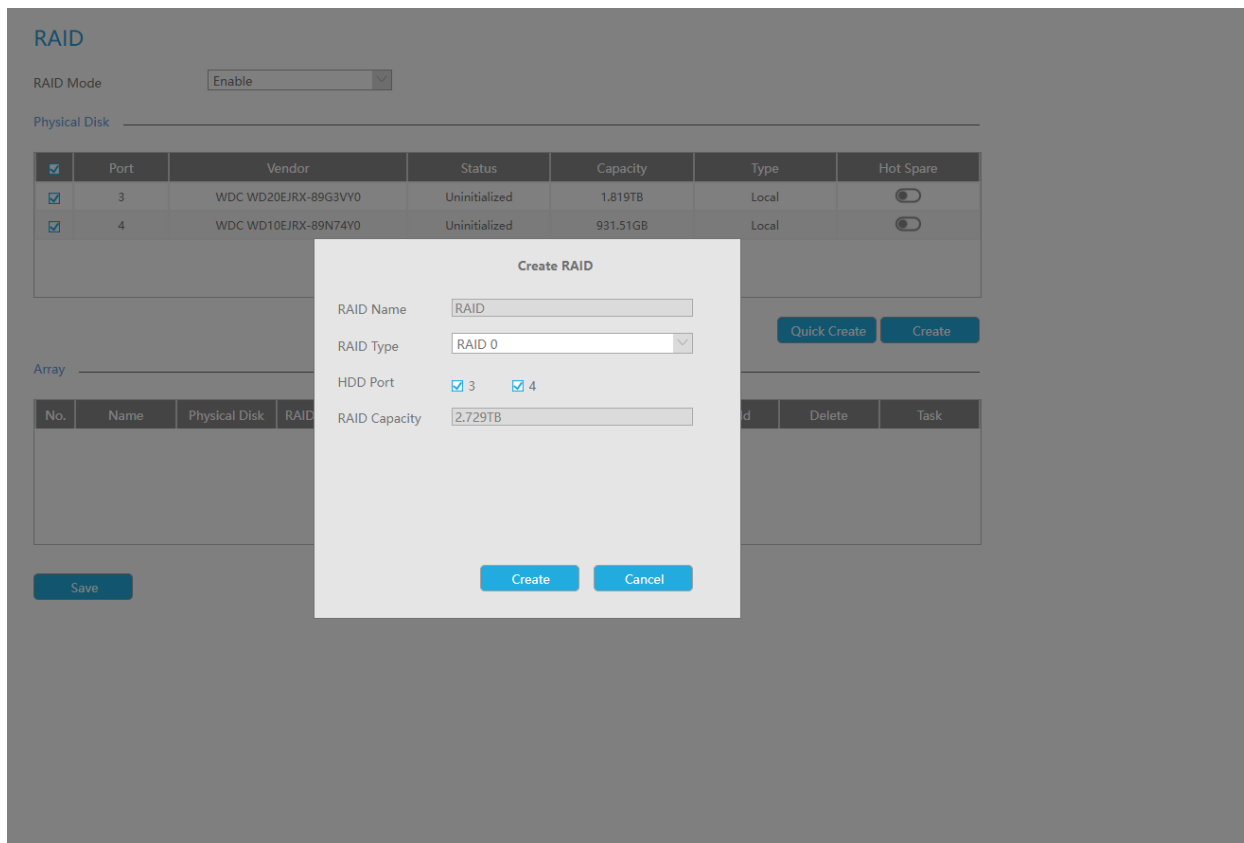

Hot Spare: A disk can be used as the hot spare for any array created in the system.

Rebuild: When the array is in Degraded status, the device can start rebuilding the array automatically with the hot spare disk to ensure the high security and reliability of the data.


 **Note:**

1. RAID only available for 4K H.265 NVR 7000/8000 Series and 4K H.265 PoE NVR 7000 Series.
2. Support more than 16TB capacity for creating the RAID, and the RAID data can be read and written normally. This meets users' storage requirements for larger capacity.
3. Quick Create only for RAID5.

3.7.5 Storage Mode

Quota

You can configure the storage capacity of each channel, including snapshots and recording, making storage allocation more flexible.

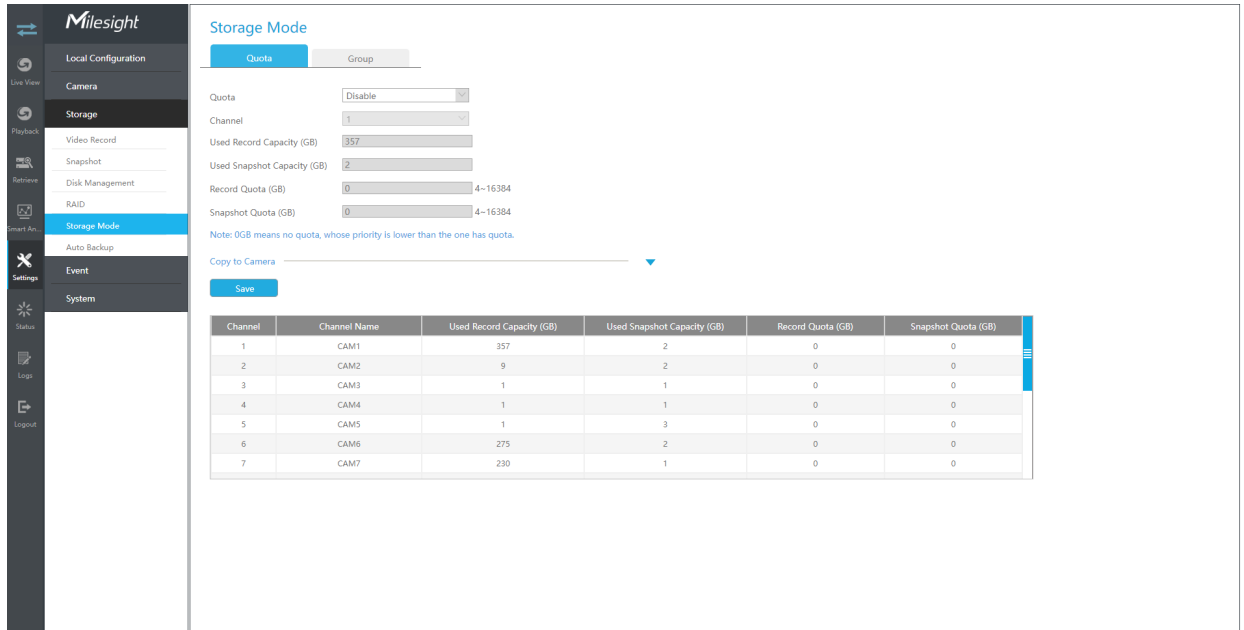

Step 1. Enable Quota.

Quota

Step 2. Select the channel in which you want to enable Quota. Then the used record capacity and the used snapshot capacity of the corresponding channel are automatically displayed.

Channel

Used Record Capacity (GB)

Used Snapshot Capacity (GB)

Step 3. Set Quota for record and snapshot separately. And the Quota range from 4 to 16384 GB. The default value is 0 GB.

Record Quota (GB) 4~16384

Snapshot Quota (GB) 4~16384

Step 4. Click "Apply" to take effect the configuration of the current interface.

Click "Copy" to pop up the Channel Copy interface, then the Quota configuration of the selected channel can be copied to the channel you want, and click "OK" to take effect the configuration.

Copy to Camera ▲

All

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32


33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48

49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

The Quota status of each channel will be displayed in a table at the bottom of the Storage Mode -> Quota interface.

Group

You can divide disks into different groups, which is able to storage different channels' recorded files into different groups.

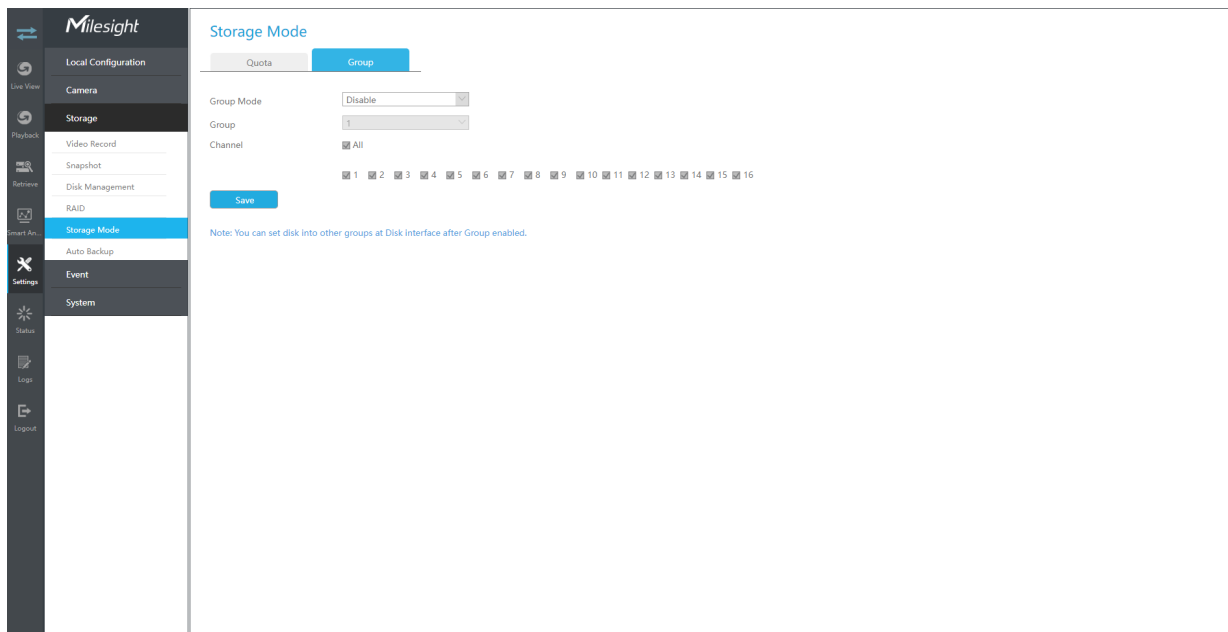


Step 1. Enable Group.

Group Mode

Step 2. Switch to Disk Management interface. Click  and set the group number of every disk.

Note: You can add 16 groups at most.

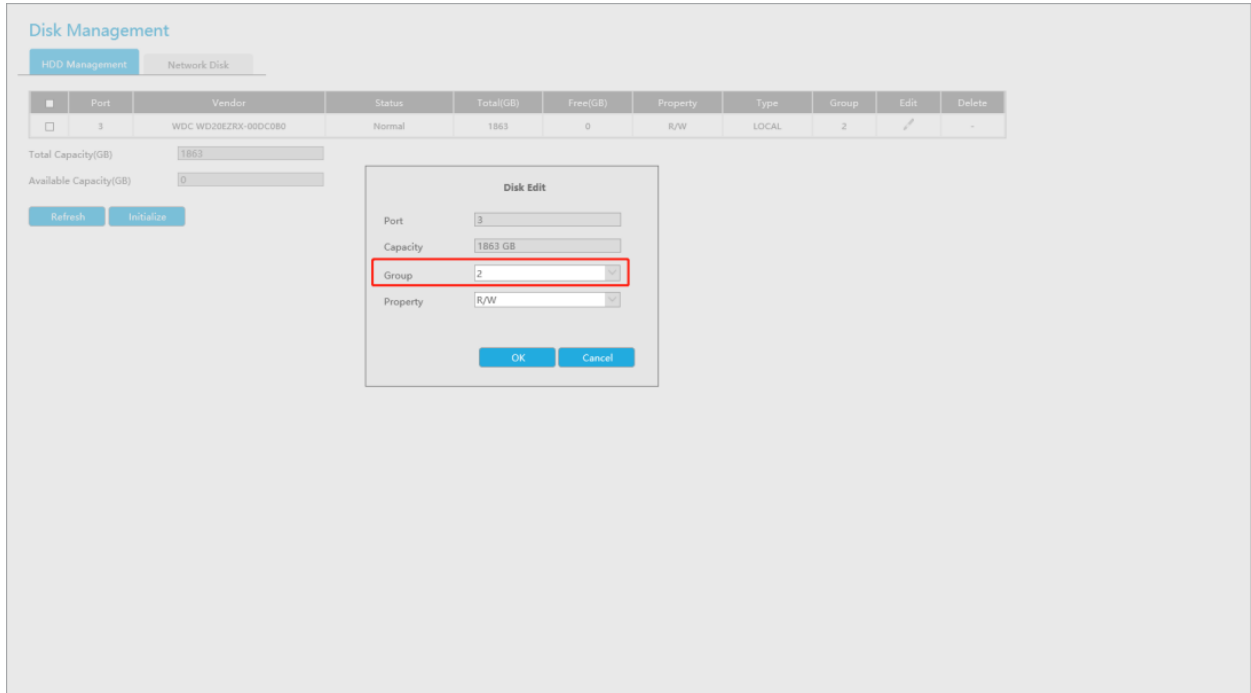

Step 3. Select group and channels which you want to record into this group.

Quota **Group**

Group Mode:


Group:

Channel: All

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Note: You can set disk into other groups at Disk interface after Group enabled.


3.7.6 Auto Backup

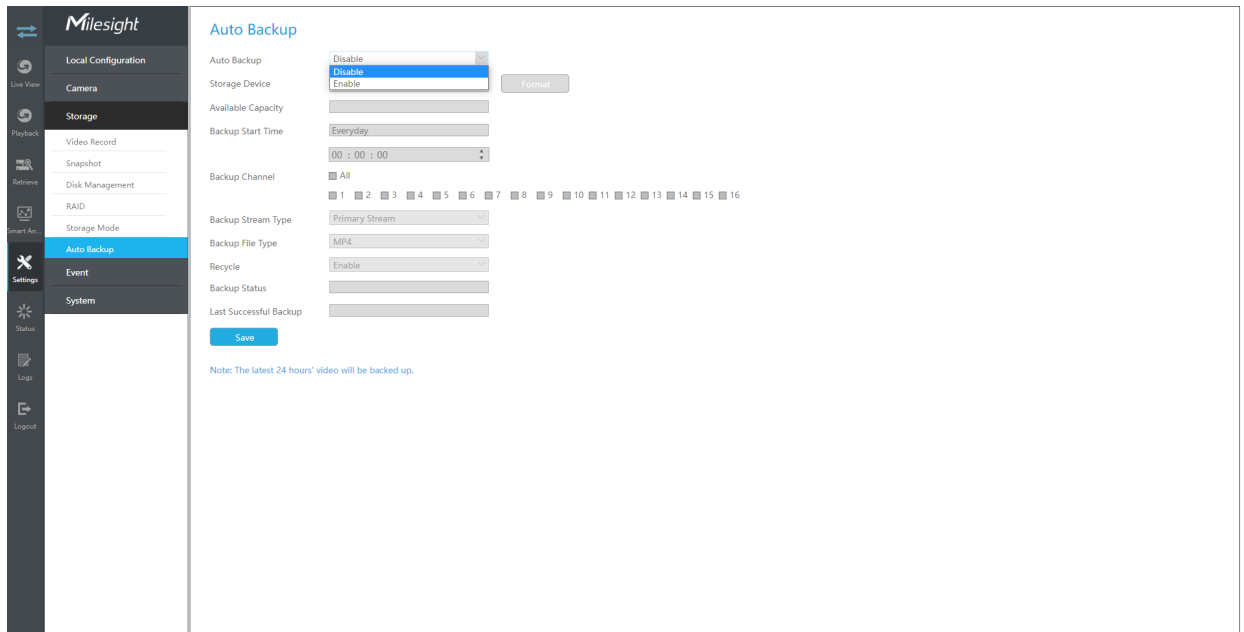

Step 1. Enable Auto Backup.



 Step 2. Select Storage Device as USB Device, NAS or eSATA disk.



Note: eSATA disk is only supported on NVR 8000 series.

Step 3. Set Backup Start Time.



Step 4. Check the checkbox to select Backup Channel. You can also click All to select all channels.

Step 5. Set Backup Stream Type to Primary Stream or Secondary Stream.

Step 6. Set Backup File Type to MP4, AVI or PS.

Step 7. You can enable or disable Recycle Mode for Auto Backup function.


Step 8. Click "Apply" to save the settings, and the latest 24 hours' video will be automatically backed up to the storage device.

Note:

1. You can check Auto Backup status in the Backup Status bar, and the corresponding status is as follows.
 - No Storage Device
 - Unsupported Storage Device Format
 - Standby
 - Working (xx%)
2. If there are already successfully backed up videos, the time when the backup ends will be displayed in Last Successful Backup bar.

3.8 Event

3.8.1 Motion Detection

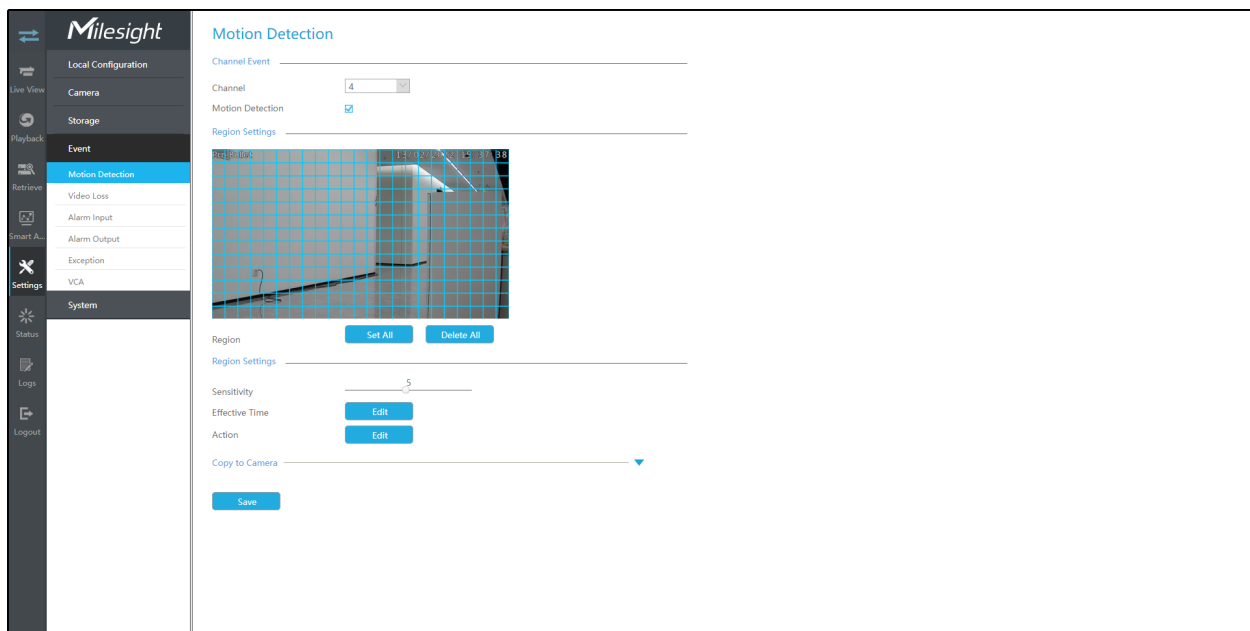

Step 1. Enable Motion Detection.

Select channel , Sensitivity and click to enable Motion Detection.

Motion Detection


Channel Event _____

Channel

Motion Detection

Step2: Set the area for triggering motion detection.


You can set the area by dragging a square on live view window.

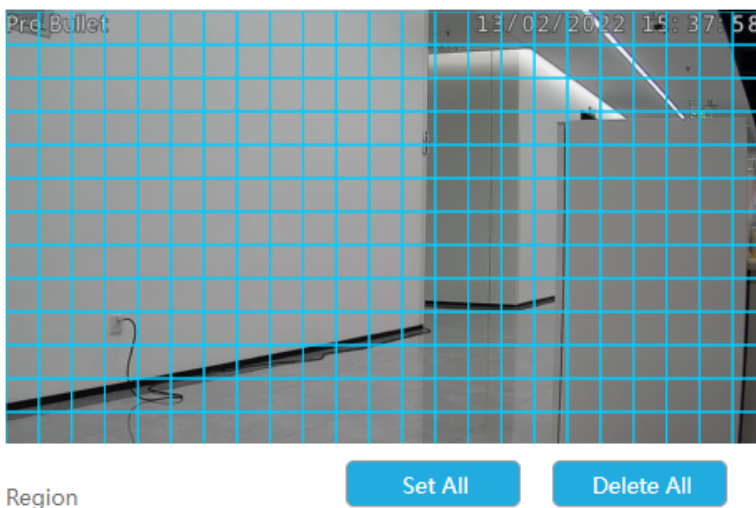

 **Note:** The motion detection area will be synchronized to Camera.

Step3. Set Effective Time of motion detection by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

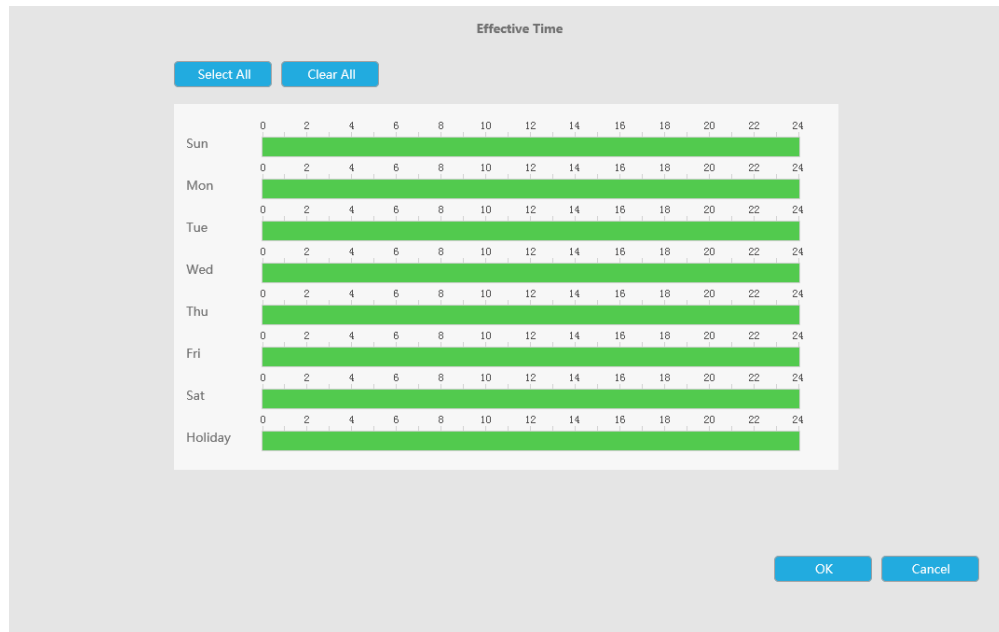

Step 4. Set Action for motion detection alarm by clicking "Edit".

Audible Warning: NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval: The effective interval between two actions when event triggered.

Action

Audible Warning | Email Linkage | PTZ Action | Alarm Output | White LED | Others

Select All | Clear All

	0	2	4	6	8	10	12	14	16	18	20	22	24
Sun	[Green Bar]												
Mon	[Green Bar]												
Tue	[Green Bar]												
Wed	[Green Bar]												
Thu	[Green Bar]												
Fri	[Green Bar]												
Sat	[Green Bar]												
Holiday	[Green Bar]												

Audio File: Default

Triggered Interval: 40s

OK | Cancel


Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

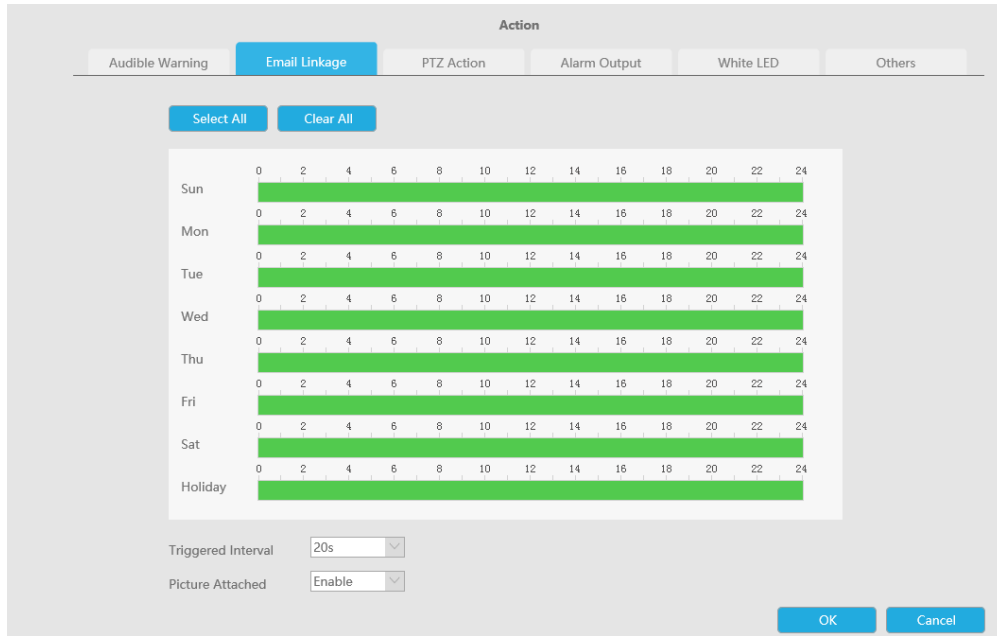


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

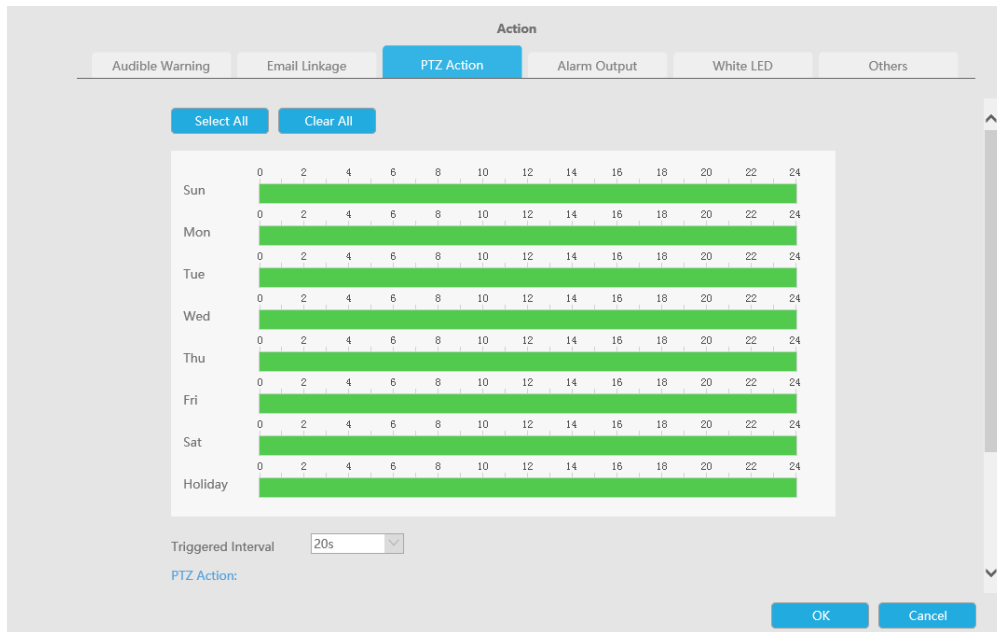

And you can add PTZ Action by clicking .

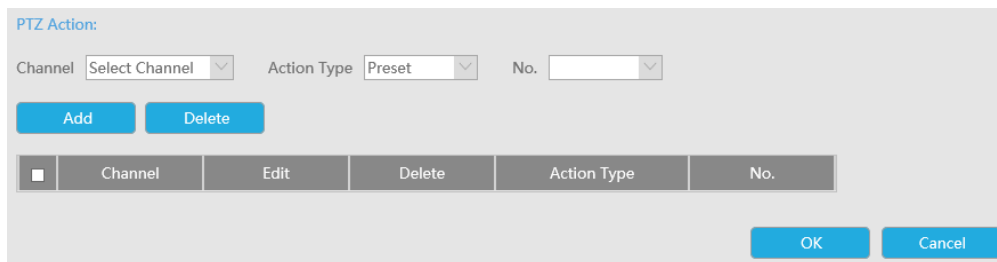


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2.etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

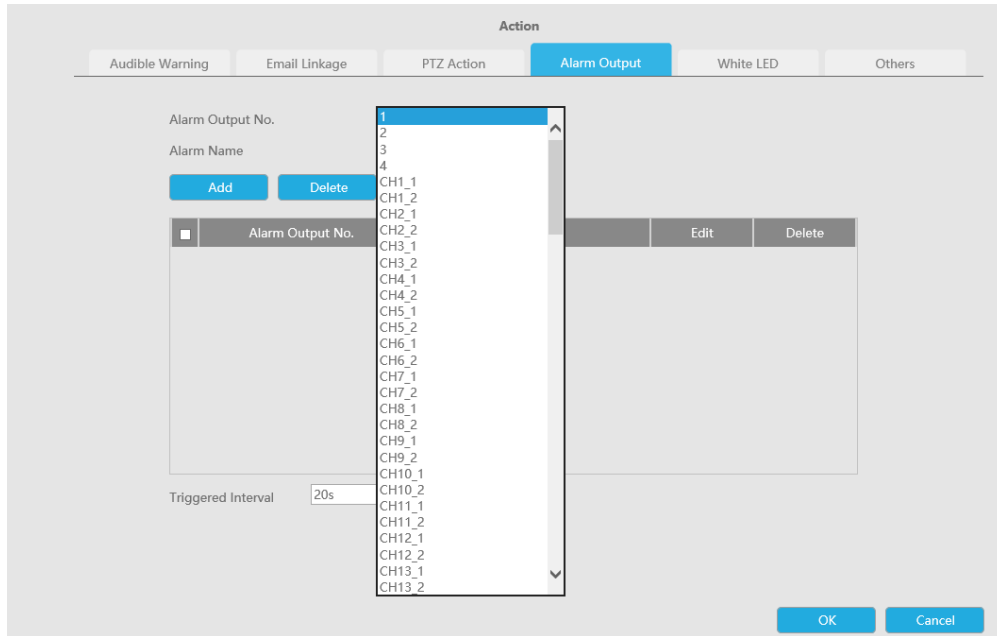


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:


User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

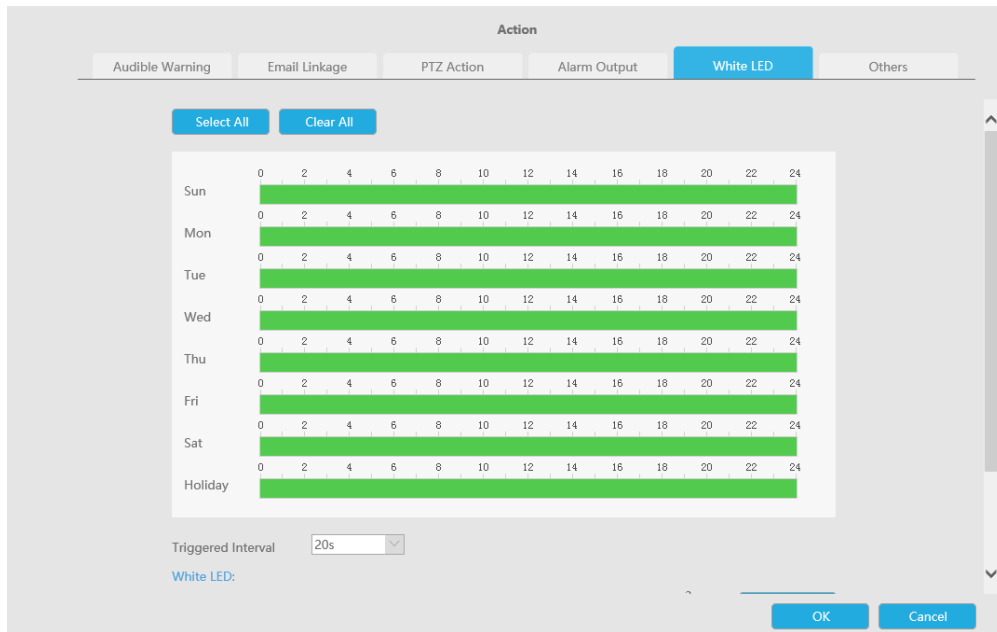

And you can add White LED by clicking .

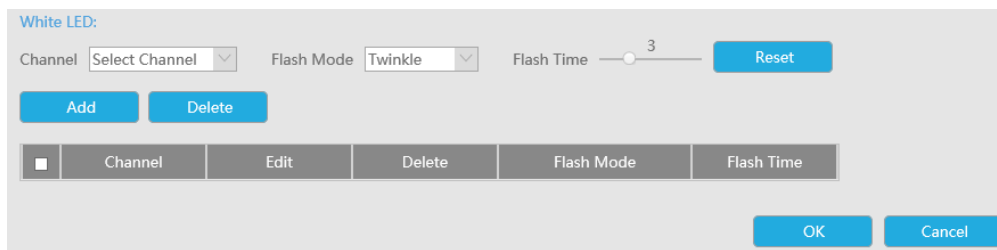



Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.


Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.

Others: Trigger selected channels to record when alarm is triggered.

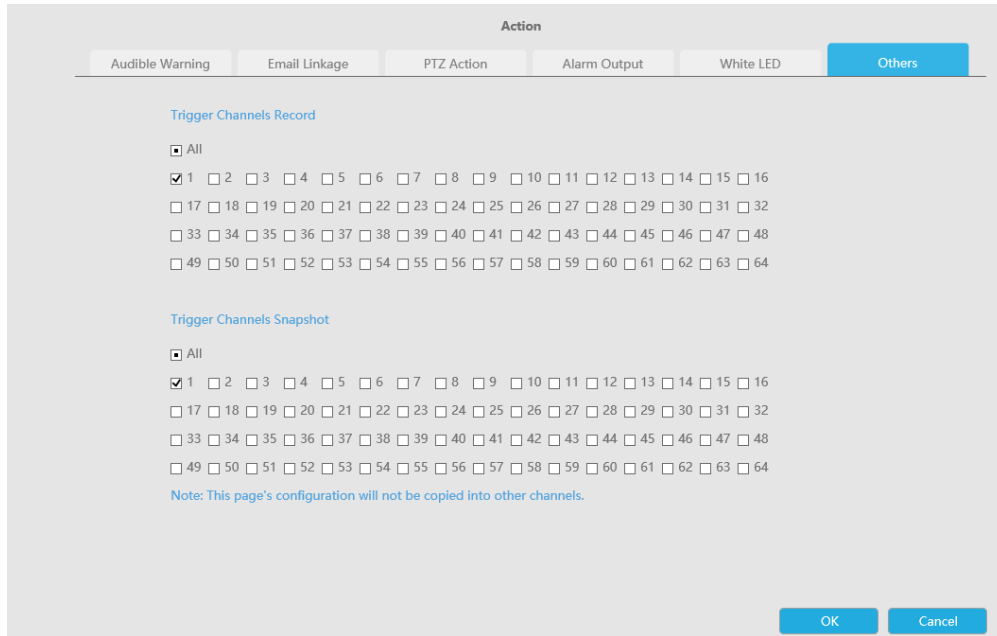


 **Note:** Make sure you have set correct schedule for record and snapshot before setting the Event Action.

Step5. Click[Copy to Camera] and to copy the same configuration to other channels.

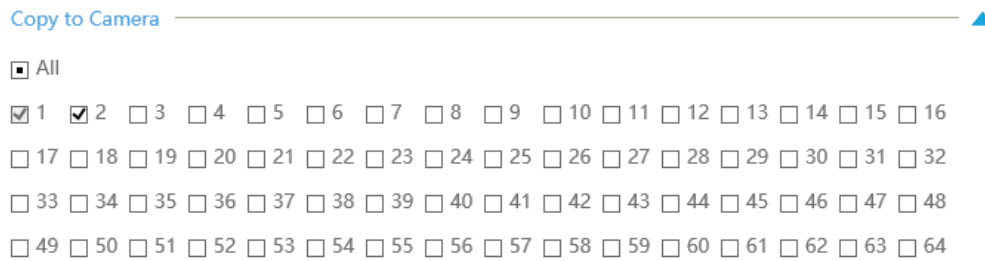

3.8.2 Video Loss

Step 1. Select a channel.

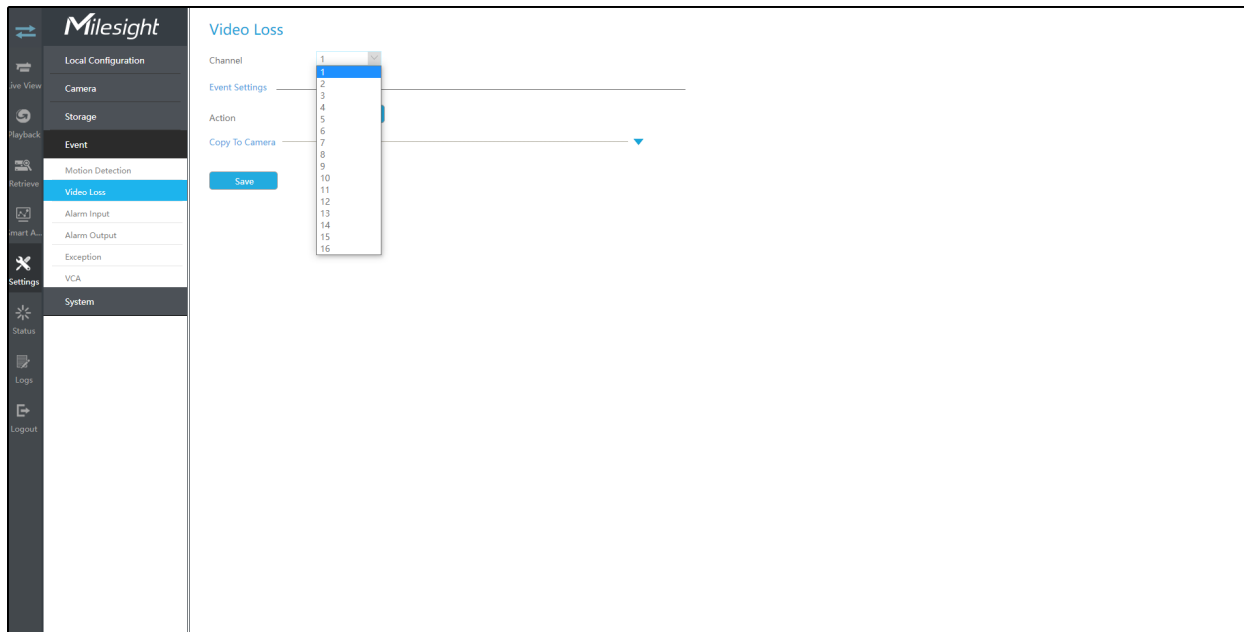

Step 2. Set Action for video loss by clicking "Edit".


Audible Warning: NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval: The effective interval between two actions when event triggered.

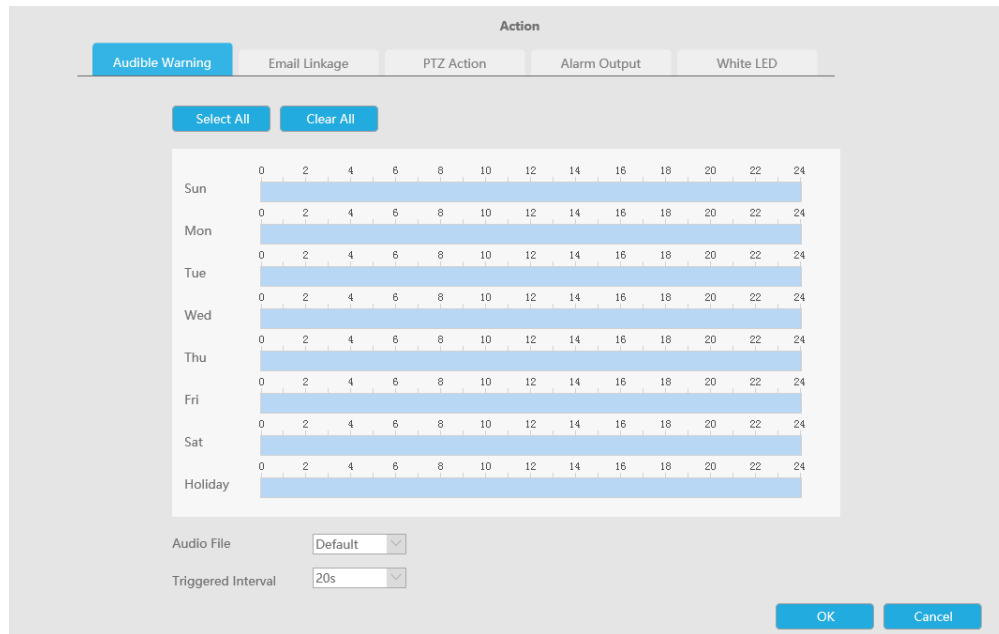


Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

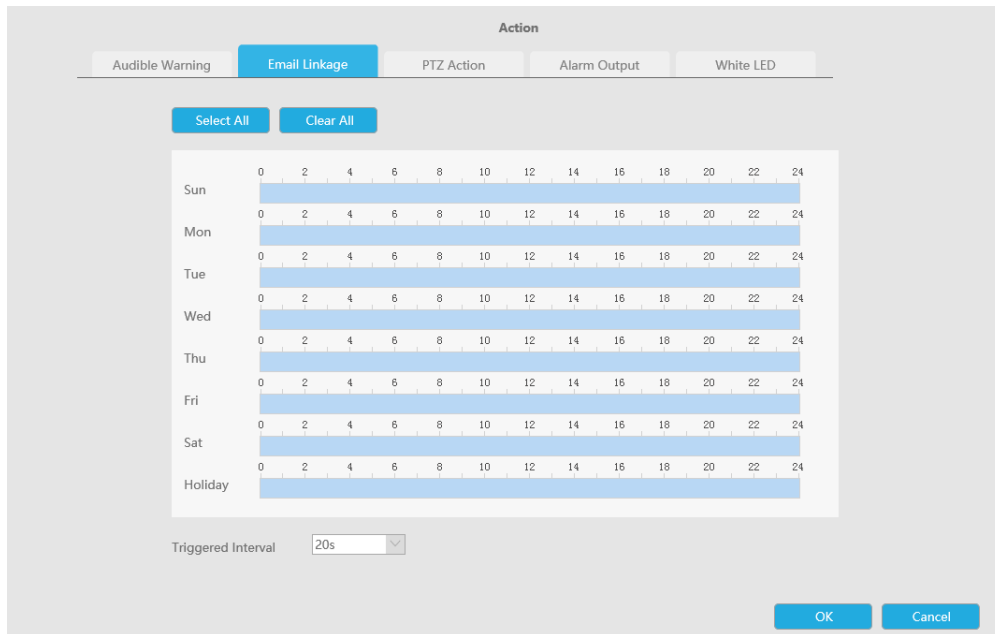


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

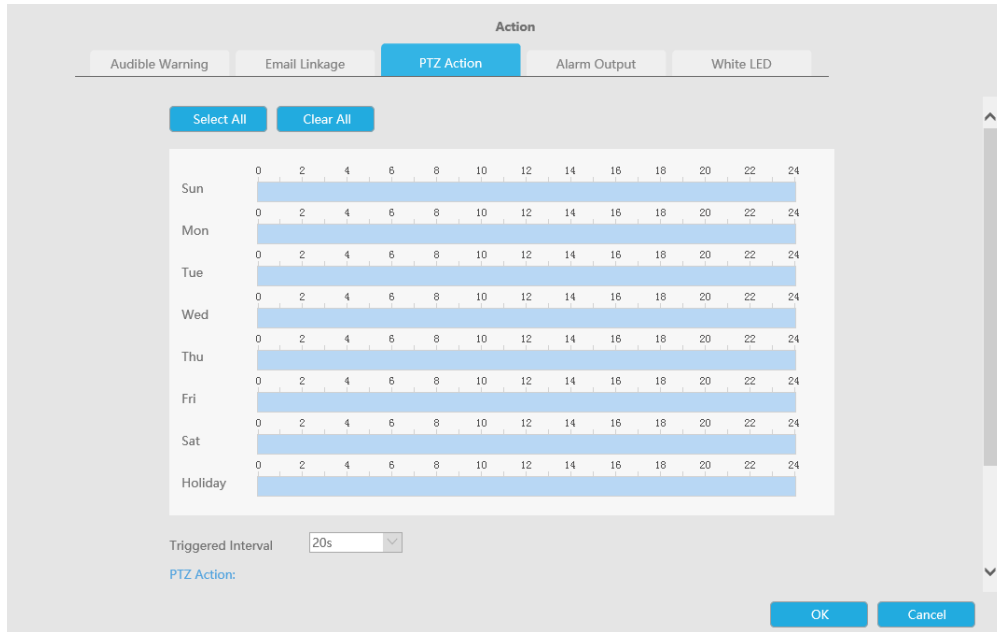

And you can add PTZ Action by clicking .

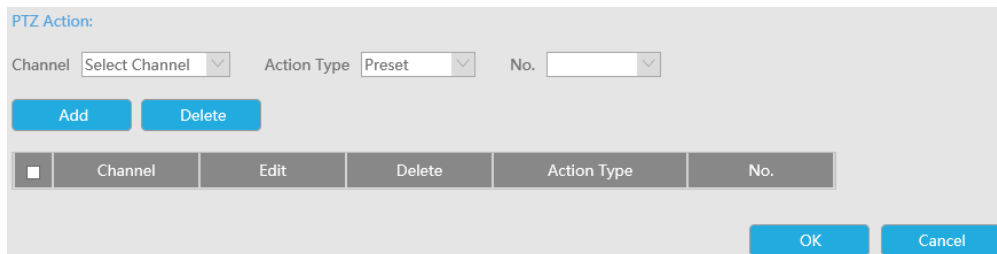


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2.etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

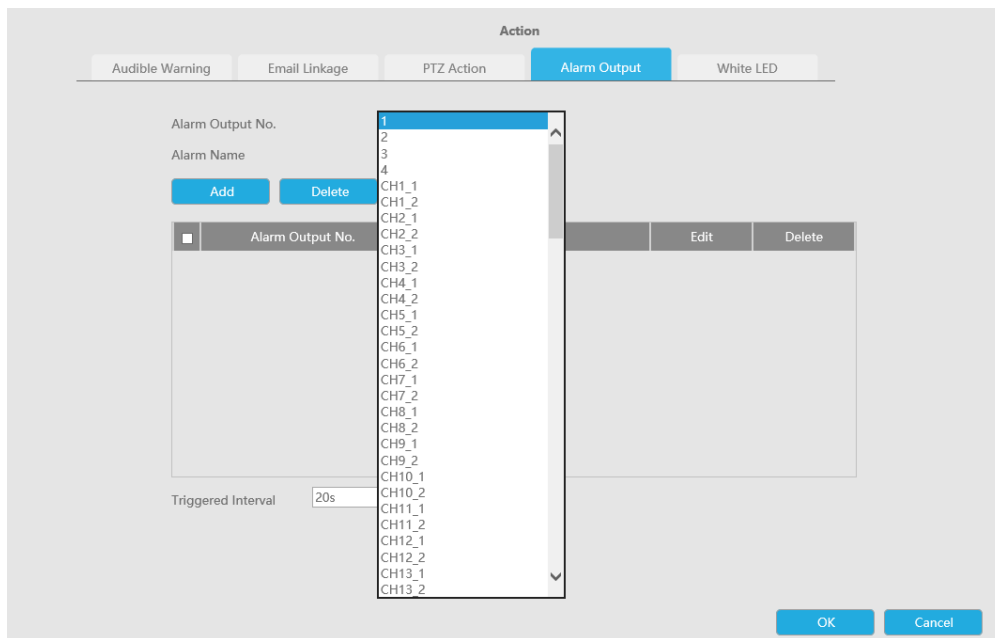


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:


User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

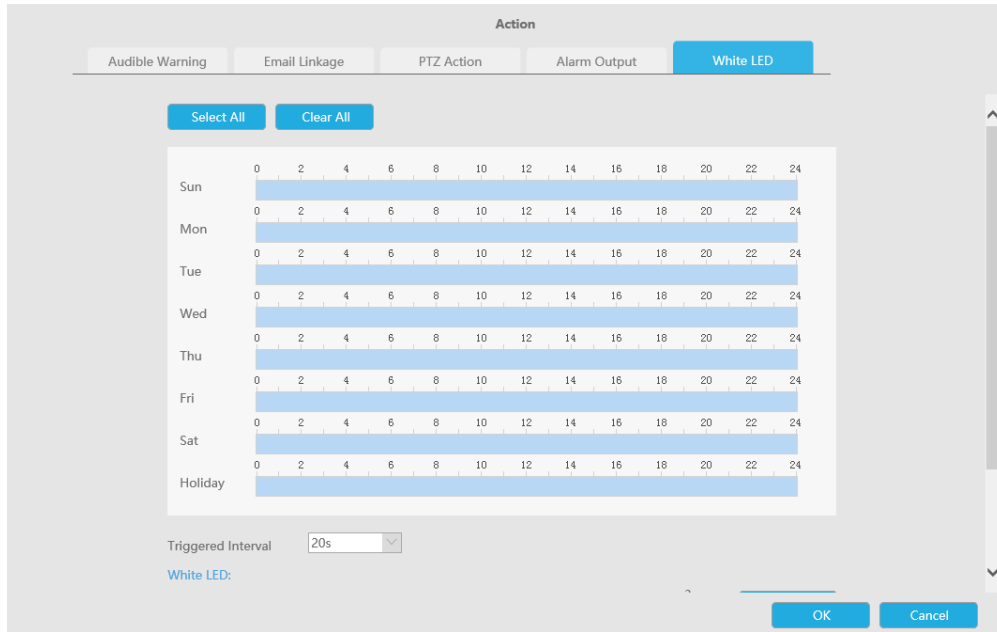

And you can add White LED by clicking .

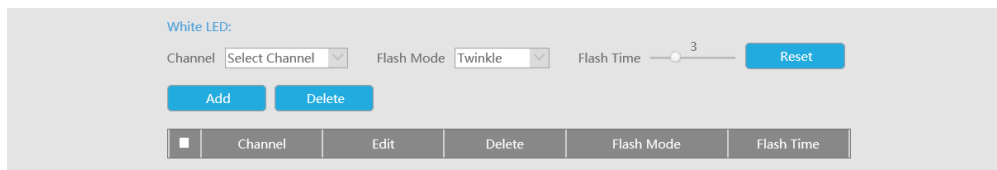

Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.

Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.

Step5. Click "Copy" and to copy the same configuration to other channels.



3.8.3 Alarm Input

3.8.3.1 NVR Alarm Input

Step 1. Set Alarm input Number, Alarm Name and Alarm Type.

Alarm Input Settings

NVR Alarm Input
Camera Alarm Input

Alarm Input No.

Alarm Name (cannot copy)

Alarm Type

Alarm Input No.: The channel which has input signal.

Alarm Name: Set a name for the alarm.

Alarm Type: Choose NO or NC alarm type for the alarm.

Linkage Action: Choose Alarm or Disarming by clicking the slide-drop bar.

- If you select the Alarm option, you will be able to configure the following setting.

Step 2. Set effective time for alarm input by clicking corresponding "Edit".

Step 3. Set action for alarm input by clicking corresponding "Edit".


Audible Warning: NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking Select All or Clear All to set or clear all time settings.
2. Click Edit to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval: The effective interval between two actions when event triggered.

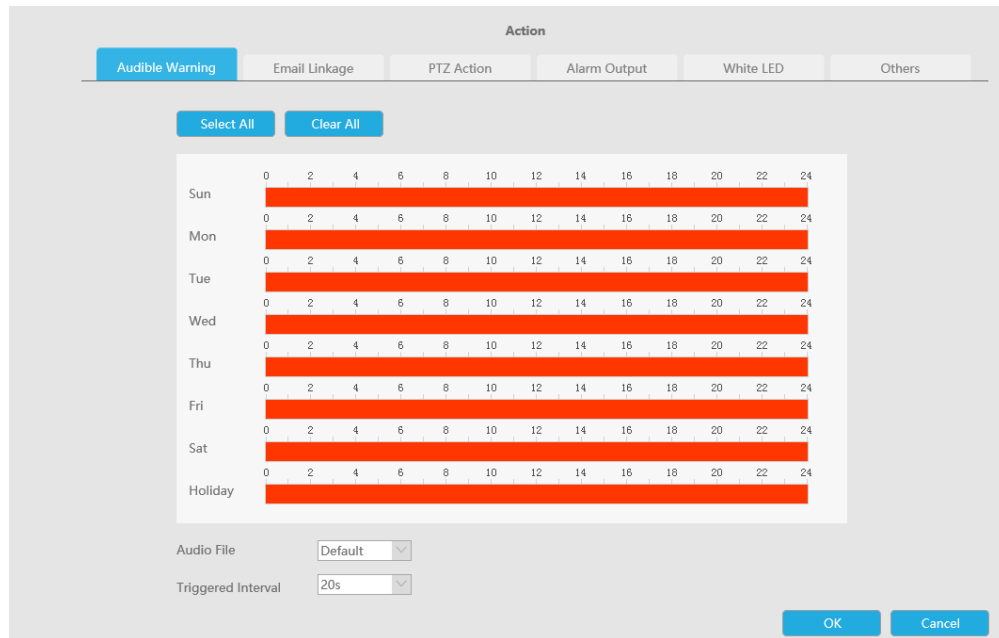


Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

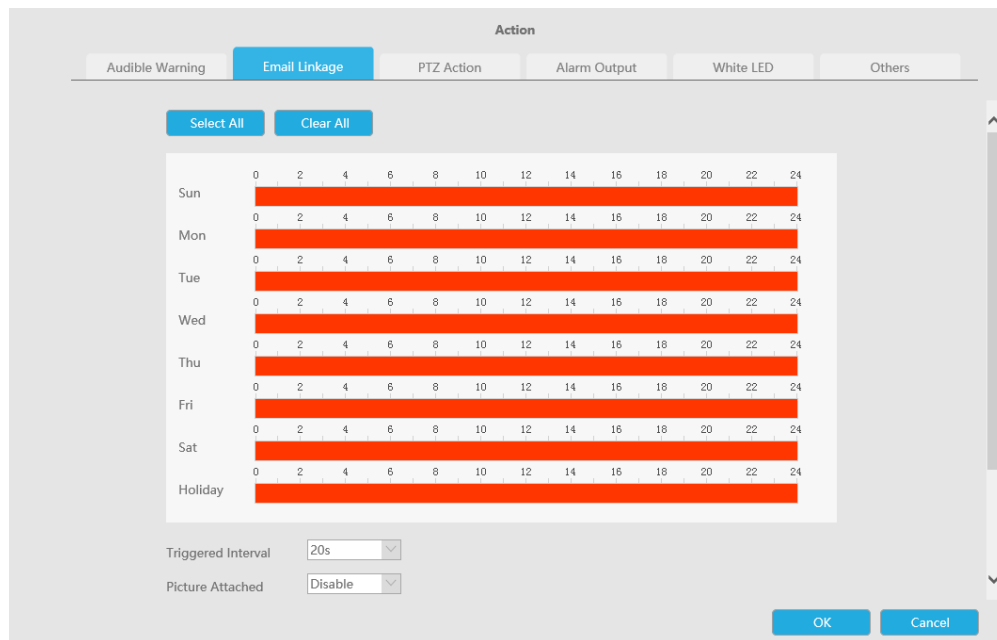


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

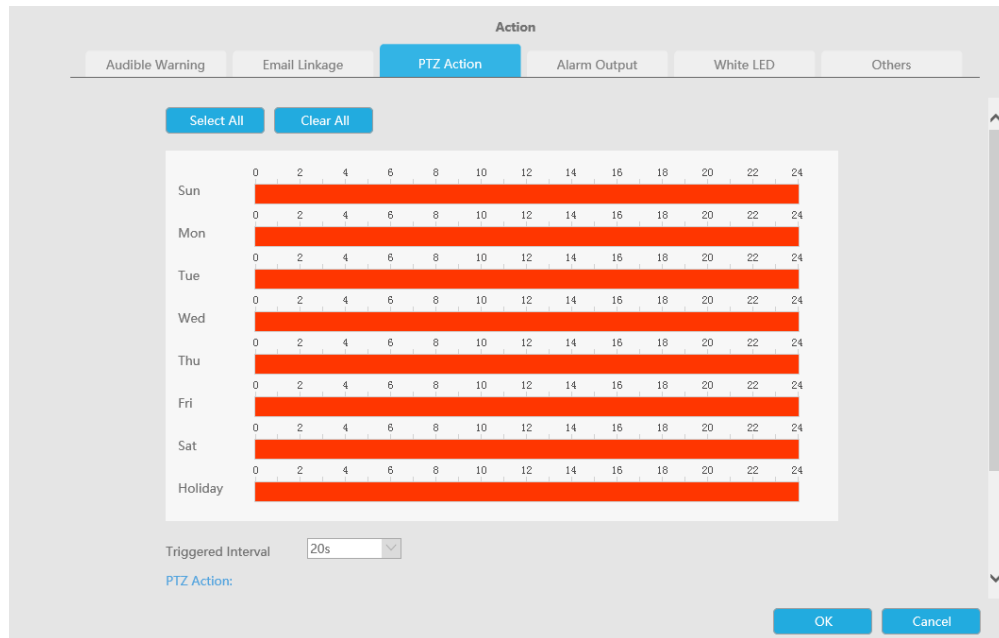

And you can add PTZ Action by clicking .

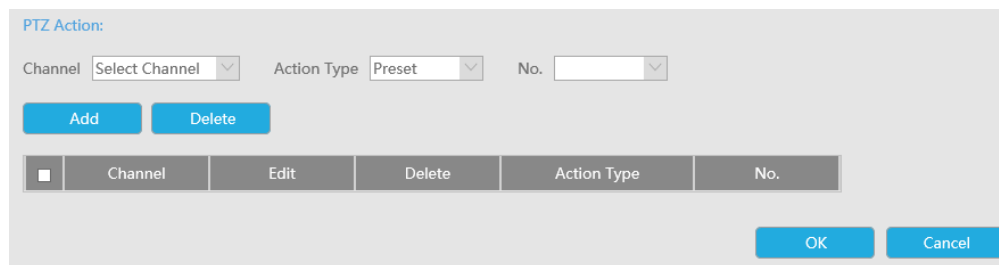


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2.etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

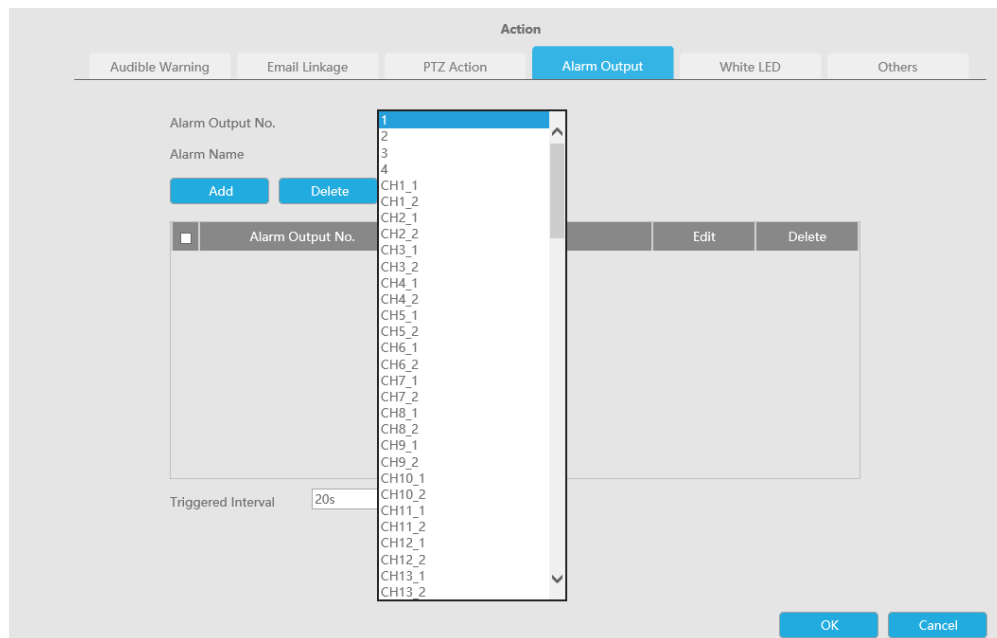


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:


User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

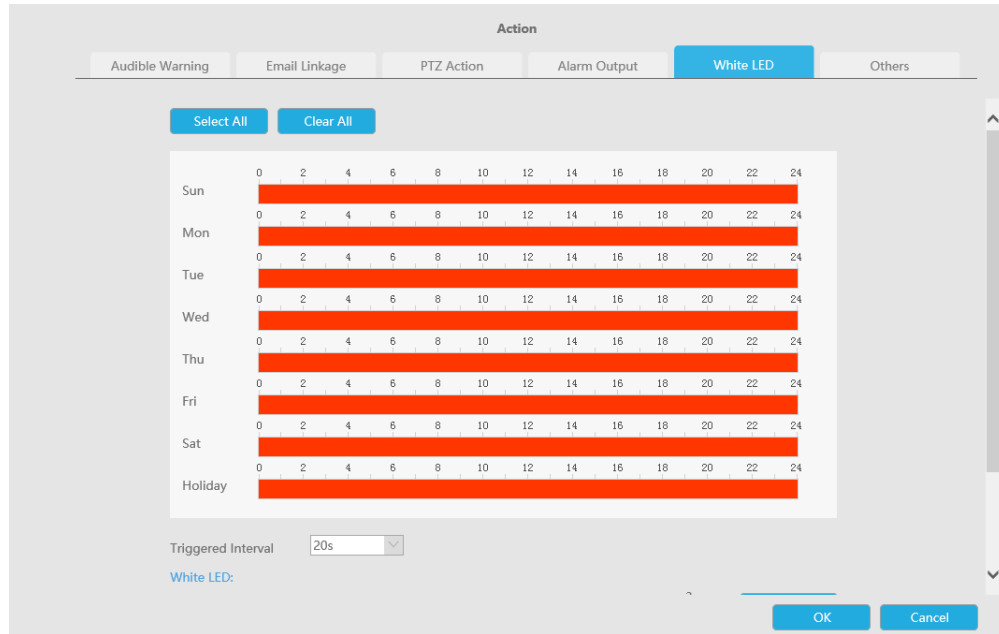

And you can add White LED by clicking .

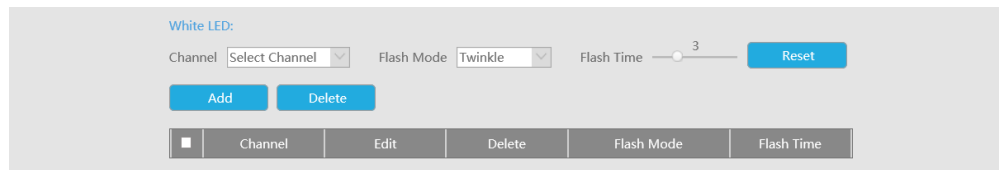


Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.

Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.


Others: Trigger selected channels to record when alarm is triggered.

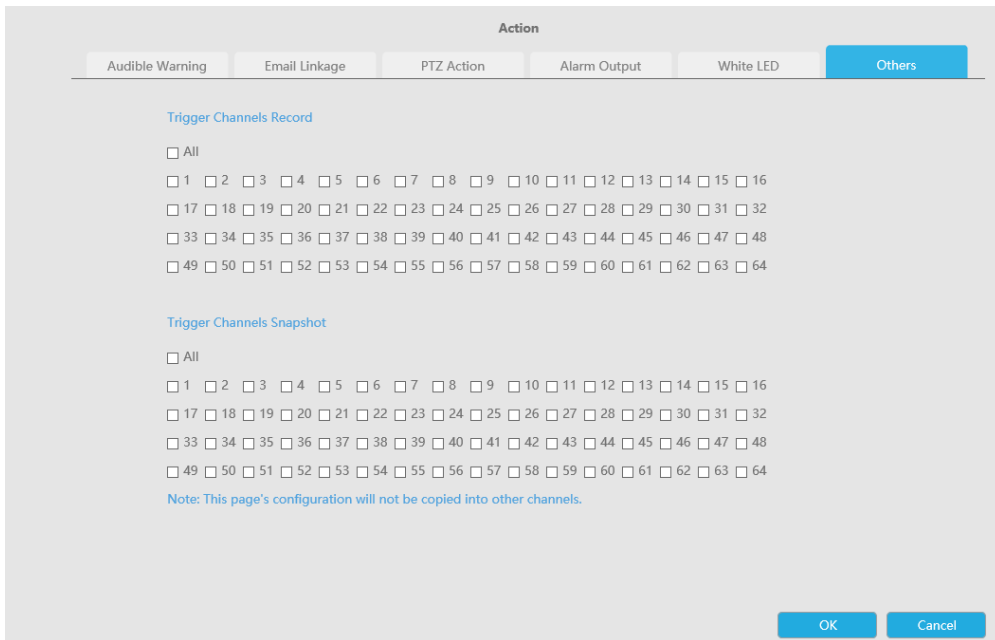

Step 4: Copy alarm input settings to other input interface by clicking "Copy".



- **If you choose the Disarming option, you will be able to configure the following settings.**

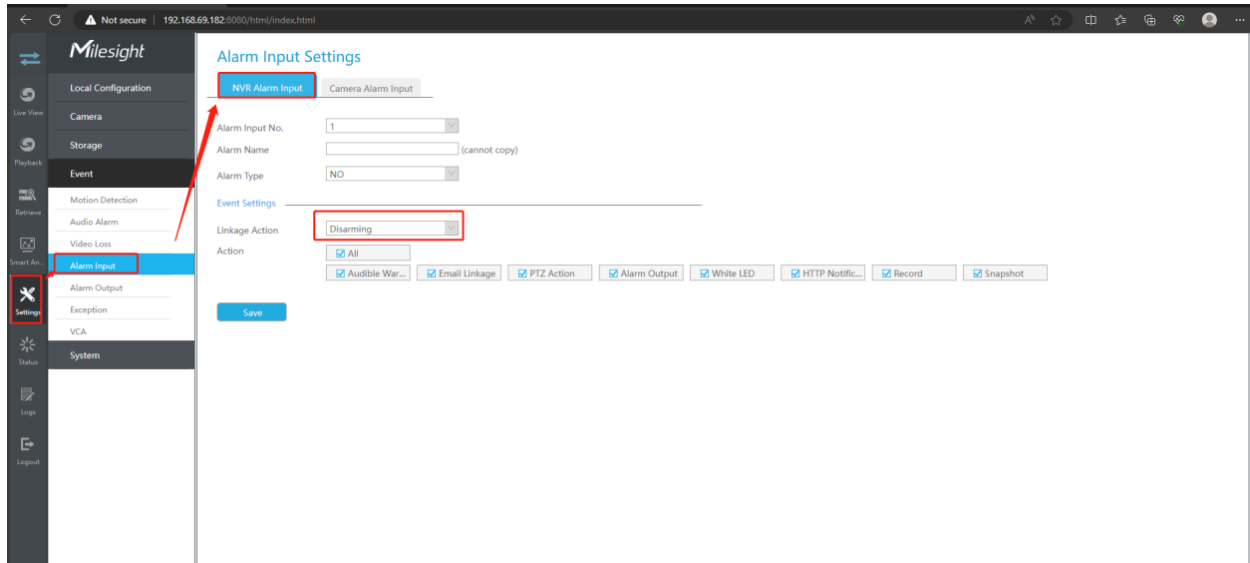

Step 2: Set action for alarm input by selecting the check-box.

When the disarming function is enable and the alarm input is connected to the trigger key, you can disarm or arm with one click.

Here's how to arm and disarm your device:

1. Enable the event and choose the action that will be executed when the event is triggered. This could include sending an email or recording a video, etc;
2. Connect the No.1 alarm input interface to the key and ensure it is physically linked;
3. Turn on the Disarming feature and check the corresponding action box;

After you finish configuring the settings mentioned above, press the designated key to disarm all the actions that you have selected.

To re-enable the event action, just need to release the key to arm.

For instance, when Motion Detection is triggered, the record will start. If Disarming is turned on and the "Record" option is checked, even though the motion is triggered, it will not record when the button is pressed, thus achieving disarming. If you release the key, the motion will be triggered and the record will occur, thus achieving arming.

Note:

- What will be displayed only when the Alarm Input No is chosen 1 as Disarming.
- The disarming and arming functions are effective for all channels of the NVR.

3.8.3.2 Camera Alarm Input

Milesight NVRs support configuring the Alarm Input of Milesight cameras directly.

Step 1. Set Alarm Input Number, Enable Alarm Input, Set Alarm Name and Alarm Type

Alarm Input Settings

NVR Alarm Input
Camera Alarm Input

Channel	<input type="text" value="2"/>	▼	
Alarm Input No.	<input type="text" value="1"/>	▼	
Alarm Input	<input type="checkbox"/>		
Alarm Name	<input type="text"/>		(cannot copy)
Alarm Type	<input type="text" value="NO"/>	▼	

Alarm Input No.: The channel which has input signal.

Alarm Input: Click “Enable” to enable alarm input of this channel.

Alarm Name: Set a name for the alarm.

Alarm Type: Choose NO or NC alarm type for the alarm.

Step 2. Set effective time for Alarm Input by clicking corresponding "Edit".

Step 3. Set action for alarm input by clicking corresponding "Edit".


Audible Warning: NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking Select All or Clear All to set or clear all time settings.
2. Click Edit to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval: The effective interval between two actions when event triggered.

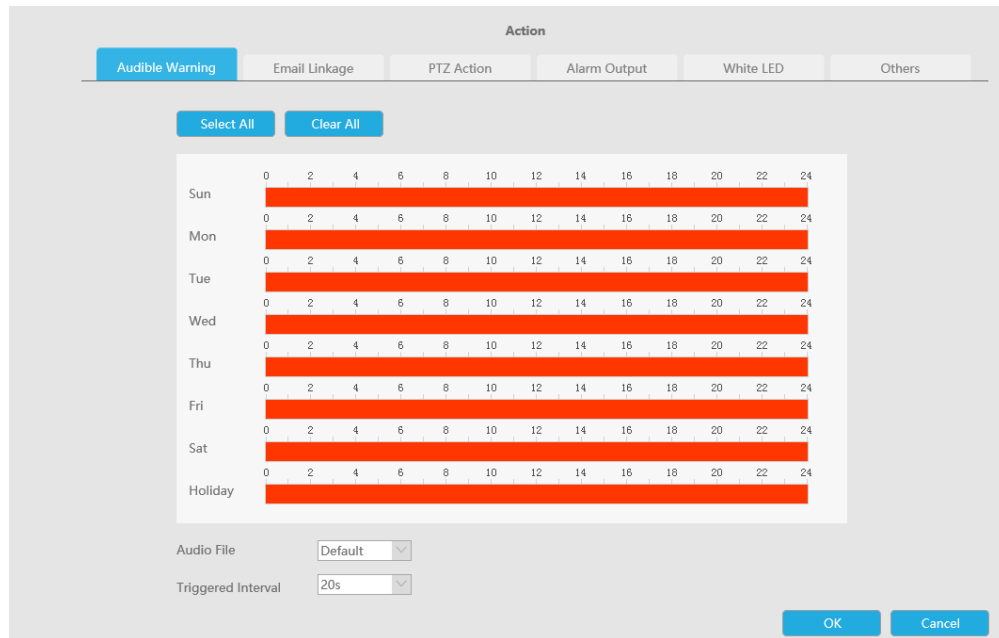


Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

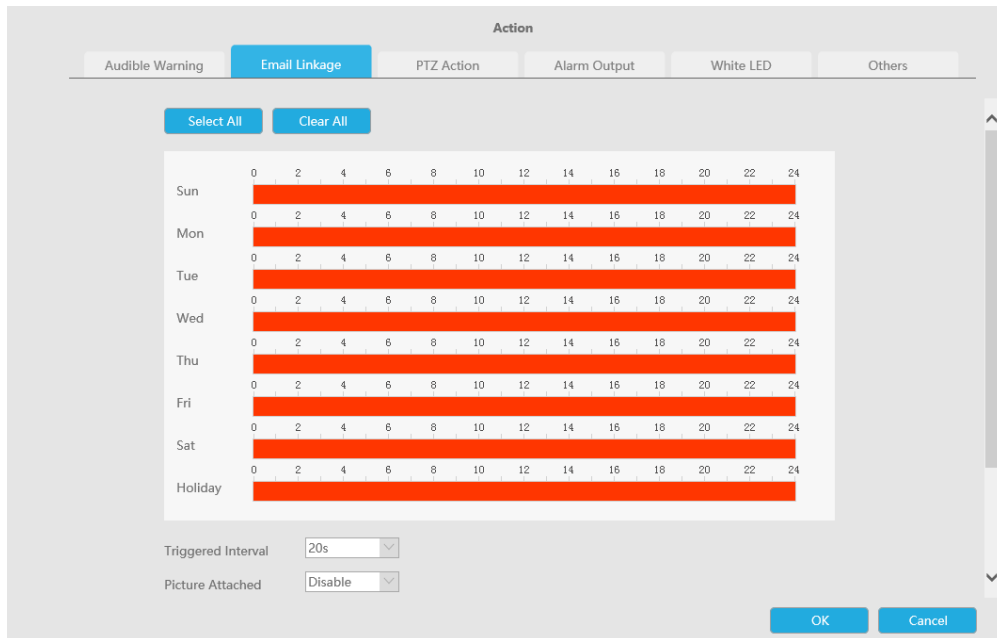


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

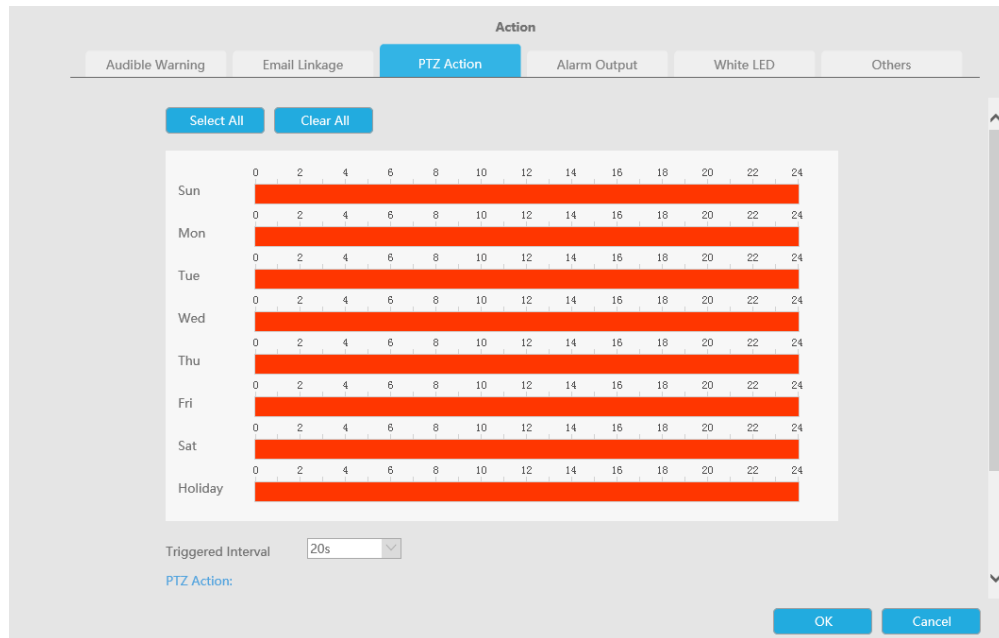

And you can add PTZ Action by clicking .

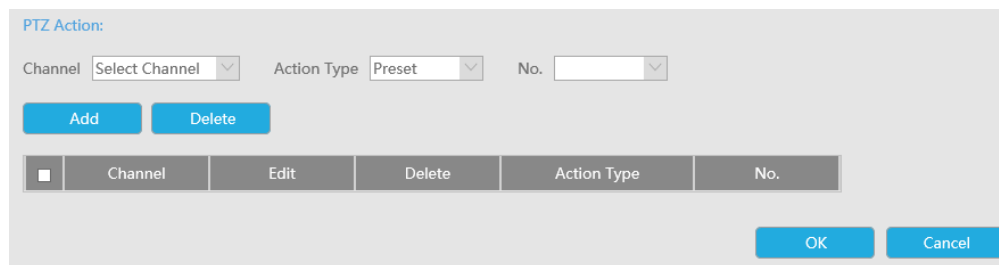


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2.etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

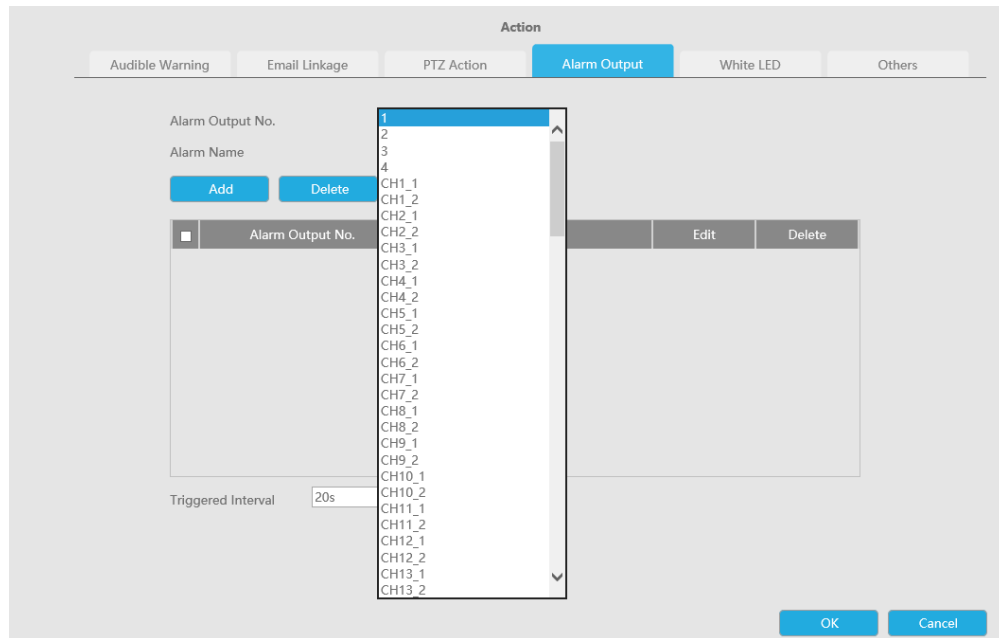


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:


User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

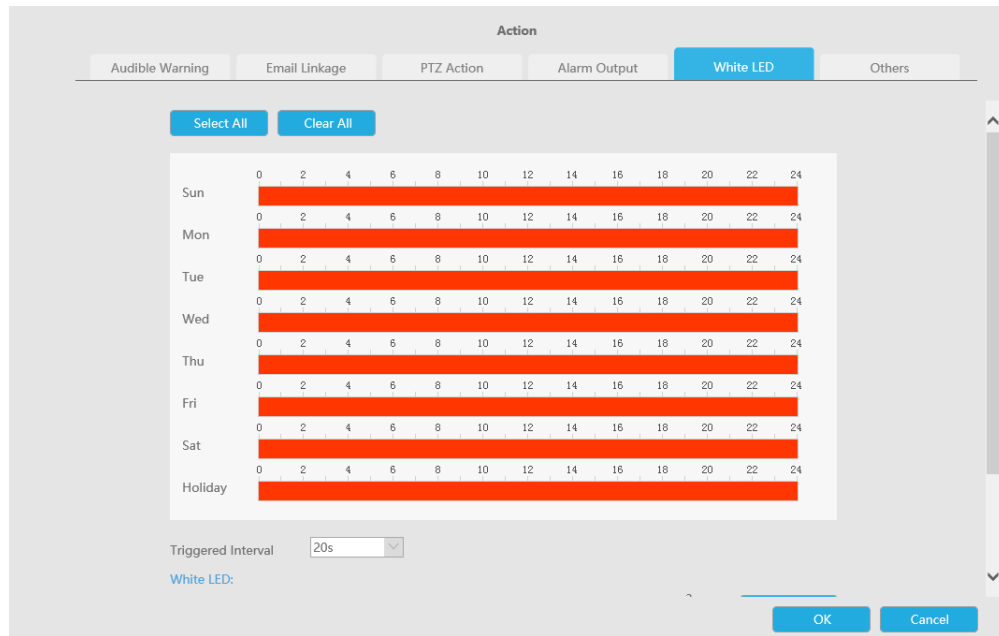

And you can add White LED by clicking .

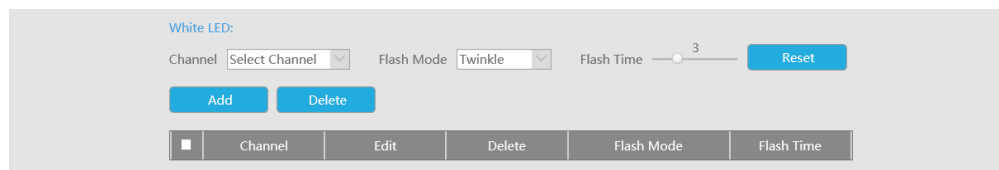

Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.

Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.

Others: Trigger selected channels to record when alarm is triggered.

Action

Audible Warning
Email Linkage
PTZ Action
Alarm Output
White LED
Others

Trigger Channels Record

All
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Trigger Channels Snapshot

All
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

Note: This page's configuration will not be copied into other channels.

OK
Cancel


Step4: Copy alarm input settings to other input interface by clicking "Copy".

Copy to Camera ▲

All
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

3.8.4 Alarm Output

3.8.4.1 NVR Alarm Output

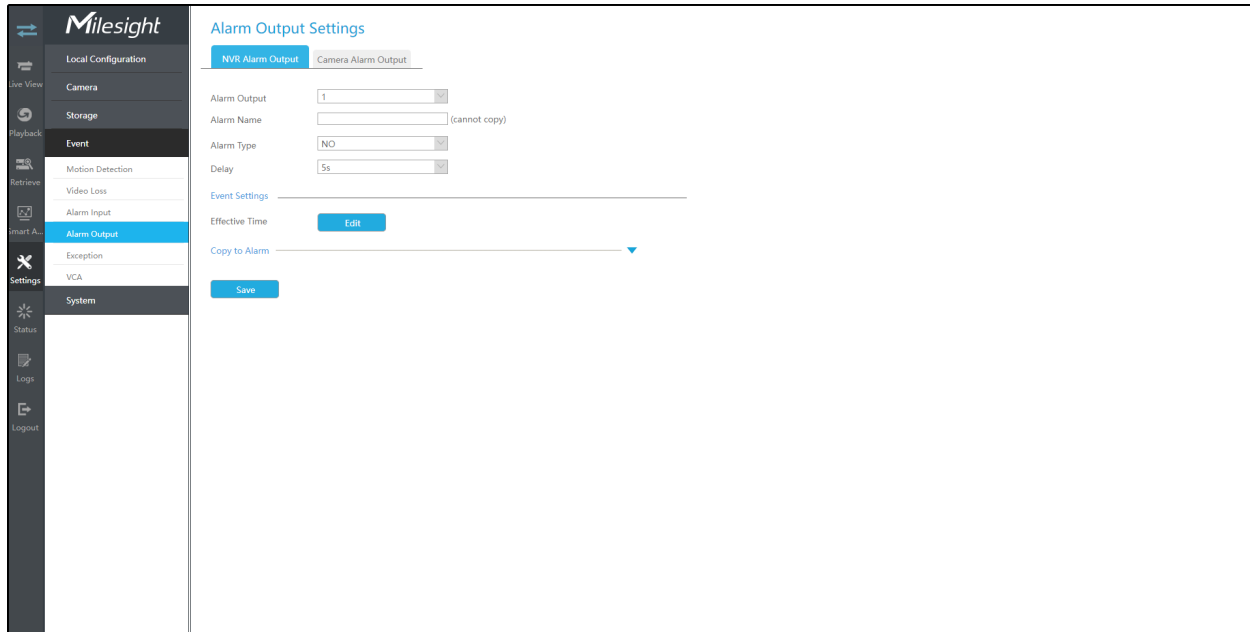

Step 1. Set Alarm output channel, Alarm Name, Alarm Type and Record Channels.

Alarm Output Settings

NVR Alarm Output
Camera Alarm Output

Alarm Output	<input style="width: 90%;" type="text" value="1"/>
Alarm Name	<input style="width: 90%;" type="text"/> (cannot copy)
Alarm Type	<input style="width: 90%;" type="text" value="NO"/>
Delay	<input style="width: 90%;" type="text" value="5s"/>

Alarm Output No.: The channel which will output the alarm signal.

Alarm Name: Set a name for the alarm.


Alarm Type: Choose NO or NC alarm type for the alarm.

Delay: The output time for alarm. If the output alarm lasts too long, you can select the Manually Clear to stop it.

Step 2. Set effective time for alarm output by clicking corresponding "Edit".

The user can set effective schedule as following two ways:

1. Select the operation type: Alarm Output or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking “Select All” or “Clear All” to set or clear all time settings.
2. Click “Edit” to edit record effective time manually.

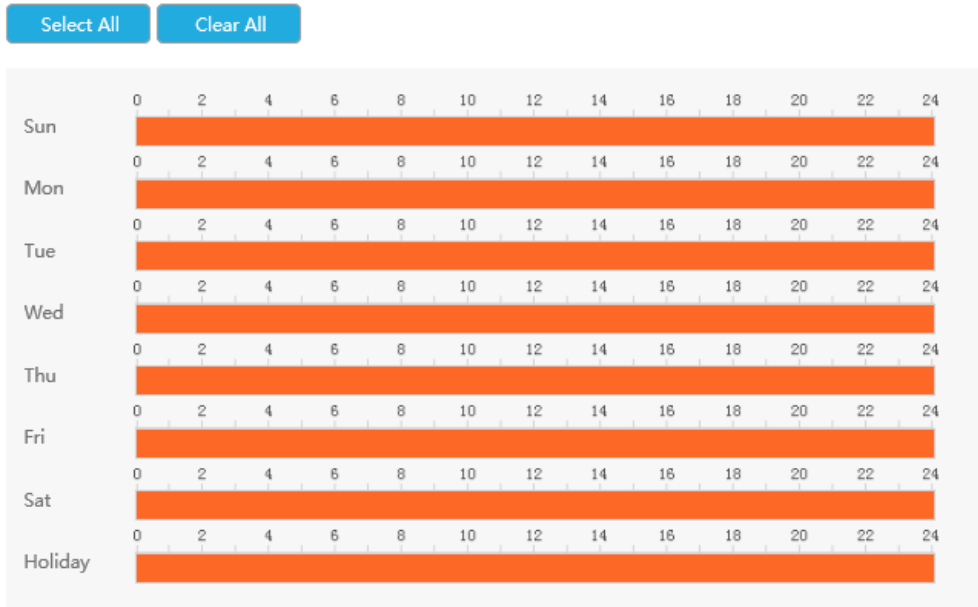


Step 3: Copy alarm output settings to other output interface by clicking “Copy”.



3.8.4.2 Camera Alarm Output

Milesight NVRs support the upgrade of Milesight Cameras.

Step 1. Set Alarm output channel, Alarm Name, Alarm Type and Record Channels.

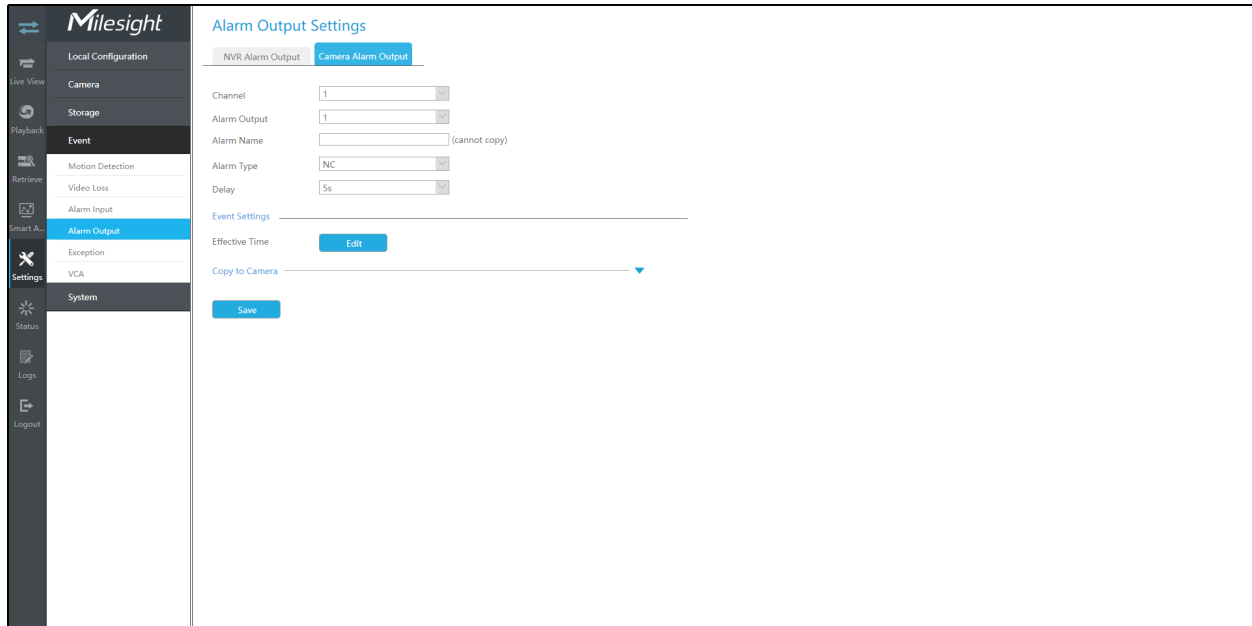

Alarm Output No.: The alarm output number of the corresponding channel which has input signal.

Alarm Name: Set a name for the alarm.


Alarm Type: Choose NO or NC alarm type for the alarm.

Delay: The output time for alarm. If the output alarm lasts too long, you can select the Manually Clear to stop it.

Step 2. Set effective time for alarm output by clicking corresponding "Edit".

The user can set effective schedule as following two ways:

1. Select the operation type: Alarm Output or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.
2. Click "Edit" to edit record effective time manually.

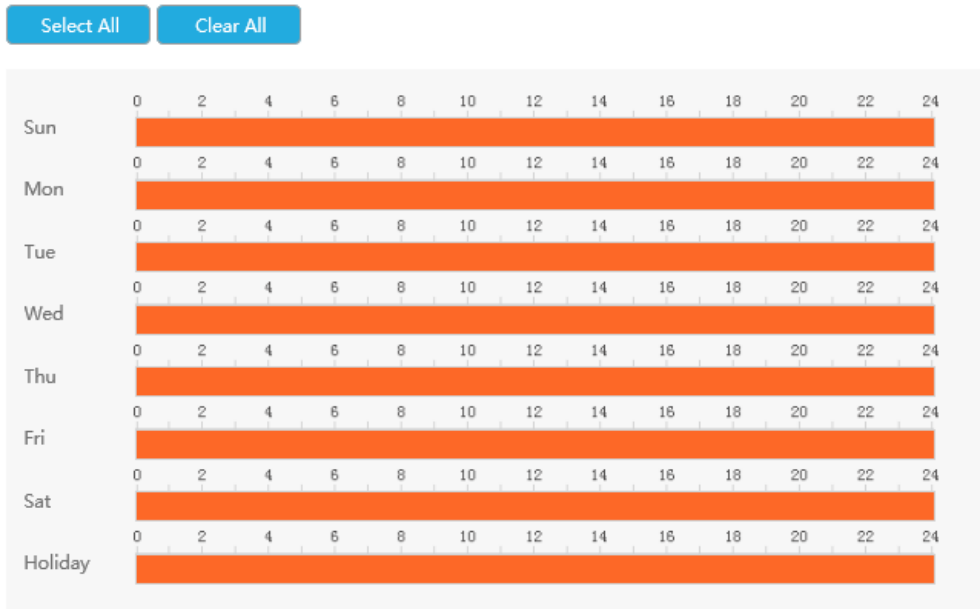


Step 3: Copy alarm output settings to other output interface by clicking “Copy”.

Copy to Camera ▲


All

- 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
- 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
- 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
- 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64

3.8.5 Exception

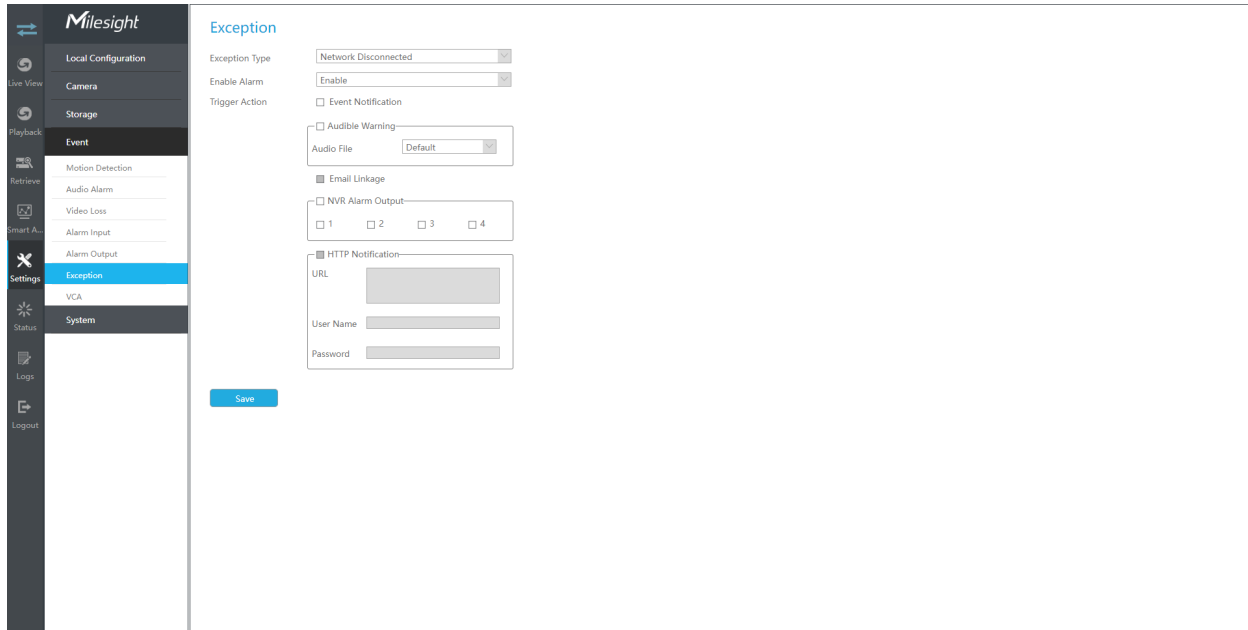

Step1. Select Exception Type.

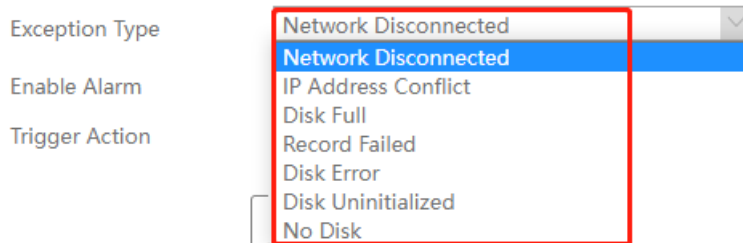

Network Disconnected: Loss of network.

IP Address Conflict: The IP of the NVR within the same LAN is the same as that of other devices.

Disk Full: Disk full. It usually happens when recycle Mode is OFF.

Record Failed: Recording fails, including HDD Failed, HDD Full and so on.

Disk Error: Failed to recognize HDD.

Disk Uninitialized: Disk is uninitialized.

No Disk: There is no storage device.

Exception

Exception Type	<div style="border: 1px solid gray; padding: 2px;"> <div style="background-color: #f0f0f0; padding: 2px;">Network Disconnected</div> <div style="background-color: #007bff; color: white; padding: 2px;">Network Disconnected</div> <div style="padding: 2px;">IP Address Conflict</div> <div style="padding: 2px;">Disk Full</div> <div style="padding: 2px;">Record Failed</div> <div style="padding: 2px;">Disk Error</div> <div style="padding: 2px;">Disk Uninitialized</div> <div style="padding: 2px;">No Disk</div> </div>
Enable Alarm	
Trigger Action	

Step2. Select Action includes Event Notification, Audible Warning, Email Linkage and Alarm Output.

Event Notification: You will get a notification in Live View if an alarm is triggered.

Audible Warning: NVR will trigger an audible warning. You can select the audio file as needed for audible warning. The default is an audible beep.

Email Linkage: An alarm Email will be sent if an alarm is triggered.

Trigger Interval: Set the interval to send Emails when detecting Record Failed Event (Only Record Failed Event supports to set trigger interval when sending emails).

Alarm Output: NVR will trigger the corresponding Alarm Output.

<input checked="" type="checkbox"/> Event Notification
<input type="checkbox"/> Audible Warning <div style="border: 1px solid gray; padding: 2px; display: inline-block;"> Audio File Default </div>
<input type="checkbox"/> Email Linkage
<input type="checkbox"/> NVR Alarm Output <div style="border: 1px solid gray; padding: 2px; display: inline-block;"> <input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4 </div>

3.8.6 VCA

It uses Milesight Video Content Analysis technology which is applied in a wide range of domains including entertainment, health-care, retail, automotive, transport, home automation, safety and security. Milesight VCA functions provides advanced, accurate smart video analysis for Milesight network cameras. It enhances the performance of network cameras through 10 detection modes which are divided into basic function and advanced function, enabling the comprehensive surveillance function and quicker response of cameras to different monitoring scenes.

3.8.6.1 Region Entrance

Region entrance helps to protect a specific area from potential threat of suspicious person's or object's entrance. An alarm will be triggered when objects enter the selected regions by enabling region entrance.

Step1. Select Channel and Region No, then enable Region Entrance.

Channel Event

Channel


Region No.

Region Entrance

Step 2. Set entrance detection region.

You can click "Edit" button to edit the detection region. Also, you can edit the area by clicking "Edit" button. And you can set or clear all set region by directly clicking "Set All" or "Clear All".

Region Settings

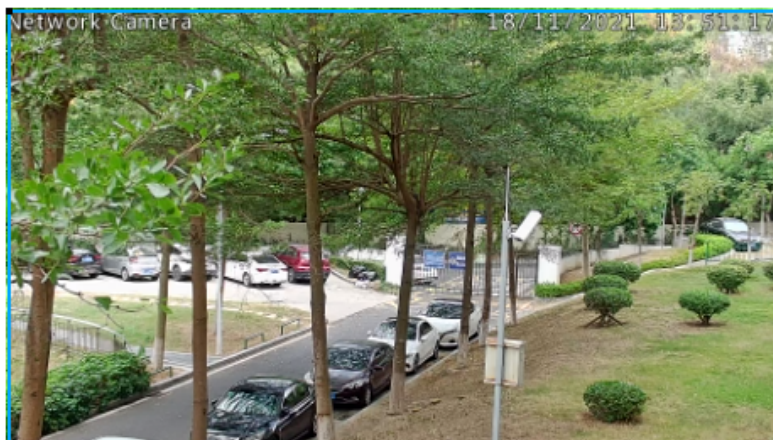


Region

Finish

Set All

Delete All

For cameras with the firmware version higher than 4X.7.0.78, it supports drawing polygon detection region for VCA function.

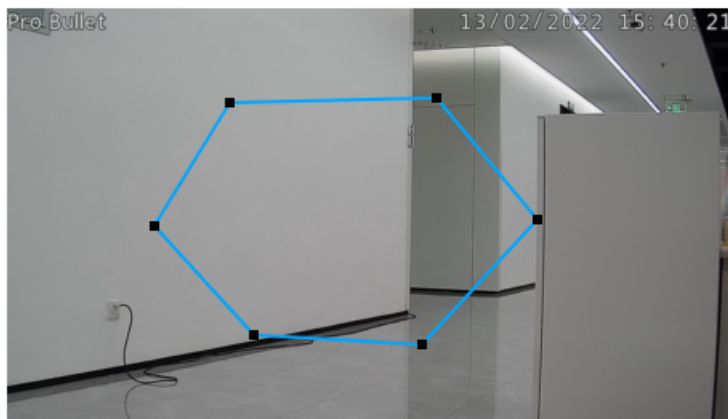

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

○ Minimum Size(1x1~320x240) x

○ Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step4. Set Sensitivity.

The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.



Step5. Select the Detection Object.

Human or Vehicle or both are selected as the detection object according to the need. Only the selected detection object can trigger the alarm.




Note:

1. Make sure your camera's version is 4X.7.0.77 or above, which supports the human/vehicle detection object.
2. Make sure your camera model is MS-CXXXX-XXC, which supports the human/vehicle detection object.

Step6. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

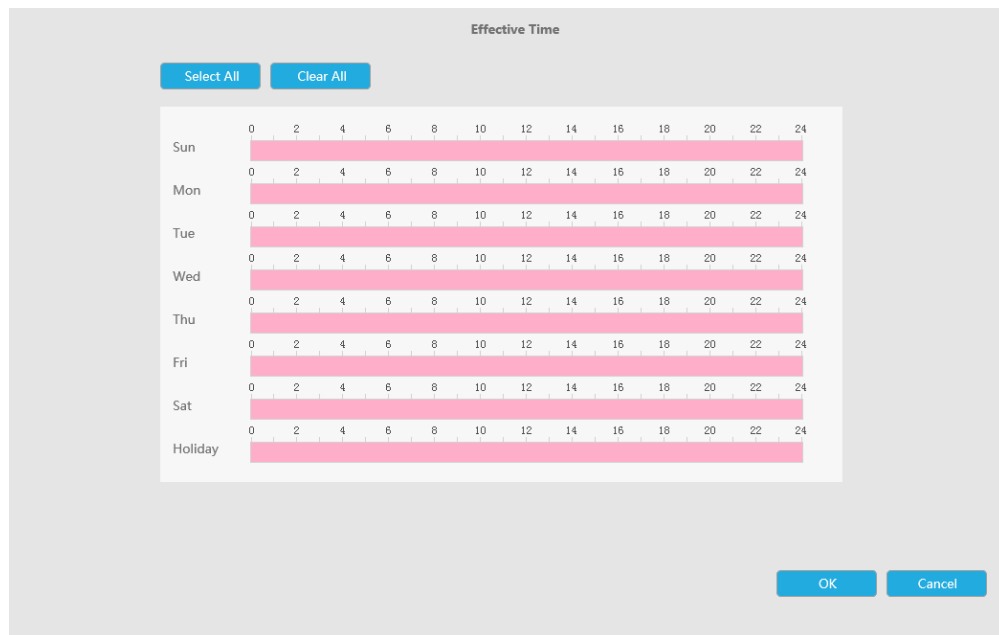

Step 7. Set Action for region entrance alarm by clicking "Edit".

Audible Warning:NVR will trigger an audible warning when event is detected.

The user can set effective schedule as following two ways:

1. Select the operation type: Audible or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit record effective time manually.

Audio File: Users can select the audio file as needed for audible warning. The default is an audible beep.

Triggered Interval:The effective interval between two actions when event triggered.

The screenshot shows the 'Action' configuration window for 'Audible Warning'. The window has a title bar 'Action' and a tab 'Audible Warning'. Below the tab are buttons for 'Select All' and 'Clear All'. The main area is a time table with rows for Sun, Mon, Tue, Wed, Thu, Fri, Sat, and Holiday. Each row has a horizontal bar representing the time interval from 0 to 24 hours. Below the time table are two dropdown menus: 'Audio File' set to 'Default' and 'Triggered Interval' set to '20s'. At the bottom right are 'OK' and 'Cancel' buttons.

Email Linkage:NVR will send an email to the address you set before.

The user can set effective schedule as following two ways:

1. Select the operation type, Email and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval:The effective interval between two actions when event triggered.


Picture Attached: Select whether to attach picture when sending Emails. If you enable it, you will receive alarm emails with one event captured picture attached.

The screenshot shows the 'Action' configuration page. The 'Email Linkage' tab is active. At the top, there are tabs for 'Audible Warning', 'Email Linkage', 'PTZ Action', 'Alarm Output', 'White LED', and 'Others'. Below these are 'Select All' and 'Clear All' buttons. The main area is a 7-day schedule table with columns for hours 0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, and 24. Each day (Sun, Mon, Tue, Wed, Thu, Fri, Sat) has a pink bar spanning from 0 to 24. There is also a 'Holiday' row with a pink bar from 0 to 24. Below the table are two dropdown menus: 'Triggered Interval' set to '20s' and 'Picture Attached' set to 'Disable'. At the bottom right are 'OK' and 'Cancel' buttons.


PTZ Action: Trigger PTZ action when alarm is triggered. PTZ action includes **Preset and Patrol**.

User can set effective schedule as following two ways:

1. Select the operation type: PTZ or Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

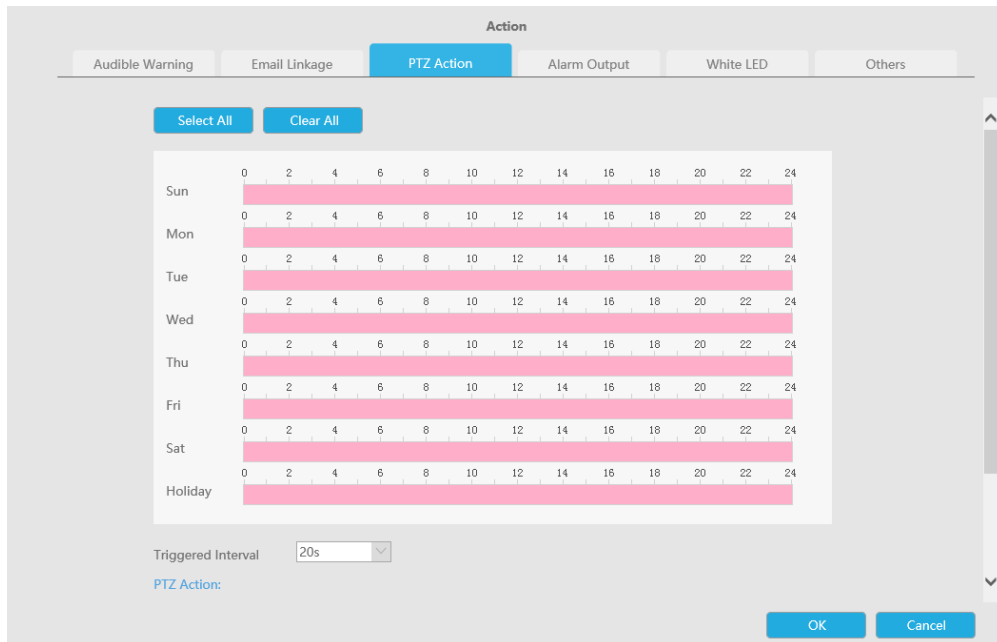

And you can add PTZ Action by clicking .

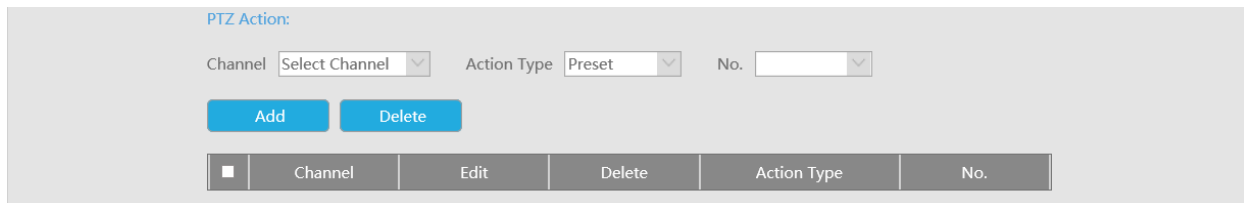


Channel: Select the channel which supports this function.

Action Type: Preset and Patrol are available.

No.: Select the number of Preset or Patrol.

Alarm Output: Trigger alarm output when alarm is triggered. For NVR Alarm Output, the relevant alarm output will be firstly listed, such as, 1, 2, etc. As for camera Alarm Output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

Triggered Interval: The effective interval between two actions when event triggered.

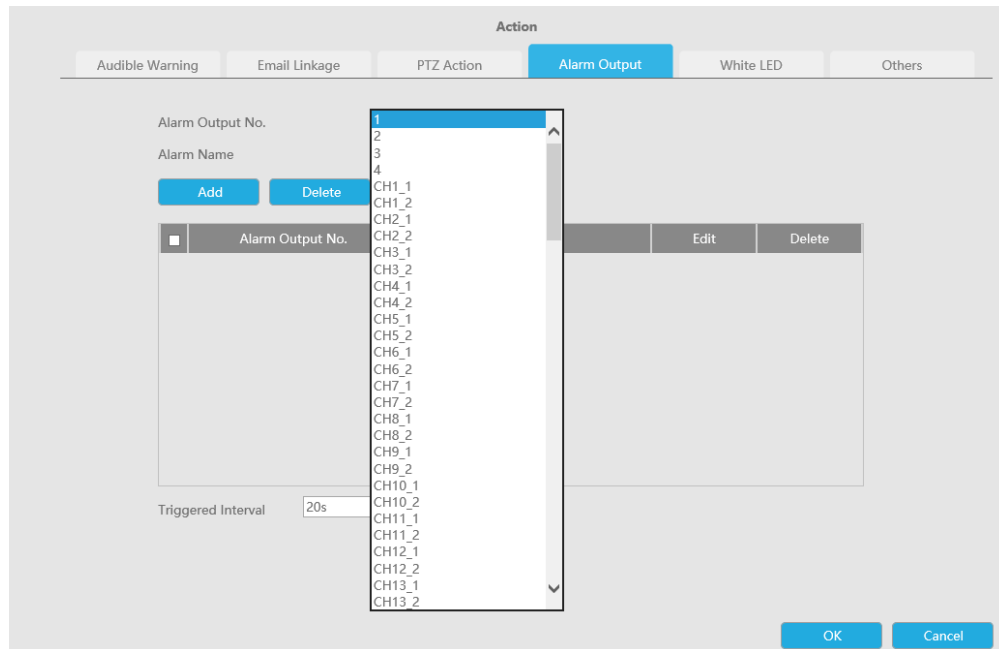


White LED: Trigger White LED flashing when alarm is triggered.

The user can set effective schedule as following two ways:


User can set effective schedule as following two ways:

1. Select the operation type, White LED and Erase. Then drag a square on the time table for time setting. It will be more convenient by clicking **Select All** or **Clear All** to set or clear all time settings.
2. Click **Edit** to edit effective time manually.

Triggered Interval: The effective interval between two actions when event triggered.

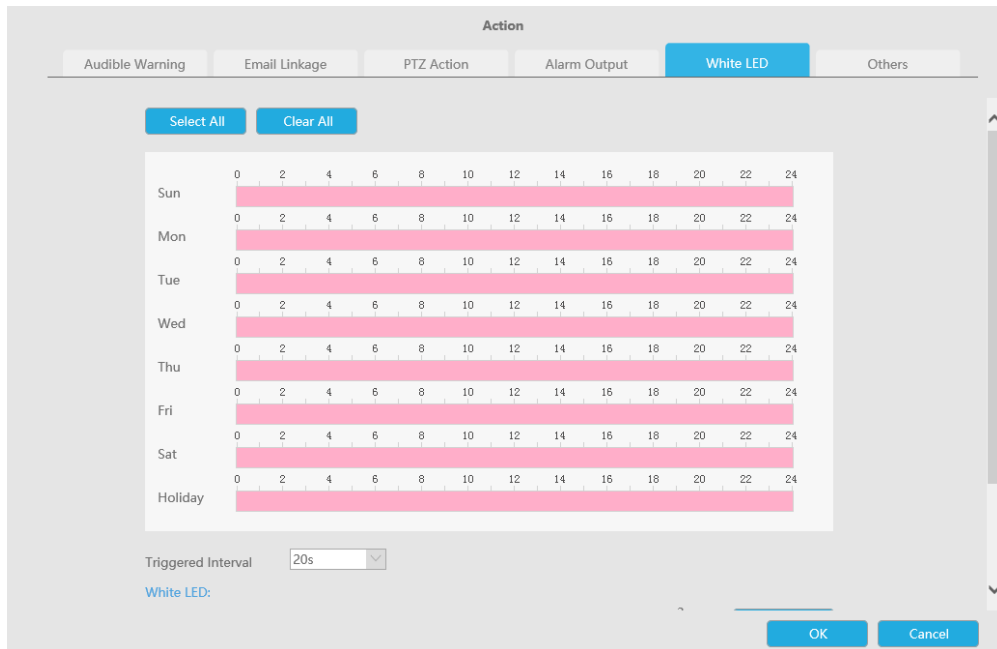

And you can add White LED by clicking .

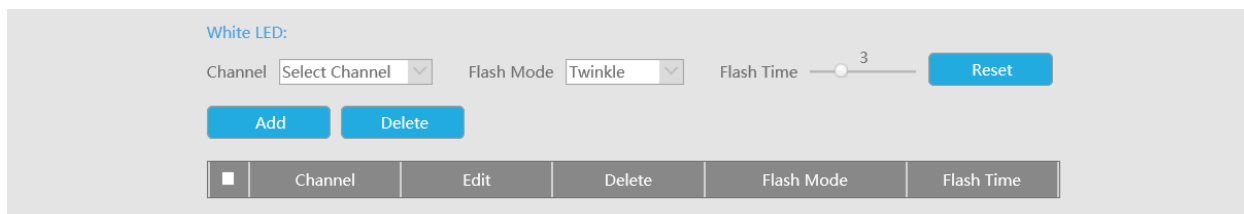


Channel: Select the channel which supports this function.

Flash Mode: Twinkle and Always are available.

Flash Time: Set the time for White LED flashing. When the Flash Mode is Twinkle, the range of Flash Time is 1~10 and the default value is 3. When the Flash Mode is Always, the range of Flash Time is 1~60 and the default value is 5.


Others: Trigger selected channels to record when alarm is triggered.

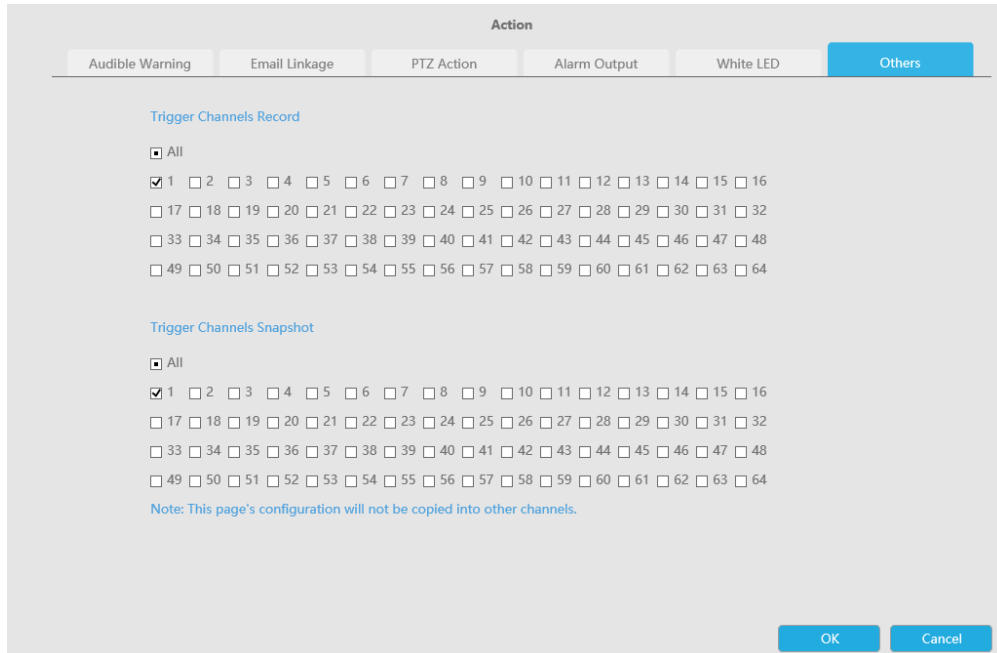

Step8. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.2 Region Exiting

Region exiting is to make sure that any person or object won't exit the area that is being monitored. Any exit of people or objects will trigger an alarm.

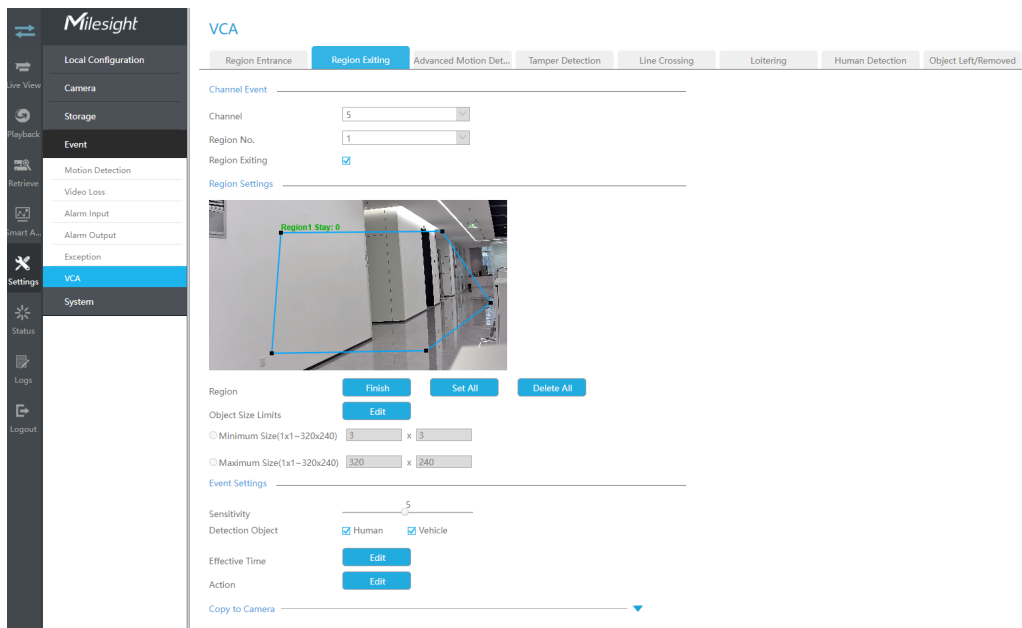

Step1. Select Channel and Region No, then enable Region Exiting.

Channel Event

Channel


Region No.

Region Exiting

Step 2. Set exit detection region.


You can click "Edit" button to edit the detection region. Also, you can edit the area by clicking "Edit" button. And you can set or clear all set region by directly clicking "Set All" or "Clear All".

Region Settings

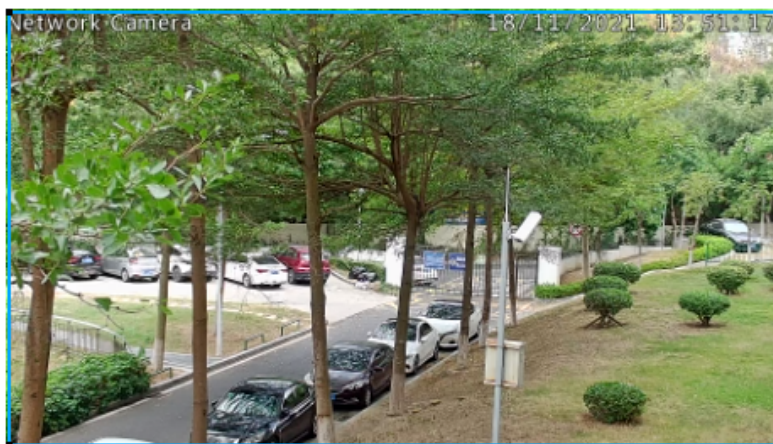

Region

For cameras with the firmware version higher than 4X.7.0.78, it supports drawing polygon detection region for VCA function.

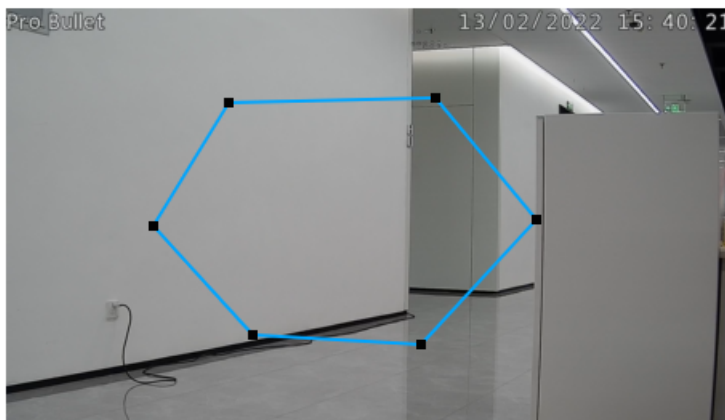

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

○ Minimum Size(1x1~320x240) x

○ Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step4. Set Sensitivity.

The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.

Sensitivity

Step5. Select the Detection Object.

Human or Vehicle or both are selected as the detection object according to the need. Only the selected detection object can trigger the alarm.

Detection Object Human Vehicle

Note:

1. Make sure your camera's version is 4X.7.0.77 or above, which supports the human/vehicle detection object.
2. Make sure your camera model is MS-CXXXX-XXC, which supports the human/vehicle detection object.

Step6. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

Effective Time

Sun	0	2	4	6	8	10	12	14	16	18	20	22	24
Mon	0	2	4	6	8	10	12	14	16	18	20	22	24
Tue	0	2	4	6	8	10	12	14	16	18	20	22	24
Wed	0	2	4	6	8	10	12	14	16	18	20	22	24
Thu	0	2	4	6	8	10	12	14	16	18	20	22	24
Fri	0	2	4	6	8	10	12	14	16	18	20	22	24
Sat	0	2	4	6	8	10	12	14	16	18	20	22	24
Holiday	0	2	4	6	8	10	12	14	16	18	20	22	24


Step 7. Set Action for region entrance alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#)

Step 8. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.3 Advanced Motion Detection


Different from traditional motion detection, advanced motion detection can filter out “noise” such as lighting changes, natural tree movements, etc. When an object moves in the selected area, it will trigger alarm.

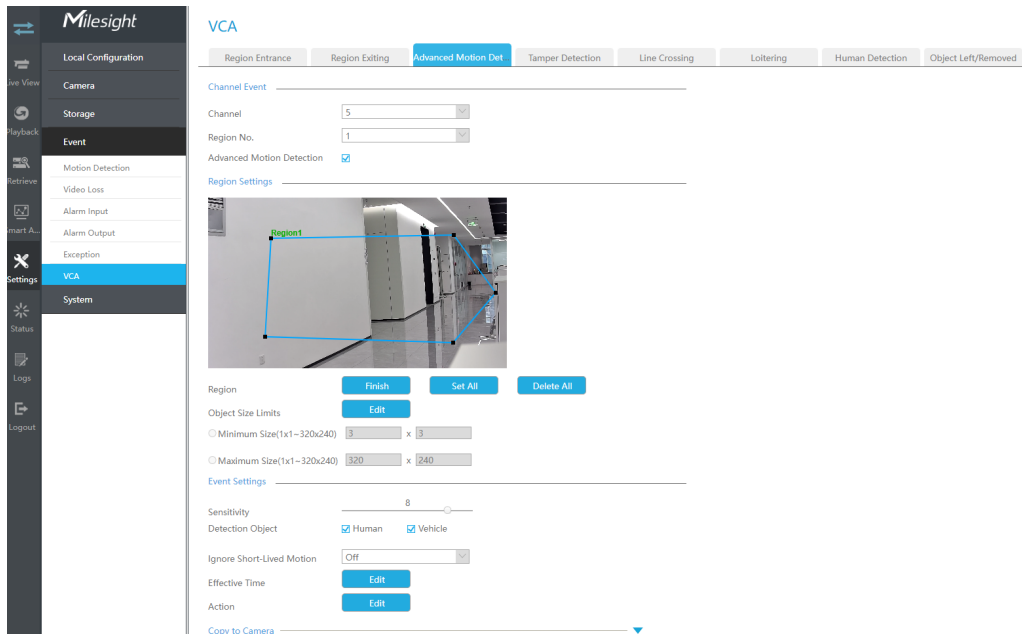


Step1. Select Channel and Region No, then enable Advanced Motion Detection.

Step 2. Set advanced motion detection region.

You can click "Edit" button to edit the detection region. Also, you can edit the area by clicking "Edit" button. And you can set or clear all set region by directly clicking "Set All" or "Clear All".

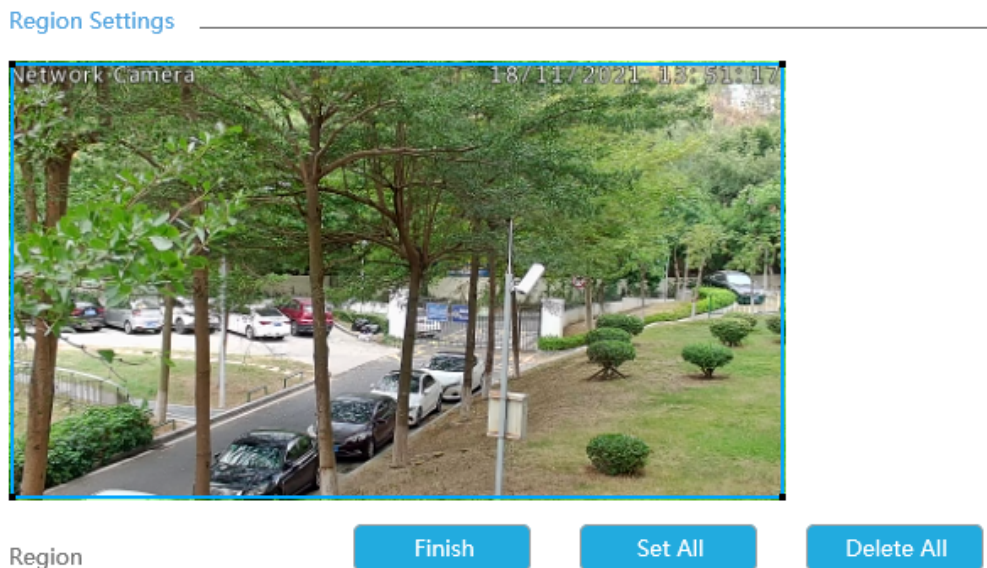

For cameras with the firmware version higher than 4X.7.0.78, it supports drawing polygon detection region for VCA function.

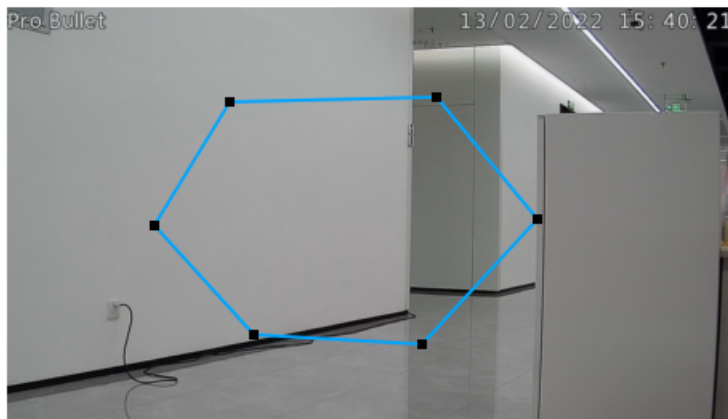

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

Minimum Size(1x1~320x240) x

Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step4. Set Sensitivity.

The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.

Sensitivity

Step5. Select the Detection Object.

Human or Vehicle or both are selected as the detection object according to the need. Only the selected detection object can trigger the alarm.

Detection Object Human Vehicle

Note:

1. Make sure your camera's version is 4X.7.0.77 or above, which supports the human/vehicle detection object.

2. Make sure your camera model is MS-CXXXX-XXC, which supports the human/vehicle detection object.

Step 6. Set Ignore Short-Lived Motion.

The motion within the set time will be ignored and won't trigger the alarm, making the detection more accurate and efficient.

Ignore Short-Lived Motion

Effective Time

Action

Off


1s

2s

3s

4s

5s

 **Note:** Make sure your camera's version is 4X.7.0.77 or above.

Step7. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

Effective Time

Select All
Clear All

	0	2	4	6	8	10	12	14	16	18	20	22	24
Sun													
Mon													
Tue													
Wed													
Thu													
Fri													
Sat													
Holiday													

OK
Cancel

Step 8. Set Action for advanced motion detection alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#)

Step9. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.4 Tamper Detection

Tamper Detection is used to detect possible tampering like the camera being unfocused, obstructed or moved. This functionality alerts security staff immediately when any above-mentioned actions occur.

Step1.Select channel and enable Tamper Detection.


Step 2. Set Sensitivity.

The sensitivity can be configured to detect various movements according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.



Step3. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

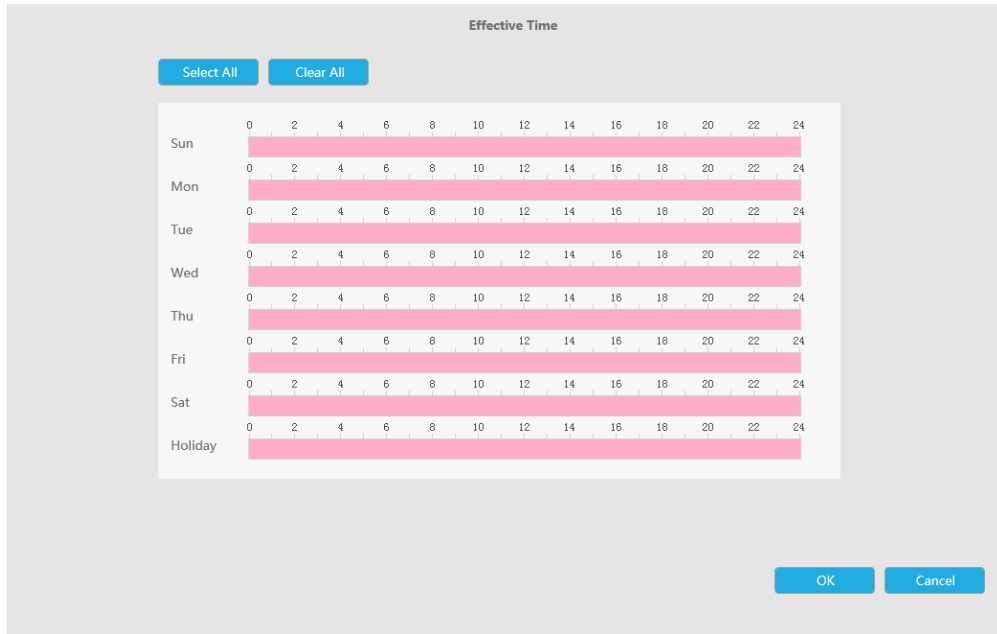

Step 4. Set Action for tamper detection alarm by clicking "Edit".


For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#).

Step5. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.5 Line Crossing

Line Crossing detection is designed to work in most indoor and outdoor environment. An event will be triggered every time when the camera detects objects crossing a defined virtual line.

Settings steps are shown as follows:

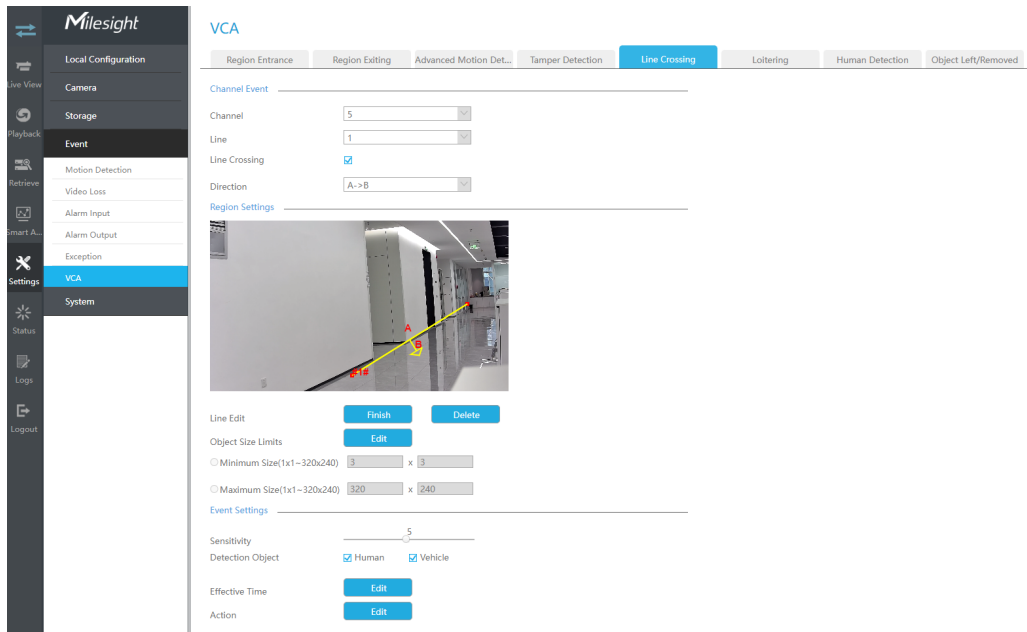

Step 1. Select Channel and enable Line Crossing.

Step 2. Choose detection line number.

Channel	<input type="text" value="4"/>
Line	<input type="text" value="1"/>
Line Crossing	<input checked="" type="checkbox"/>

Step 3. Define its direction.


It allows to set up to four lines at a time. There are three direction modes to choose for triggering alarm. “A#B” means when there is any object crossing the line from the “A” side to the “B” side, the alarm will be triggered. “B#A” vice versa. “A # B” means that the alarm will be triggered when objects cross line from either side.

Direction	<input type="text" value="A->B"/>
-----------	--------------------------------------

Step 4. Draw detection lines.

And you can edit the line by clicking "Edit" button.

Region Settings

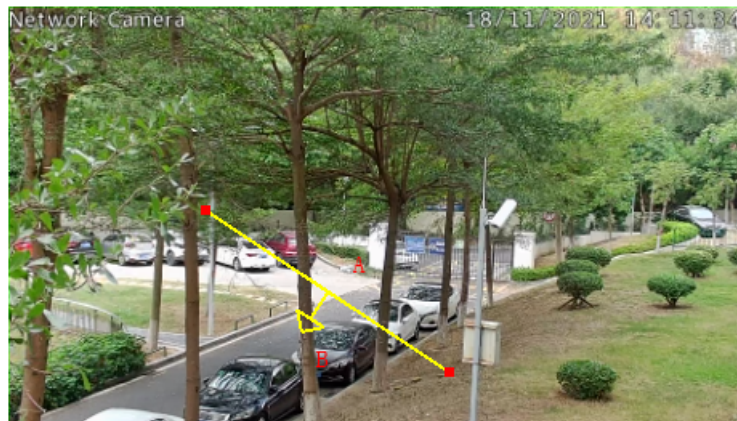

Line Edit

Finish

Delete

Note: Each Line Crossing configuration works separately and do not affect each other.

Step 5. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

○ Minimum Size(1x1~320x240) x

○ Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step 6. Set Sensitivity.

The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.



Step 7. Select the Detection Object.

Human or Vehicle or both are selected as the detection object according to the need. Only the selected detection object can trigger the alarm.

Detection Object Human Vehicle

Note:

1. Make sure your camera's version is 4X.7.0.77 or above, which supports the human/vehicle detection object.
2. Make sure your camera model is MS-CXXXX-XXC, which supports the human/vehicle detection object.

Step8. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

The screenshot displays the 'Effective Time' configuration window. At the top, there are two buttons: 'Select All' and 'Clear All'. Below these is a grid with rows for 'Sun', 'Mon', 'Tue', 'Wed', 'Thu', 'Fri', 'Sat', and 'Holiday'. Each row contains a horizontal bar representing the time range from 0 to 24 hours, with tick marks every 2 hours. The bars are currently empty, indicating that no specific time ranges have been set. At the bottom right of the window, there are two buttons: 'OK' and 'Cancel'.


Step 9. Set Action for line crossing alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#).

Step10. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.6 Loitering

When objects are loitering in a defined area for a specific period of time, it would trigger an alarm.

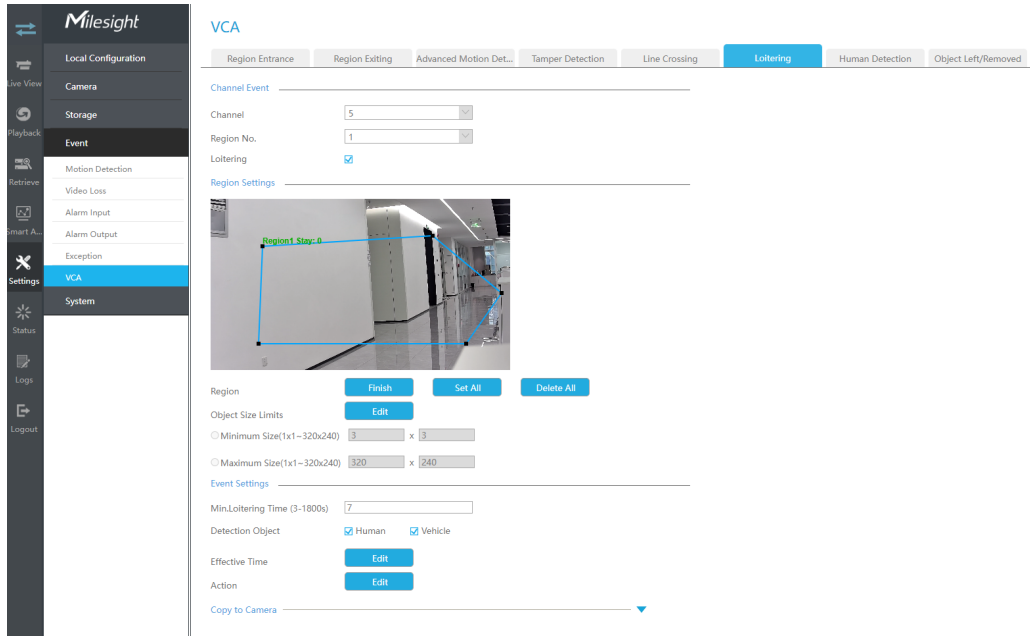

Step1.Select Channel and Region No, then enable Loitering.

Channel Event

Channel


Region No.

Loitering

Step 2. Set Loitering detected region.

You can click "Edit" button to edit the detection region. Also, you can edit the area by clicking "Edit" button. And you can set or clear all set region by directly clicking "Set All" or "Clear All".

Region Settings

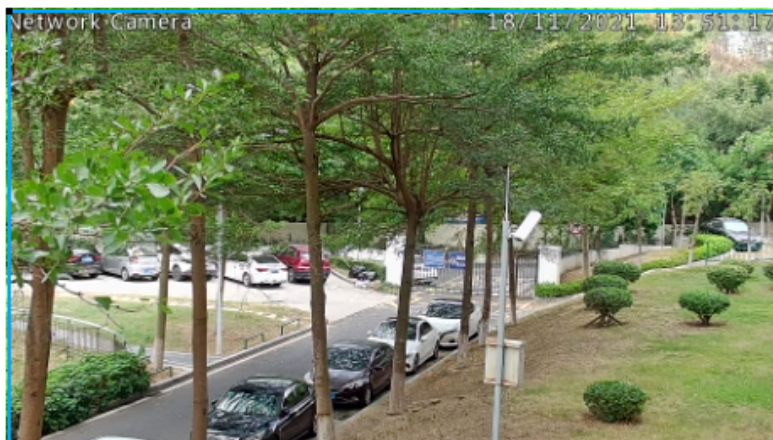


Region

Finish

Set All

Delete All

For cameras with the firmware version higher than 4X.7.0.78, it supports drawing polygon detection region for VCA function.

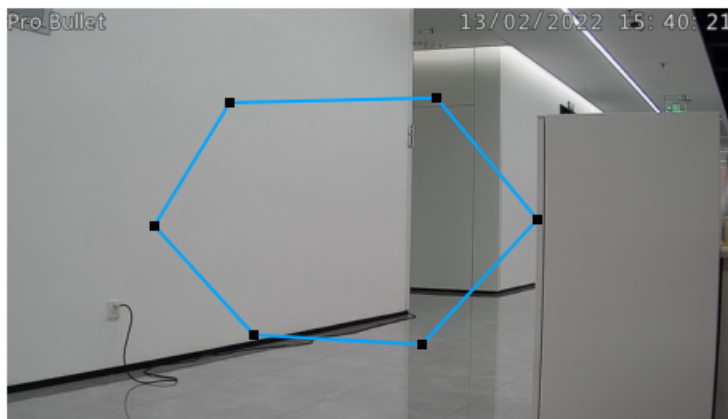

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

○ Minimum Size(1x1~320x240) x

○ Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step 4. Set Min. Loitering Time.

After setting minimum loitering time from 3s to 1800s, any objects loitering in the selected area over the minimum loitering time will trigger the alarm.

Min.Loitering Time (3-1800s)

Step5. Select the Detection Object.

Human or Vehicle or both are selected as the detection object according to the need. Only the selected detection object can trigger the alarm.


Detection Object Human Vehicle

 **Note:**

- Make sure your camera's version is 4X.7.0.77 or above, which supports the human/vehicle detection object.
- Make sure your camera model is MS-CXXXX-XXC, which supports the human/vehicle detection object.

Step6. Set Effective Time of region entrance by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

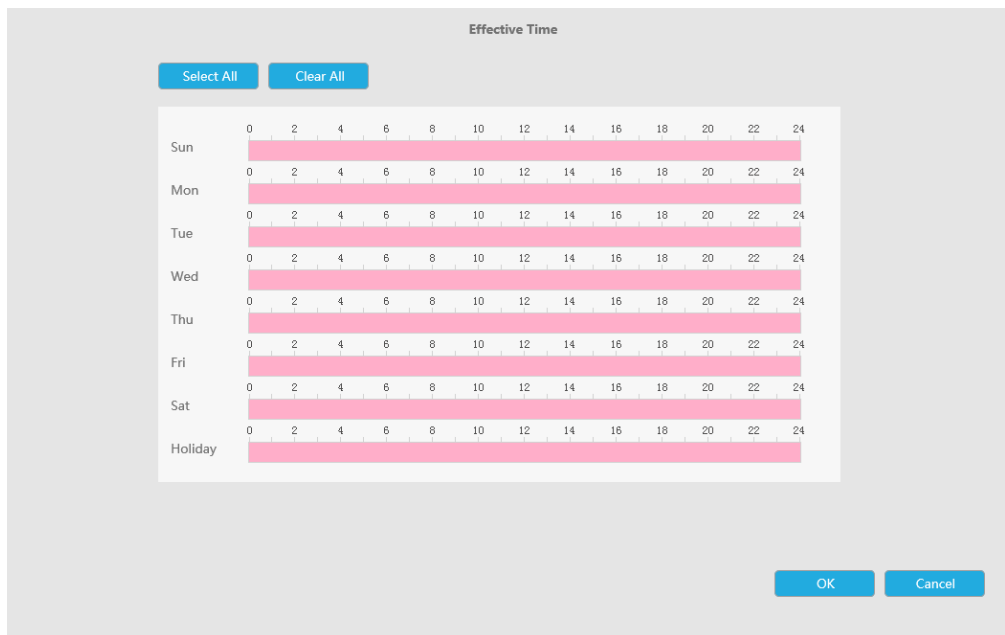

The interface displays a table for setting the effective time. The columns represent hours from 0 to 24 in increments of 2. The rows represent days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and a 'Holiday' row. All cells in the grid are highlighted in pink, indicating that the effective time is set for all days and all hours. At the top left, there are buttons for 'Select All' and 'Clear All'. At the bottom right, there are buttons for 'OK' and 'Cancel'.


Step 7. Set Action for loitering alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#).

Step8. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.7 Human Detection

Human detection is used for figuring out whether an object is a human or not.

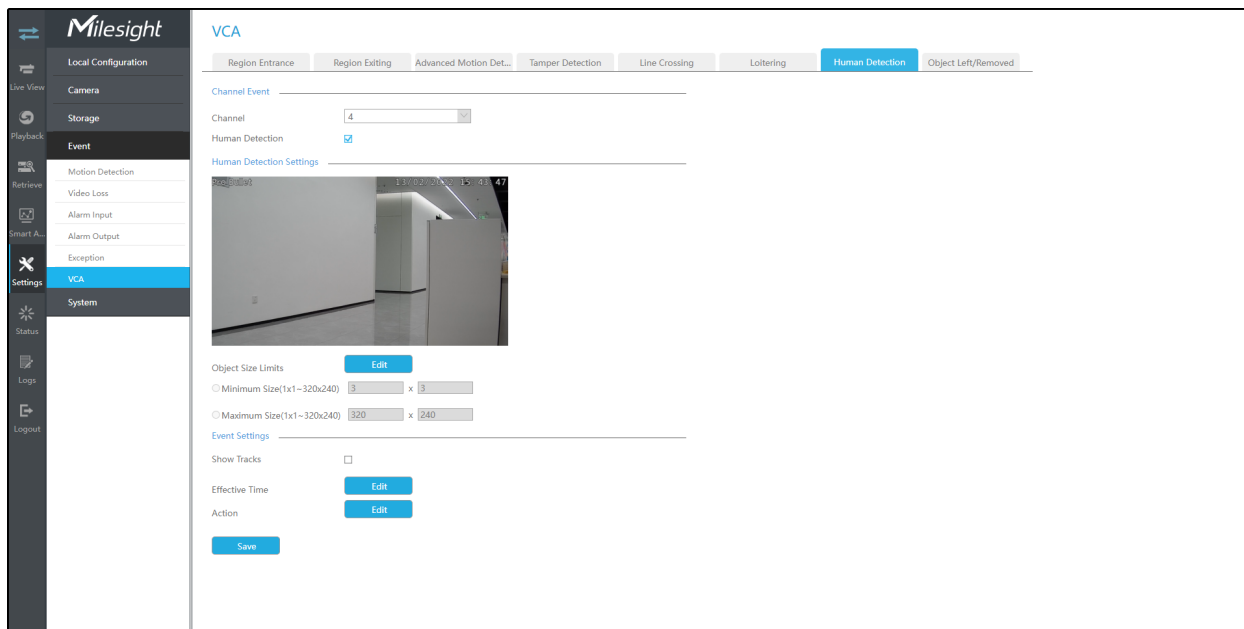

Step1. Select channel and enable Human Detection.

Human Detection

Step 2. Enable Show Tracks or not.

Show Tracks

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

Minimum Size(1x1~320x240) x


Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step 4. Set Effective Time of human detection by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

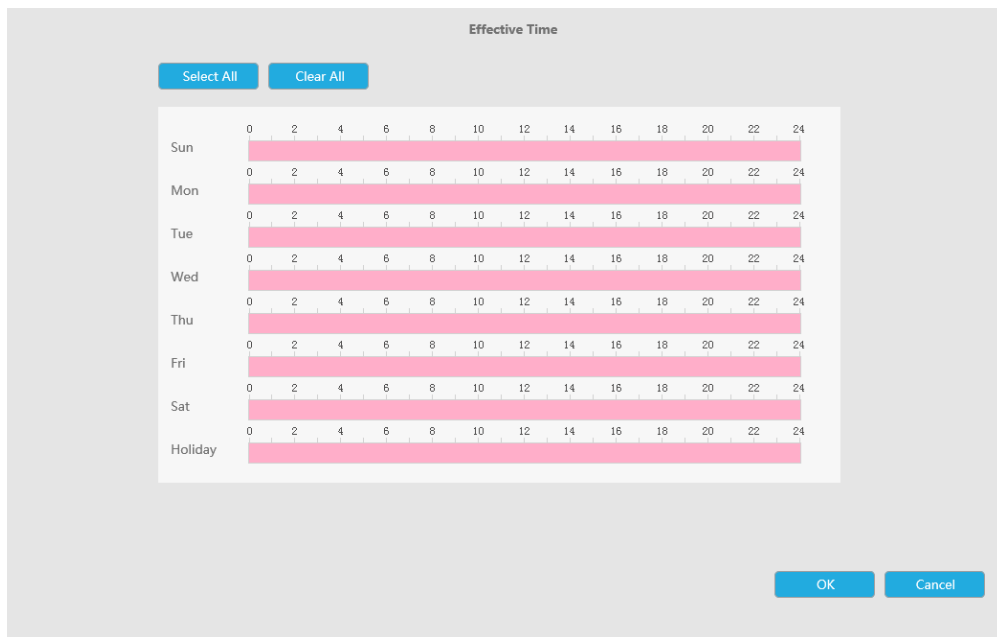

Step 5. Set Action for human detection alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#).


Step 6. Click [Copy to Camera] to copy the same configuration to other channels.

3.8.6.8 Object Left/Removed

Object Left can detect and prompt an alarm if an object is left in a pre-defined region. Object Removed can detect and prompt an alarm if an object is removed from a pre-defined region.

 **Note:** You need to upgrade the NVR to V7x.9.0.4-r2 or above to support this function.


Step1. Select Channel and Region No, then enable Object Left or Object Removed (Or you can enable both features at the same time).

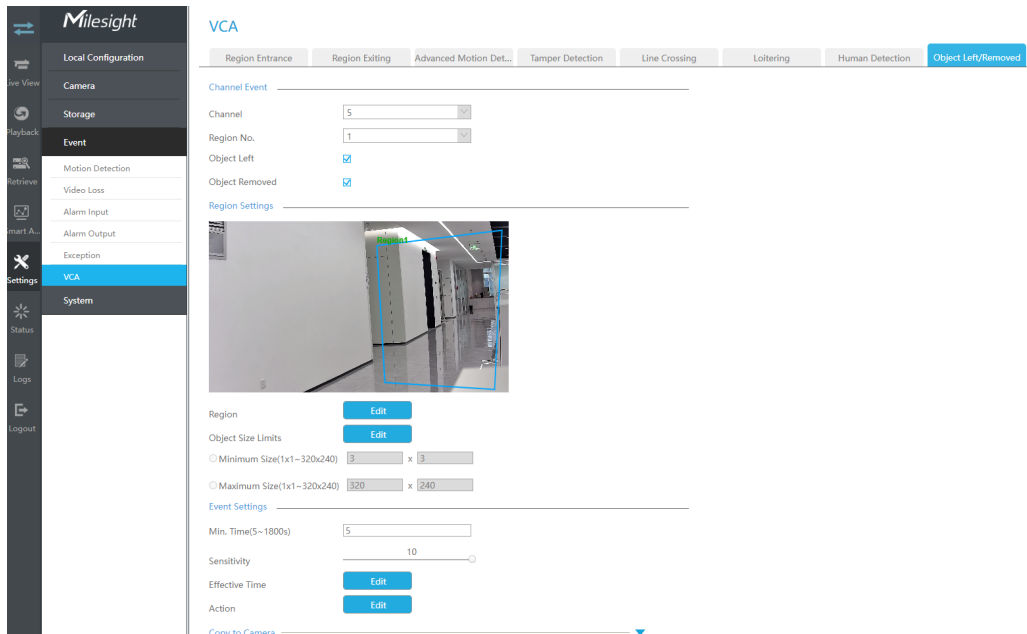


Step 2. Set Loitering detected region.

You can click "Edit" button to edit the detection region. Also, you can edit the area by clicking "Edit" button. And you can set or clear all set region by directly clicking "Set All" or "Clear All".

Region Settings

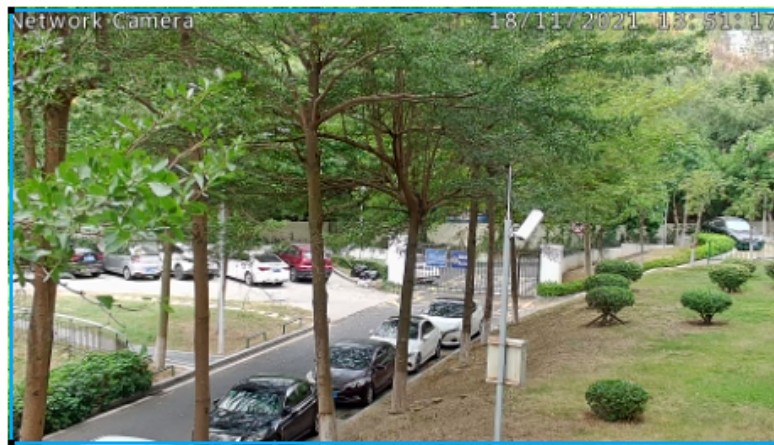

For cameras with the firmware version higher than 4X.7.0.78, it supports drawing polygon detection region for VCA function.

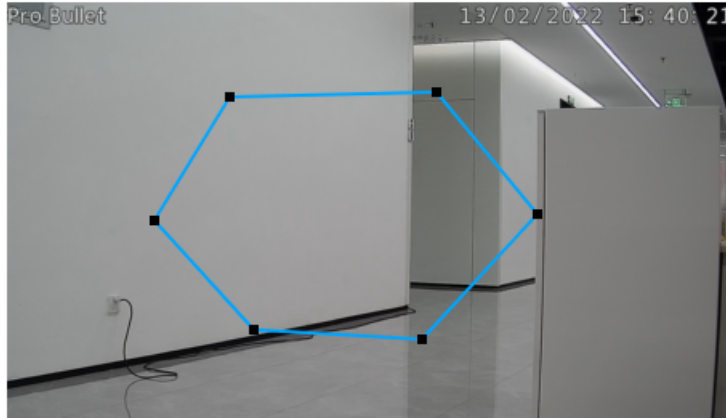

Step 3. Set the Object Size Limits.

You can edit Minimum Size and Maximum Size by clicking "Edit" button.

Minimum Size(1x1~320x240) x

Maximum Size(1x1~320x240) x

Minimum Size: The Min. Size means that only if the object size is bigger than the frame, the settings for Region Entrance will take effect.

Maximum Size: The Max. Size means the opposite, only if the object size is smaller than the frame you drew on the screen, the settings for Region Entrance will take effect.

Step 4. Set Min. Time.

After setting minimum time from 3s to 1800s, any objects are left in the selected area or removed from the selected area over the minimum time will trigger the alarm.

Channel Event _____

Channel

Region No.

Object Left

Object Removed


Step 5. Set Sensitivity.

The sensitivity can be configured to detect various movement according to different requirements. When the level of sensitivity is low, slight movement won't trigger the alarm.

Sensitivity

Step 4. Set Effective Time of Object Left/Removed by clicking "Edit".

NVR receives the alarm when effective time has been set. It will be more convenient by clicking "Select All" or "Clear All" to set or clear all time settings.

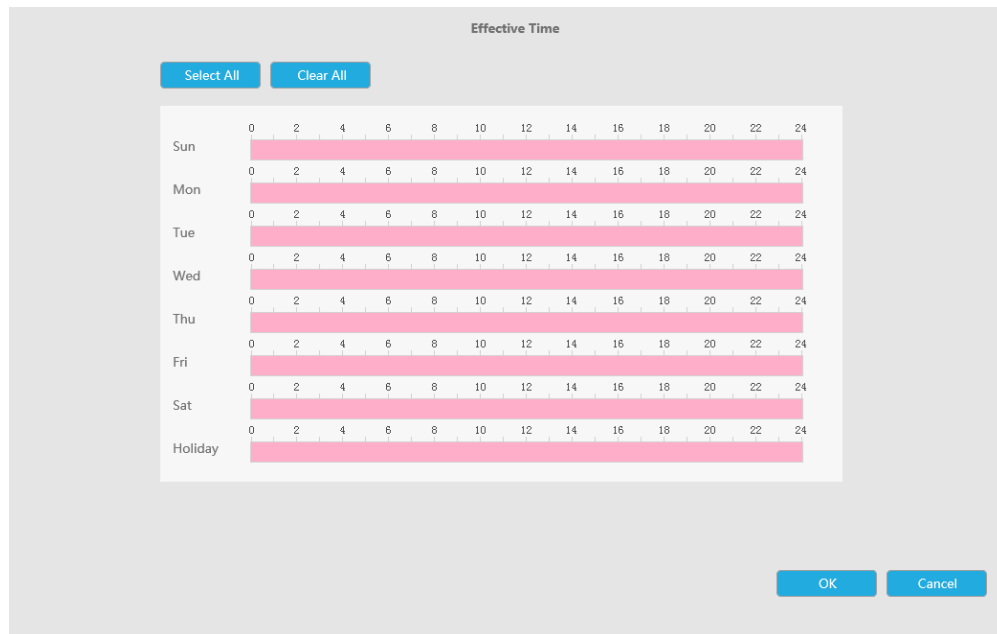

Step 5. Set Action for Object Left/Removed alarm by clicking "Edit".

For detailed settings of these actions, please refer to [Alarm Action \(page 190\)](#).

Step 6. Click [Copy to Camera] to copy the same configuration to other channels.

3.9 Settings

3.9.1 Local Configuration

Local Configuration includes Record File Path, Preview Picture Path, Preview Playback Path, Language, Connection Type, Play Mode and Primary Stream in Fullscreen option. This interface support unified configuration of formats and paths for record files and pictures.

Local Configuration

Record File

Download Record File Format

Live View Record File Path

Playback Record File Path

Retrieve Record File Path

Picture

Picture Resolution

Live View Picture Path

Playback Picture Path

Retrieve Picture Path

Other Configuration

Language

Connection Type

Play Mode

Auto Logout

Primary Stream When Fullscreen

3.9.2 General

Date & Time

It is for setting up the Time parameters of NVR, including Time Z one, Daylight Saving Time, Time Setting, Server Address, NTP Sync, Interval, etc.

General Settings

Date & Time

Device

Current System Time

Date 13/10/2022

Time 14:59:12

Set The System Time

Time Zone

Daylight Saving Time

NTP Server

Server Address

NTP Sync

Interval 1~43200 min

Manual

Time

Sync with computer time

Date 13/10/2022

Time 14:59:13

Server Address:Support to Enter the address of NTP Server manually.

NTP Sync:Set the time of NVR to synchronize with the NTP server.

Interval:The interval for synchronizing with NTP server can be set and support NTP Interval ranging from 1 to 43200 minutes.

Device

It is for setting up the general parameters of NVR, including Device Name, HDMI/VGA Resolution, Language, HDMI2/VGA2, HDMI Audio, Audio Out, etc.

General Settings

Date & Time	Device
Device Name	<input type="text" value="NVR"/>
HDMI1 Audio	<input type="text" value="Enable"/> ▼
Audio Out	<input type="text" value="Enable"/> ▼
Boot Wizard	<input type="text" value="Enable"/> ▼
HDMI Compatible Mode	<input type="text" value="Enable"/> ▼
Stream Information	<input type="text" value="Disable"/> ▼
HDMI1/VGA1 Resolution	<input type="text" value="1920 x 1080 / 60Hz"/> ▼
HDMI2/VGA2	<input type="text" value="Enable"/> ▼
HDMI2/VGA2 Resolution	<input type="text" value="1920 x 1080 / 60Hz"/> ▼

Device Name: Set the device name.

HDMI1/VGA1Resolution: Set the output resolution of HDMI1/VGA1 port.

HDMI2/VGA2: Enable it to use HDMI2/VGA2 port.

HDMI2/VGA2Resolution: Set the output resolution of HDMI2/VGA2 port.

HDMI1 Audio: Enable it to use HDMI1 Audio.

Audio Out: Enable Audio Out.

Boot Wizard: Enable it to pop up boot wizard after rebooting.

Stream Information: Enable it to see bit rate, frame rate and frame size in both live view and playback interface.



Note:

1. For some models, the stream information will reveal synchronously while transcoding is enabled.
2. Channels that play H.265 in plugin-free mode will not display the stream information.

3.9.3 Network

3.9.3.1 Basic

Working Mode

It supports three working modes of Multi-address, Load Balance and Net Fault-tolerance.

For Multi-address mode, you can set LAN1 or LAN2 as the default route according to the needs.

 **Note:** Only Pro NVR 7000 Series and Pro NVR 8000 Series support this function.

The system supports two IP address format: IPv4 and IPv6

IPv4

Enable IPv4 DHCP to auto search IP. When enable DHCP function, you can not modify IP/ Subnet mask/ Gateway.

Disable IPv4 DHCP to modify IP/ Subnet mask/ Gateway manually.

IPv6

Manual/ Router Advertisement/ DHCPv6 are available.

DNS Server

Preferred DNS Server: DNS server IP address.

Alternate DNS Server: DNS server alternate address.

Network

Basic	UPnP	DDNS	Email	Milesight Cloud	PPPoE	SNMP	HTTPS	More
Working Mode	Multi-address							
Default Route	LAN1							
NIC Settings								
Select NIC	LAN1 <input checked="" type="checkbox"/> Enable							
IPv4 DHCP	Disable							
IPv4 Address	192 . 168 . 7 . 103							
IPv4 Subnet Mask	255 . 255 . 240 . 0							
IPv4 Gateway	192 . 168 . 9 . 2							
IPv6 Mode	Manual							
IPv6 Address	<input type="text"/>							
IPv6 Prefix Length	<input type="text"/>							
IPv6 Gateway	<input type="text"/>							
MAC	1C:C3:16:0A:25:F6							
MTU(Byte)	1500							
DNS Server								
Preferred DNS Server	8 . 8 . 8 . 8							
Alternate DNS Server	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>							
Save								

Note:

1. Check the DHCP check-box when there is a DHCP server running in the networks.
2. Once DHCP is enabled, DNS will change accordingly.
3. The valid range of MTU is 1200~1500.
4. Do not input an IP address conflicting with another device.
5. Working mode option is only for NVR 7000/8000 Series. Internal NIC IPv4 Address is only for PoE NVR Series.

3.9.3.2 UPnP

With the function enabled, you don't need to configure the port mapping for each port in router, it will do the port mapping in router automatically once **router supports UPnP**.

Network

Basic | **UPnP** | DDNS | Email | P2P | PPPoE | SNMP | HTTPS | More

UPnP:

Forwarding Type:

Port Type	Edit	External Port	Internal Port	Status
HTTP		21202	80	Invalid
RTSP		23202	554	Invalid

3.9.3.3 DDNS

Using DDNS to solve the dynamic IP address problem.

Check DDNS check-box to enable it, then select a DDNS Server and input the user name, password and host name. Do not forget to save the configuration.

Milesight has its own DDNS server. Please do port forwarding for HTTP port and RTSP port before enabling **Milesight DDNS**. Then input corresponding information and you can use <http://ddns.milesight.com:MAC> to access device remotely.

Note: “Host Name” must begin with letters, and it can only contain number, letters, and hyphen.

Network

Basic | UPnP | **DDNS** | Email | P2P | PPPoE | SNMP | HTTPS | More

Enable DDNS:

Provider:

External HTTP Port:

External RTSP Port:

DDNS URL:

3.9.3.4 Email

A screenshot will be sent to the receivers when alarm is triggered.

Network

Basic	UPnP	DDNS	Email	P2P	PPPoE	SNMP	HTTPS	More
Email	<input type="text" value="Enable"/>							
User Name	<input type="text" value="elena@gmail.com"/>							
Password	<input type="password" value="*****"/>							
SMTP Server	<input type="text" value="smtp.gmail.com"/>							
SMTP Port	<input type="text" value="465"/>							
Encryption	<input type="radio"/> TLS <input checked="" type="radio"/> SSL							
Host Name	<input type="text" value="http://"/>							<input type="checkbox"/> Enable
Sender Email Address	<input type="text" value="elena@gmail.com"/>							
Receiver Email Address 1	<input type="text" value="elena@163.com"/>							
Receiver Email Address 2	<input type="text"/>							
Receiver Email Address 3	<input type="text"/>							
<input type="button" value="Save"/>		<input type="button" value="Test"/>						

Enable Email selection and then begin configuration.

Username: The E-mail address you choose to send emails. Please input **full email address**.

Password: The password of the E-mail.

SMTP Server: The SMTP Server of your E-mail.

SMTP Port: The port of SMTP Server. It's usually 25.


Sender Email Address: It must be same as [User name].

Receiver Email Address: E-mail Address for the receivers.

Encryption: Security Protocol of email sending, including TLS and SSL.

Host Name: It will be attached in the email.

Select "Test" to check if the Mail function is workable.

 **Note:** If your NVR has a port forwarding IP for Host Name, please input the complete address that contains the port.

3.9.3.5 Milesight Cloud

You can add the devices to M-sight Pro app via Milesight Cloud, which can bind the devices with the cloud accounts. You can log into the cloud account directly on the APP, no need to add devices repeatedly.

Click "Enable" and "Apply" to enable Milesight Cloud.

After enabling, you can add the NVR on the APP M-Sight Pro for live view via scanning the QR code on Milesight Cloud page directly, or inputting the register code manually.

Network

Basic | UPnP | DDNS | Email | **Milesight Cloud** | PPPoE | SNMP | HTTPS | More

Milesight Cloud:


Milesight Cloud Status:

Cloud Account:

Unbind Device:

Cloud Server Address: m-sight.milesight.com

Register Code:

Register QR Code: 

Note: Enable Milesight Cloud function, the P2P function will be enabled automatically. Scan the QR code to bind this device to Cloud Account.

If you enable Milesight Cloud function, the P2P function will be enabled automatically.

Note:

1. Please make sure that NVR is available for internet before enabling.
2. Please make sure your NVR version is V7X.9.0.12 or above, and the APP version is V3.1.0.5 or above.

3.9.3.6 PPPoE

PPPoE combines PPP protocol with Ethernet, by which Ethernet hosts can connect to a remote access concentrator via a simple bridging device.

Network

Basic | UPnP | DDNS | Email | P2P | **PPPoE** | SNMP | HTTPS | More

PPPoE:


Dynamic IP:

User Name:

Password:

Confirm Password:

Note: If both UPnP and PPPoE are enabled, only PPPoE will take effect.

 **Note:** If both UPnP and PPPoE are enabled, only PPPoE will take effect.

3.9.3.7 SNMP

SNMP is an abbreviation of Simple Network Management Protocol, which is convenient for NVR to be monitored and managed in the whole network environment. The SNMP is widely used in many network devices, software and systems.

Before setting the SNMP, please download the SNMP software and manage to receive the NVR information via SNMP port. By setting the Trap Address, the NVR can send the alarm event and exception messages to the surveillance center.

Network

Basic | UPnP | DDNS | Email | P2P | PPPoE | **SNMP** | HTTPS | More

SNMP V1 / V2c

SNMP V1:

SNMP V2c:

Read Community:

Write Community:

SNMP V3

SNMP V3:

Read Security Name:

Level of Security:

Write Security Name:

Level of Security:

SNMP Port

SNMP Port:

SNMP v1/2c/3: The version of SNMP. Please select the version of your SNMP software.

SNMP v1: No security protection

SNMP v2c: Require password for access

SNMP v3: Support encryption on the premise that the HTTPS protocol must be enabled.

Read Community: Input the name of Read Community

Write Community: Input the name of Write Community

Read Security Name: Input the name of Read Security Community

Level of Security: There are three levels available: (auth, priv), (auth, no priv) and (no auth, no priv)

Write Security Name: Input the name of Write Security Community

Level of Security: There are three levels available: (auth, priv), (auth, no priv) and (no auth, no priv)

SNMP Port: The default of the SNMP port is 161.

3.9.3.8 HTTPS

Set in the interface to make sure getting access to NVR successfully via HTTPS, which is able to guarantee communication data security. The reliable and stable technology can secure the user information security and device safety.

Network

Basic UPNP DDNS Email P2P PPPoE SNMP **HTTPS** More

HTTPS

Installation Type

Create a Private Certificate

Installed Certificate

Attributes

There are three certificate installation types:

Create a Private Certificate

Click “Create” to create the following dialog box. And then enter Country, Common Name, Period of Validity and other information. And then click “OK” to generate a private certificate.

Create a Private Certificate

Country	<input type="text"/>	*
Common Name	<input type="text"/>	*
Period of Validity	<input type="text" value="(1~999)"/>	days*
Password	<input type="password"/>	
Province	<input type="text"/>	
Region	<input type="text"/>	
Organization	<input type="text"/>	
Company	<input type="text"/>	
Email	<input type="text"/>	

Direct Installation

Click "Browse" to select a signed certificate locally and click "Install" to install it.

HTTPS	<input type="text" value="Enable"/>	▼
Installation Type	<input type="text" value="Direct Installation"/>	▼
Install Signed Certificate	<input type="text"/>	<input type="button" value="Browse"/>
	<input type="button" value="Install"/>	
Installed Certificate	<input type="text" value="C=CN, H/IP=cn"/>	<input type="button" value="Clear"/>
Attributes	Awarded to: C=CN, H/IP=cn Issuer: C=CN, H/IP=cn Period of Validity: Jun 6 16:21:28 2018 ~ Jan 14 16:21:28 2019	

Create a Certificate Request

Firstly, click “Create” button. And then enter Country, Common Name and other information to create the certificate request;


Download the certificate request and submit it to the trusted certificate authority for signature;

After receiving the signed valid certificate, import the certificate to the device.

HTTPS	<input type="text" value="Enable"/>
Installation Type	<input type="text" value="Create a Certificate Request"/>
Create a Certificate Request	<input type="button" value="Create"/> Request Content
Download the Certificate Request	<input type="button" value="Download"/>
Delete the Certificate Request	<input type="button" value="Delete"/>
Installed Certificate	<input type="text" value="C=CN, H/IP=cn"/> <input type="button" value="Clear"/>
Attributes	<div style="border: 1px solid #ccc; padding: 5px;"> Awarded to: C=CN, H/IP=cn Issuer: C=CN, H/IP=cn Period of Validity: Jun 6 16:21:28 2018 ~ Jan 14 16:21:28 2019 </div>

After creating and installing the certificate successfully, you can check the certificate information and clear the information on the following interface. And you can access the NVR by inputting <https://ip:port> via the web browser.

Installed Certificate	<input type="text" value="C=CN, H/IP=cn"/> <input type="button" value="Clear"/>
Attributes	<div style="border: 1px solid #ccc; padding: 5px;"> Awarded to: C=CN, H/IP=cn Issuer: C=CN, H/IP=cn Period of Validity: Jun 6 16:21:28 2018 ~ Jan 14 16:21:28 2019 </div>

 **Note:** The default HTTPS port is 443, you can modify it on the “More” interface.

3.9.3.9 Multicast

Enable multicast to reduce the load of the NVR, and the video can still be previewed normally when the NVR is multi-connected. Users just need to enable multicast and enter the IP address.

Network

Basic | UPnP | DDNS | Email | Milesight Cloud | PPPoE | SNMP | HTTPS | **Multicast** | More

Multicast:

IP Address:

Note: Valid IP address range: 224.0.0.0~239.255.255.255.

 **Note:** Valid IP address range: 224.0.0.0~239.255.255.255.

3.9.3.10 More

Network

Basic | UPnP | DDNS | Email | Milesight Cloud | PPPoE | SNMP | HTTPS | **More**

Channel Access:

Enable SSH:

SSH Port:

HTTP Port:

HTTPS Port:

RTSP Port:

POS Port:

Push Message:

Push Stream Type:

Push Message Settings:

SSH

Enable or disable SSH access. Secure Shell (SSH) has many functions; it can replace Telnet, and also provides a secure channel for FTP, POP, even for PPP.

SSH Port

The default SSH port is 22. Only for R&D debugging.

HTTP Port

The default HTTP port is 80. Please modify HTTP ports according to actual application.

Note:

1. The default HTTP port for IE browser is 80.
2. HTTP port is used for remote network access for 4k/H.265 NVR Series.

HTTPS Port

The default HTTPS port is 443. Please modify HTTPS ports according to actual application.

Note:

1. The default HTTPS port for IE browser is 443.
2. HTTPS port is used for remote network access for 4k/H.265 NVR Series.

RTSP Port

Real Time Streaming Protocol (RTSP) is an application layer protocol in TCP/IP protocol system.

The default RTSP port is 554. Please modify RTSP port according to actual application.

Note:

1. RTSP port is used for remote network live view.
2. RTSP port valid range is 554 or 1024~65535.
3. The RTSP format of Milesight NVR is "rtsp://IP:RTSP port/ch_xxx".
 - IP: The IP address of NVR;
 - RTSP port: The default RTSP port is 554;
 - ch_xxx: The first number of xxx represents stream type, 1 for main stream and 4 for sub stream. The last two represents channel number, which start from '00' ('00' means channel 1). Take 'rtsp://192.168.8.179:554/ch_402' as an example:
 - The IP address of NVR is 192.168.8.179.
 - The RTSP port is 554.
 - The stream type is sub stream and the channel number is 3.

POS Port


It is the communication port between NVR and the POS machine. The default POS port is 38800.

Push Message

With this option enabled, you can receive the alarm message on the mobile application.


Push Stream Type

Select which video stream will be pushed to APP M-Sight Pro. Auto, Primary Stream and Secondary Stream are available.

 **Note:** Only NVR model ends with letter T support this option.

Push Message Settings

(1) Camera Event

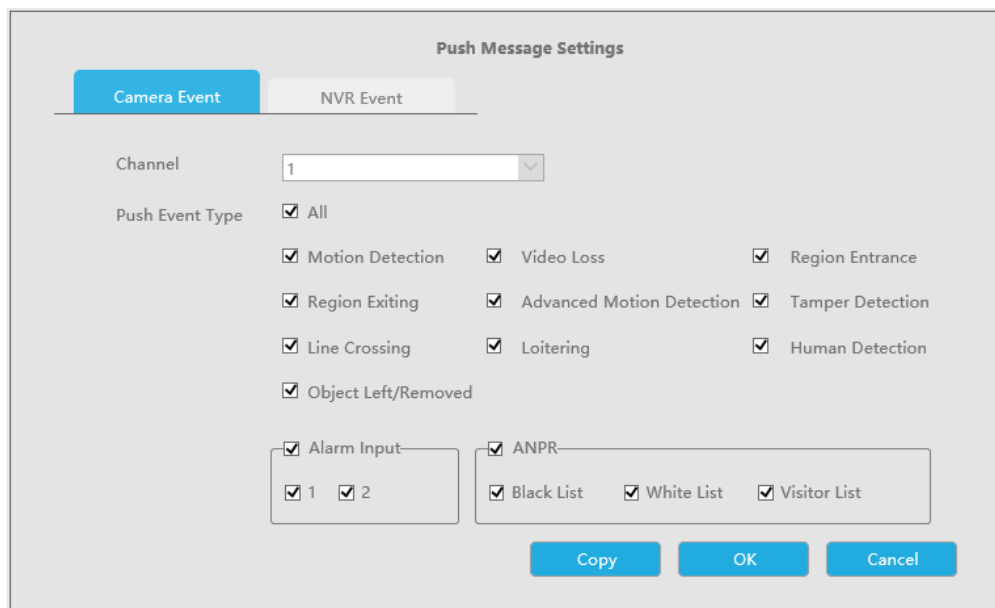

Push Message Settings

Camera Event | NVR Event

Channel: 1

Push Event Type: All

Motion Detection Video Loss Region Entrance

Region Exiting Advanced Motion Detection Tamper Detection

Line Crossing Loitering Human Detection

Object Left/Removed


Alarm Input: 1 2

ANPR: Black List White List Visitor List

Copy OK Cancel

Select Push Event Type which will be pushed to APP M-Sight Pro. There are different Push Event Types for every channel to choose, which means every camera added in this NVR can choose what Event Type it wants to push, like Motion Detection, Video Loss, Region Entrance, Region Exiting, Advanced Motion Detection, Tamper Detection, Line Crossing, Loitering Human Detection, Object Left/Removed, Alarm Input and ANPR(Only for MS-NXXXX-XXT/H).

(2) NVR Event

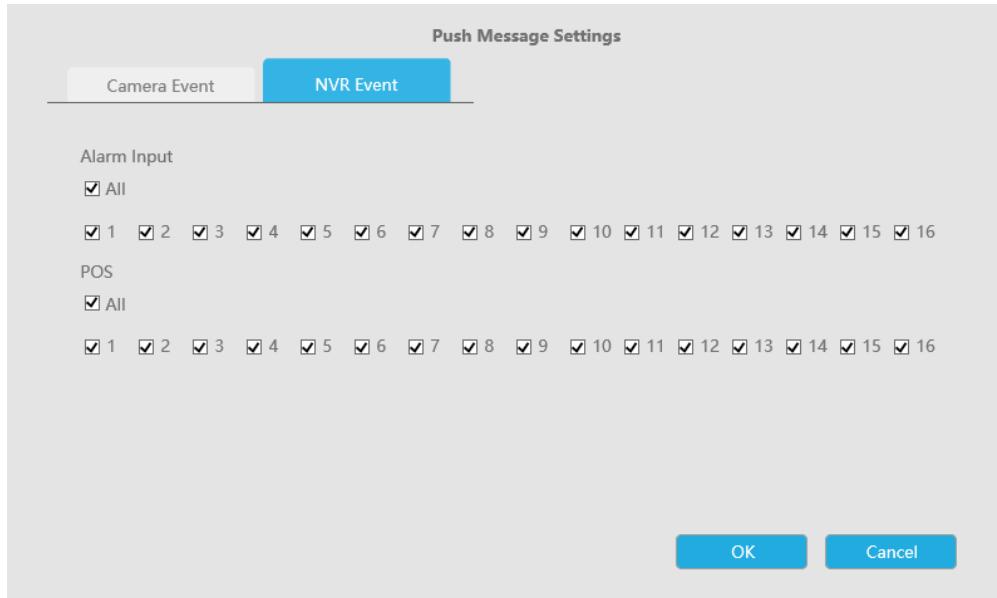


Select channels which you want to push the Alarm Input Event or the POS Event of NVR.

Note: There would not have NVR Event interface if your NVR doesn't have alarm input interface.


3.9.4 Audio File Manager


Here you can upload up to 10 audio files.

Note: Ensure that the NVR hardware has an Audio Output interface.

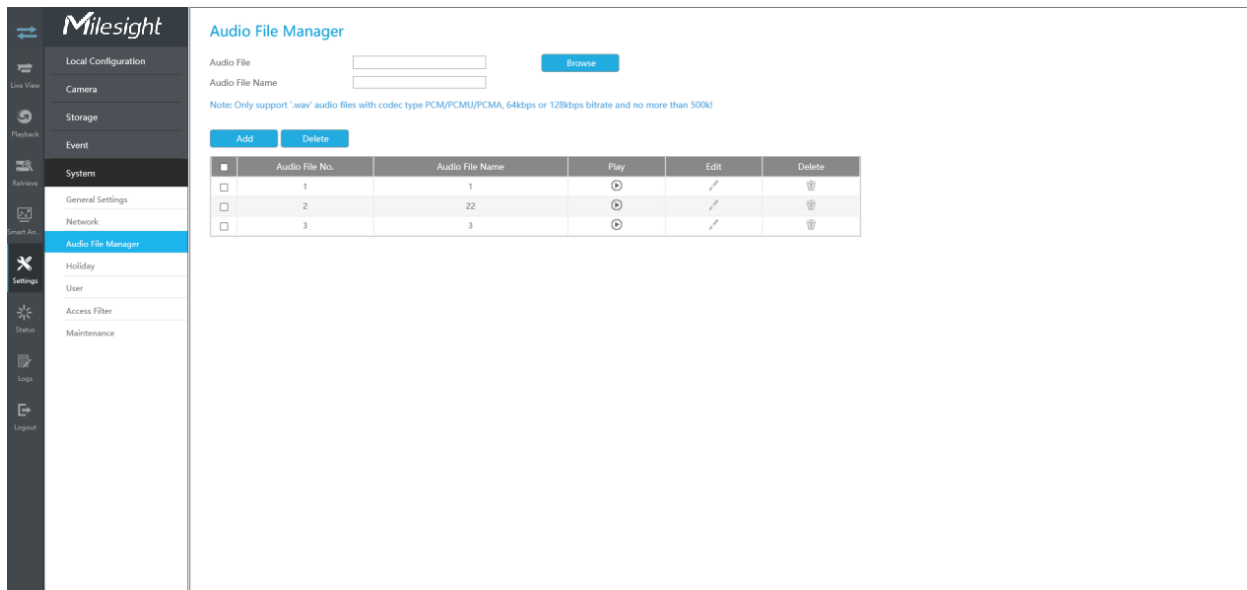

Add a new audio file

Click , then select an audio file from the external device and enter the audio file name, and then click "OK" to add a new audio file.

 **Note:** Ensure that the audio file format is “.wav”, the codec type is PCM/PCMU/PCMA, 64kbps or 128kbps bitrate and doesn't exceed 500K.

Audio File	<input type="text"/>	<input type="button" value="Browse"/>
Audio File Name	<input type="text"/>	

Note: Only support '.wav' audio files with codec type PCM/PCMU/PCMA, 64kbps or 128kbps bitrate and no more than 500k!

Play audio file

Select an audio file and click  to play the audio file.

Edit audio file

Select an audio file and click  to edit the audio file name.

Delete audio file

Select an audio file and click  to delete the audio file name.

In addition, you can also check multiple audio files and click "Delete" to delete them.


3.9.5 Holiday

It can configure the record or image capture schedule for holidays of the current year.

Holiday

The periods of holiday cannot be overlapped.

No.	Holiday Name	Status	Start Date	End Date	Edit
1	Holiday	Disable	1-1	1-1	
2	Holiday	Disable	1-1	1-1	
3	Holiday	Disable	1-1	1-1	
4	Holiday	Disable	1-1	1-1	
5	Holiday	Disable	1-1	1-1	
6	Holiday	Disable	1-1	1-1	
7	Holiday	Disable	1-1	1-1	
8	Holiday	Disable	1-1	1-1	
9	Holiday	Disable	1-1	1-1	
10	Holiday	Disable	1-1	1-1	
11	Holiday	Disable	1-1	1-1	
12	Holiday	Disable	1-1	1-1	
13	Holiday	Disable	1-1	1-1	
14	Holiday	Disable	1-1	1-1	
15	Holiday	Disable	1-1	1-1	

Click  to edit holiday information, including Holiday Name, Holiday Enable, Style, Start Date and End Date. Then click "OK" to save the configuration.

Edit Holiday

Holiday Name

Enable Holiday

Type

Start Date

End Date

3.9.6 User

The screenshot displays the Milesight NVR web interface. On the left is a sidebar with navigation options: Local Configuration, Camera, Storage, Event, System, and Settings. The 'Settings' menu is expanded, showing sub-options like General Settings, Network, Audio File Manager, Holiday, User, Access Filter, and Maintenance. The 'User' sub-option is selected, leading to the 'User' management page. This page has two tabs: 'User' (active) and 'Security Question'. Below the tabs is a table with the following data:

No.	User Name	User Level	Edit	Delete
1	admin	Admin		-
2	qq	Operator		
3	vila-test	Operator		
4	alison	Viewer		

Below the table is a blue 'Add' button.

Note:

1. If the NVR firmware version is below xx.7.0.6, the default user name is “admin” and the default password is “123456”.
2. If the NVR firmware version is between xx.7.0.6 and xx.9.0.3, the default user name is “admin” and the default password is “ms1234”.
3. If the NVR firmware version is xx.9.0.3 or above, please set the password before login.

Add a new user

Click "Add", input user information, then click "Edit" to configure the user permission, and click "OK" to add a new user.


Add User

Admin Password	<input type="password" value="....."/>
User Name	<input type="text" value="alison"/>
Password	<input type="password" value="....."/>
Confirm Password	<input type="password" value="....."/>
User Level	<input type="text" value="Operator"/>
User Permissions	<input type="button" value="Edit"/>

 **Note:**

1. The user name can only contain letters and number. There are two user levels with different authority: Operator and Viewer.

Edit user limits

Select a user, when the background color changes into dark gray, click  to edit user permissions. User Permissions include Operation Permissions and Channel Permissions.

- “Local” means that the privilege to the monitor connected with NVR.
- “Remote” means that the privilege to web settings.

Edit User Permissions

Operation Permissions
Channel Permissions

Local

All

Live View Operation
 Record
 Snapshot
 Audio
 Two-way Audio
 PTZ Control
 PTZ Settings
 Image Configuration
 Camera Alarm Output
 Play Mode
 Target Mode Operation

Playback Operation
 Snapshot
 Audio
 Tag
 Lock
 File Export

Retrieve

Smart Analysis

Camera

Remote

All

Live View Operation
 Record
 Snapshot
 Audio
 Two-way Audio
 PTZ Control
 PTZ Settings
 Image Configuration
 Camera Alarm Output
 Play Mode
 Target Mode Operation

Playback Operation
 Snapshot
 Audio
 Tag
 Lock
 File Export

Retrieve

Smart Analysis

Camera

OK
Cancel

Edit User Permissions

Operation Permissions
Channel Permissions

Local

Live View Operation
 1 2 3 4
 5 6 7 8
 9 10 11 12
 13 14 15 16

Playback Operation
 1 2 3 4
 5 6 7 8
 9 10 11 12
 13 14 15 16


Remote

Live View Operation
 1 2 3 4
 5 6 7 8
 9 10 11 12
 13 14 15 16


Playback Operation
 1 2 3 4
 5 6 7 8
 9 10 11 12
 13 14 15 16

OK
Cancel

Edit user password

Select a user, when the background color changes into dark gray, click  to modify password after enabling Change Password. You can also click "Edit" to set Unlock Pattern after enabling Unlock Pattern.

Sync new password to current connected PoE channels is available for PoE NVR Series.

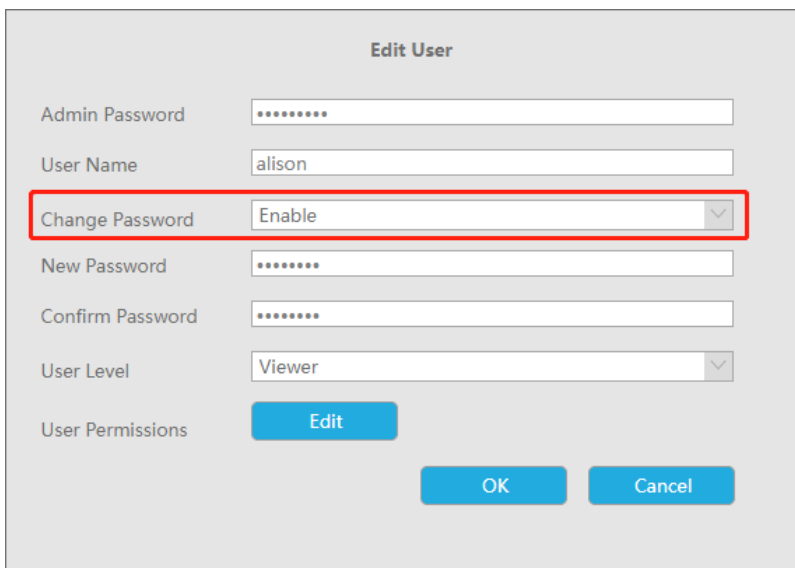

The screenshot shows the 'Edit User' form with the following fields and controls:

- Admin Password:
- User Name:
- Change Password: (highlighted with a red box)
- New Password:
- Confirm Password:
- User Level:
- User Permissions:
- OK:
- Cancel:

Delete user

Select a user and click  to delete a user.

Modify Security Question

Input Admin Password, select security question and answer. Click "Apply" to save.

User

User
Security Question

Password Authentication

Admin Password:

Security Question Setting (Questions are already set!)

Security Question1: ▼

Security Answer1:

Security Question2: ▼

Security Answer2:

Security Question3: ▼

Security Answer3:

OK

 **Note:**

1. This option is available for the NVR firmware version xx.9.0.3 or above.
2. Security question is used for resetting admin password if you forget current one.

3.9.7 Access Filter

Enable Access Filter to restrict or open the access to device address added via IP or MAC.



Step 1. Enable Access Filter.

Access Filter

Step 2. Select Filter Type.

There are two options: Deny and Allow.

Deny: Only restrict the access to the added device address.

Allow: Only open the access to the added device address.

Filter Type

Step 3. Add Address.

Click "Add" to add device address. You can add the address via IP or MAC.

Method 1: Add the address via IP. You can choose the IP address rule according to your needs. There are two rules: Single and Range.

Add Address

Address Type

IP Address Rule

IP Address

Add Address

Address Type

IP Address Rule

IP Address -

Method 2: Add the address via MAC.

Add Address

Address Type

MAC Address

Step 4. Then click "Apply" to make Access Filter effective.

You can click  in the Access Filter interface to edit the corresponding address again.

Edit Address

Address Type

IP Address Rule


IP Address

Note:

- If Access Filter is enabled and Filter type is Allow, but no address is added to the table, then no address is allowed to Access the NVR.
- If Access Filter is enabled and Filter type is Deny, but no address is added to the table, then all addresses are allowed to Access the NVR.

3.9.8 Maintenance

Local Upgrade

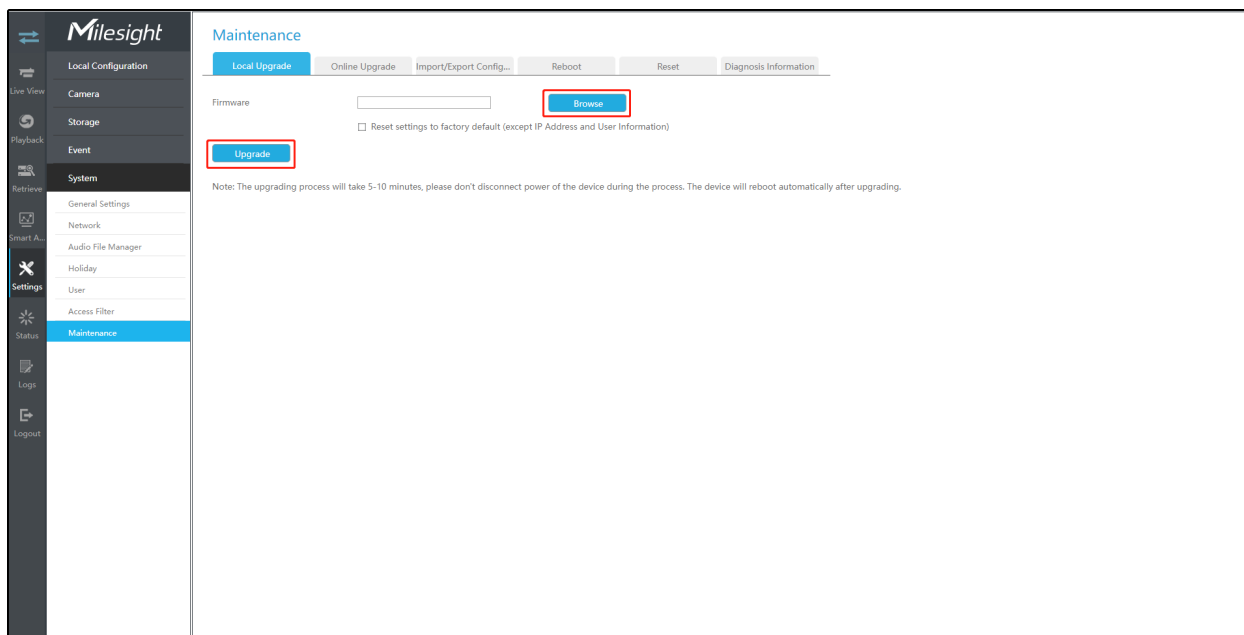


Step1. Click "Browse" and select the corresponding firmware you downloaded in your USB;

Step2. Check if you need to reset settings to factory default (except IP Address and User Information) after upgrade;

Step 3. Click "Upgrade" to confirm the upgrade.

Note: The system will auto reboot after confirming upgrade.


Online Upgrade

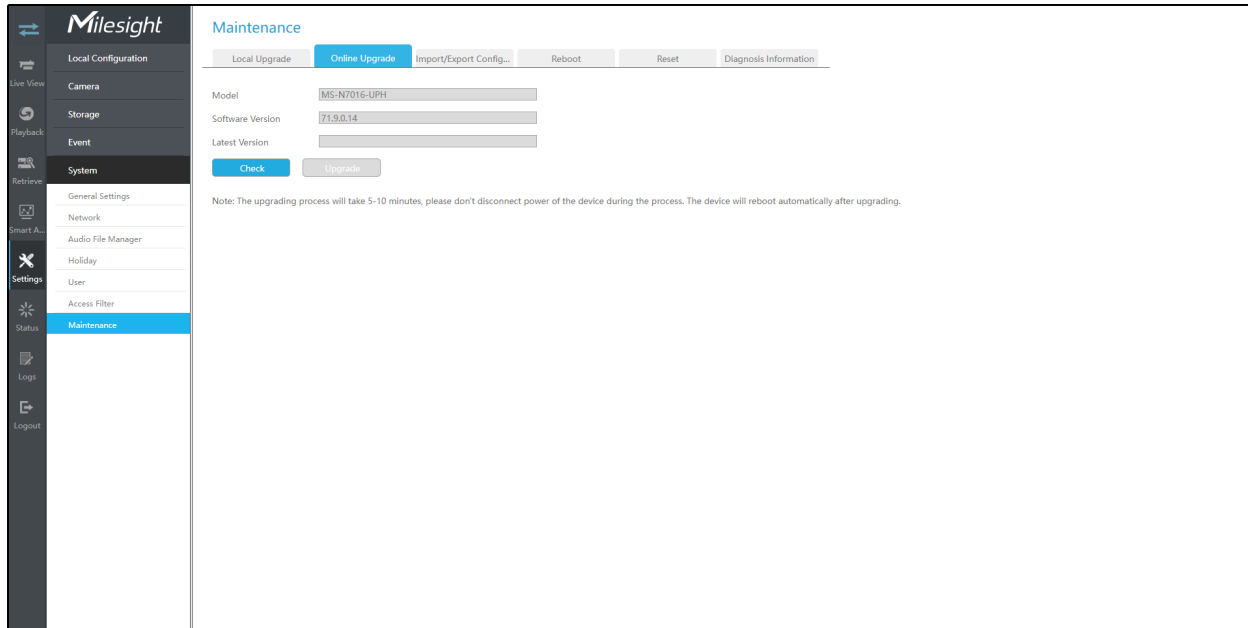

Step1. Click "Check" to confirm whether there is a new version;

If there is a new version, the Latest Version column will display corresponding information.


Step2. Click "Upgrade" to confirm the upgrade.

 **Note:** The system will auto reboot after confirming upgrade.


Import/Export Configuration

Import Configuration File: Select a .cfg file and then click "Restore" to import configuration to your NVR.

Export Configuration File: Select a folder and then click "Backup" to export configuration to USB device.

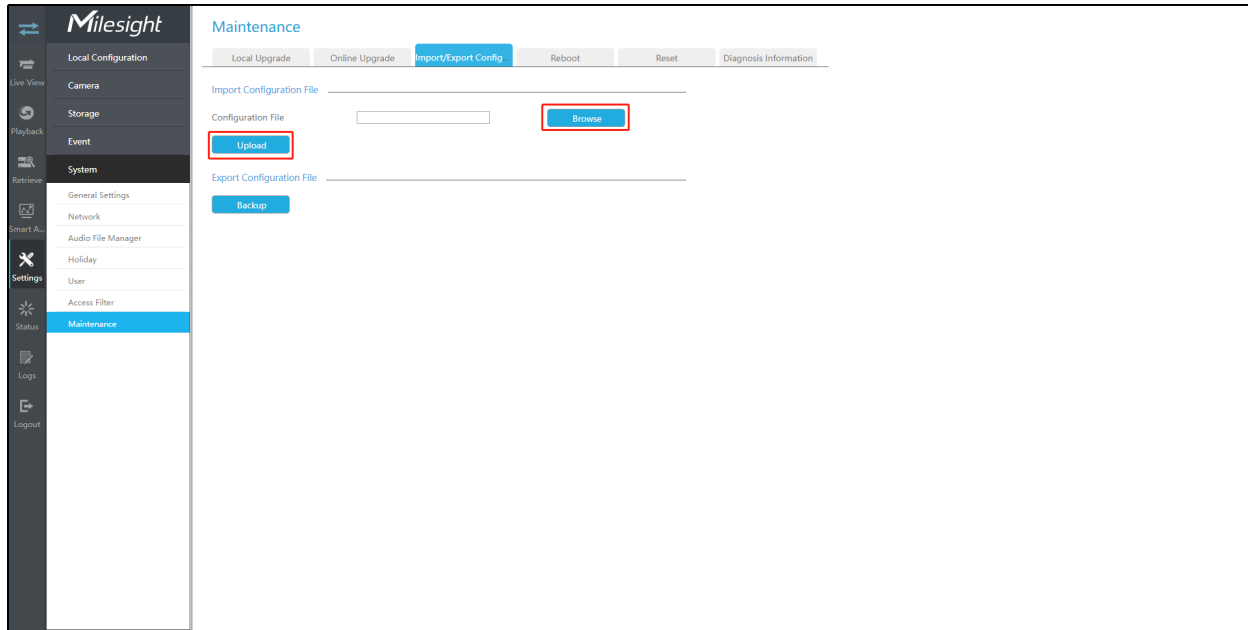

Auto Reboot

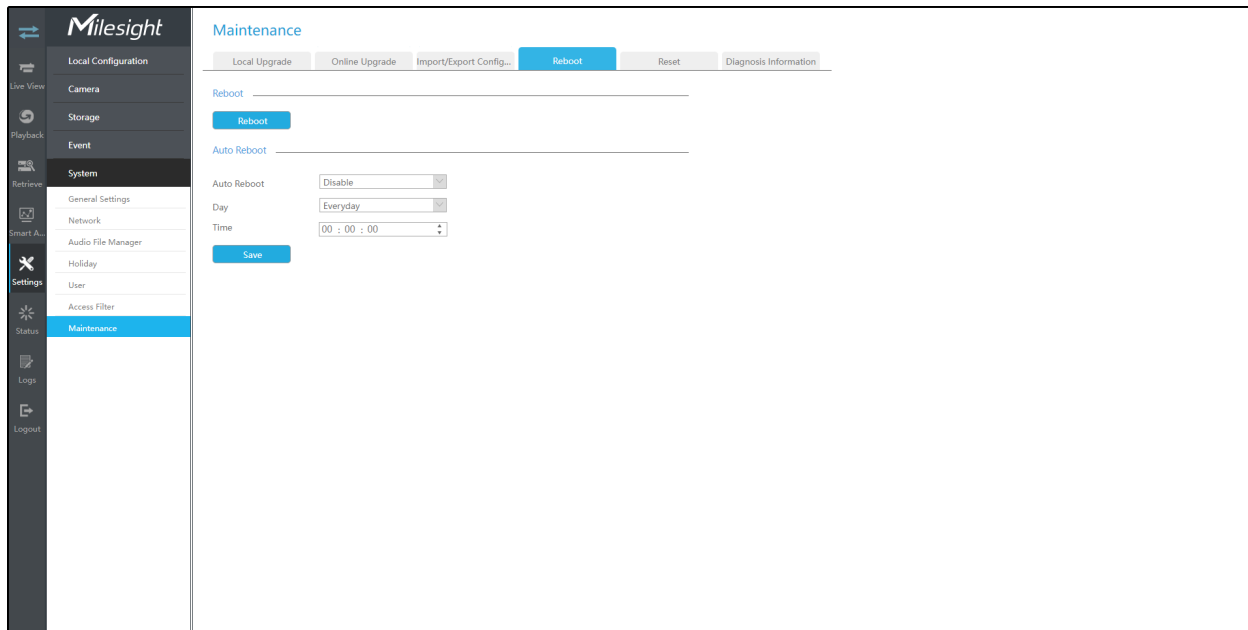


You can set day and time for reboot, and **the NVR will reboot automatically at the time you set.**

Day: Everyday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday.

Time: Adjustable range from 00:00:00 to 23:59:59.


Reset

All parameters can be reset to default settings by clicking "Reset".

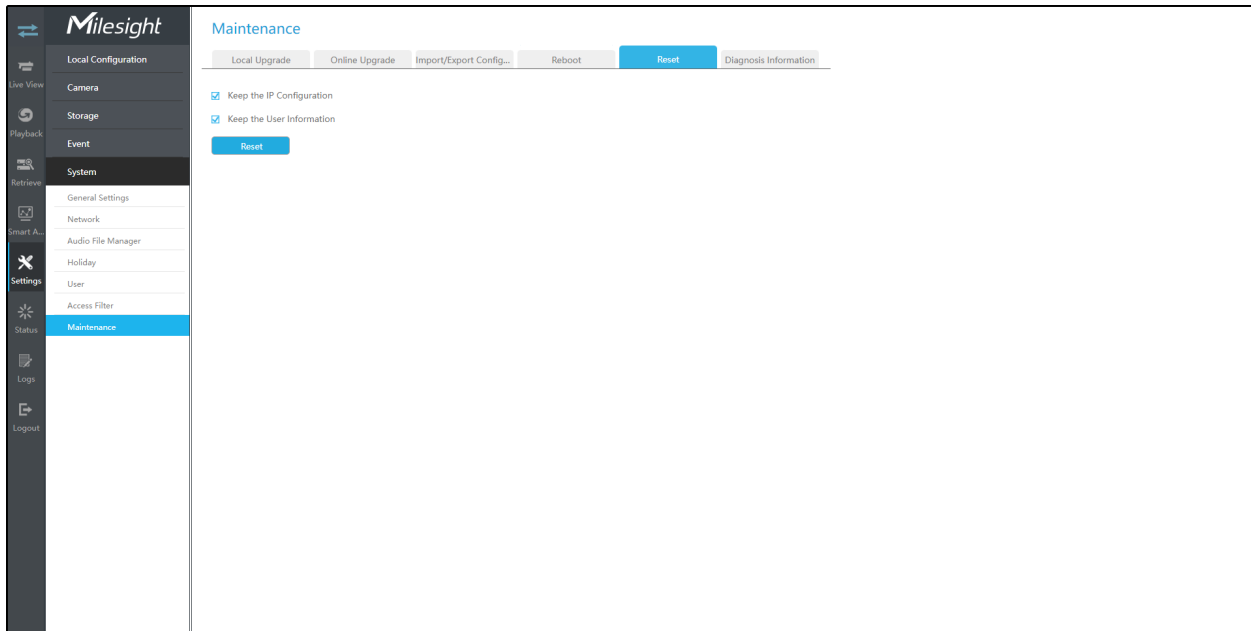

Diagnosis Information

Click "Browse" to select the path to save the diagnosis file on the USB device. And then click "Backup" to export the diagnosis file.

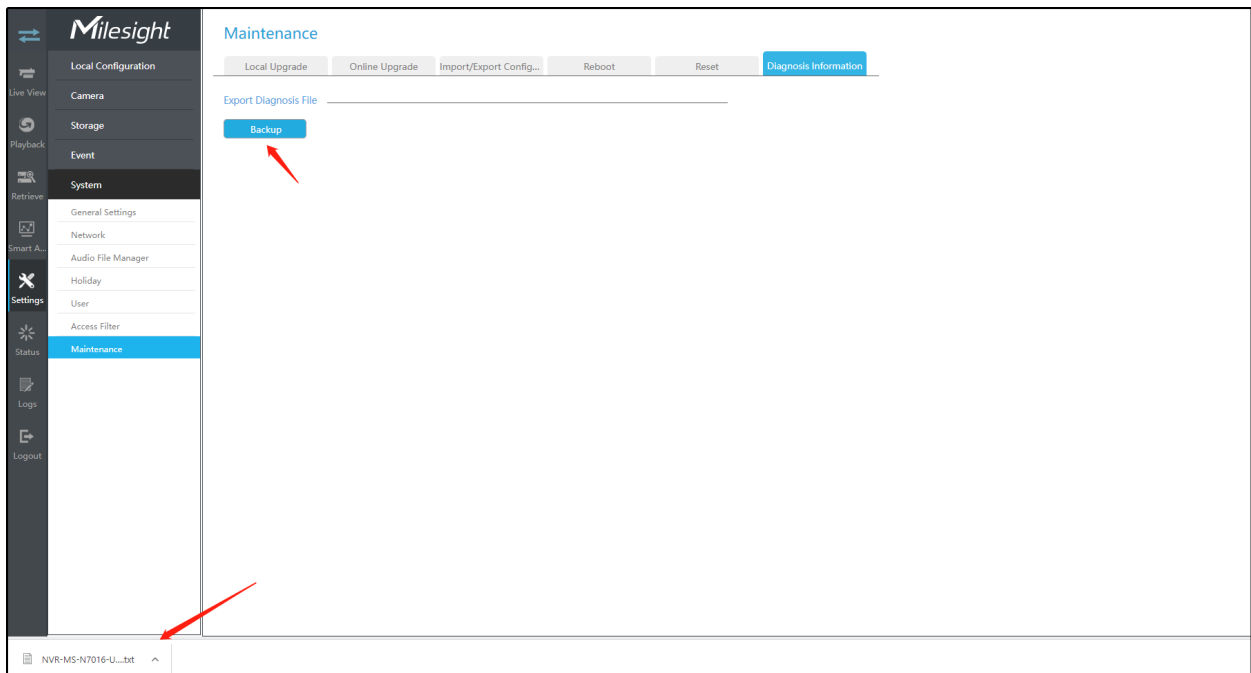

3.9.9 Hot Spare

Configured as the architecture of N pcs Master NVRs and 1 hot spare Slave NVR, N+1 Hot Spare guarantees the data integrity and reliability of video surveillance system. If any one of the Master NVRs fails, the Slave NVR can take over the channel information to ensure video recording. Meanwhile, when the failed NVR recovered, the Slave NVR will send the recorded data back.

Master Mode:

Step 1: Select Master Mode as Hot Spare Mode.

Step 2: Input Slave IP Address, Slave Admin Password and Apply.

Hot Spare

Hot Spare Mode	<input type="text" value="Master Mode"/>
Slave IP Address	<input type="text"/>
Slave Admin Password	<input type="text"/>
Slave Status	<input type="text"/>

Note: After enabling the hot spare function, you need to add the Master to the Slave NVR. Otherwise, it will not work properly.

Slave Mode:

Step 1: Select Slave Mode as Hot Spare Mode and click Apply. NVR will change to Slave mode successfully after rebooting.

Step 2: Add Master which is up to 32.

Hot Spare

Hot Spare Mode Slave Mode

Master List

■	No.	IP Address	MAC Address	Model

Master Status


No.	IP Address	MAC Address	Model	Connection Status	Working Status	Delete

For example, there are three NVRs in LAN, 192.168.5.200, 192.168.5.201 and 192.168.5.202.

If you want to set 192.168.5.200 and 192.168.5.201 as Master NVR, and set 192.168.5.202 as Slave NVR. You can operate as following steps.

- Set 192.168.5.200 and 192.168.5.201 to Master Mode. And then input the IP and account information of 192.168.5.202 as Slave.
- Set 192.168.5.202 to Slave Mode. And then add 192.168.5.200 and 192.168.5.201 to its Master List.

After Master and Slave match successfully, Hot Spare function begins to work.

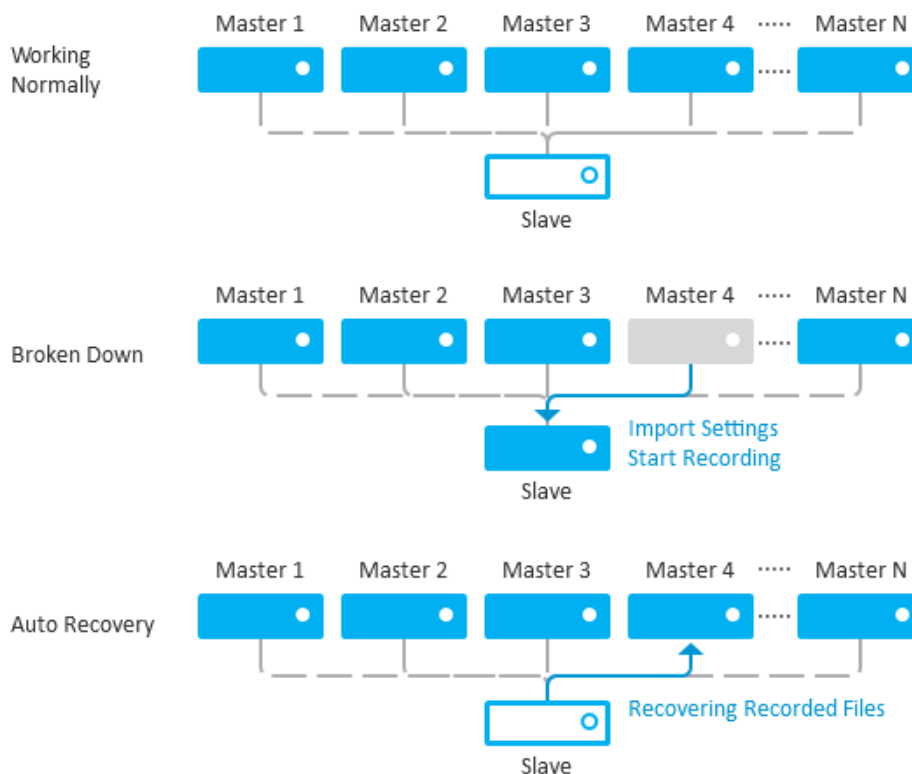

Note:

1. Only MS-N7016-UH, MS-N7032-UH, MS-N8032-UH and MS-N8064-UH support N+1 Hot Spare function.
2. It is recommended to set Master NVR and Slave NVR up with the same NVR model.

3.10 Status

You can have a quick view of the information of the device, network, camera, disk and event. This part is only for your rapid reference. If you want to make any configuration, please go to corresponding parts accordingly.

3.10.1 Device Information

Device Information

Device Information include Model, MAC Address, SN Address, Hardware Version, Software Version, and Uptime.

Device Information

Device Information	About
Model	MS-N7016-UPH
MAC Address	1C:C3:16:0A:E8:D2
SN Address	7420150003
Hardware Version	V2.0
Software Version	71.9.0.14-a4
Uptime	15:57:25 up 6:47

About

Device Information

Device Information	About
--------------------	-------

Open Source Software Licenses

[View Licenses](#)

Click "View Licenses" to jump to the web link that shows the Open Source Software Licenses.



3.10.2 Network Status

Network Status includes three main parts: Network Status and Bandwidth Status.

Network Status

The screenshot shows the 'Network Status' page in the MileSight interface. It features a sidebar with navigation options like 'Status', 'Live View', 'Playback', and 'Settings'. The main content area is titled 'Network Status' and includes a 'Network Test' tab. Below the tabs, there is a 'Receive Bandwidth' table, followed by configuration details for 'LAN1' and 'LAN2'.

Receive Bandwidth			
Free	146.5Mbps	Used	13.5Mbps

LAN1			
Connection	Link is up - 100Mbps Duplex		
IPv4 DHCP	Disable	IPv6 Mode	Manual
IP Address	192.168.69.168	IPv6 Address	
IPv4 Netmask	255.255.255.0	IPv6 Prefix Length	
IPv4 Gateway	192.168.69.1	IPv6 Gateway	
Preferred DNS Server	210.85.152.99	Alternate DNS Server	144.144.144.144
MAC	1C:C3:16:0A:E8:D2	MTU	1500
Receive Rate	11.92Mbps	Send Rate	226.13Kbps

LAN2			
Connection	Link is up - 100Mbps Duplex		
IPv4 DHCP	Disable	IPv6 Mode	Manual
IP Address	192.168.10.1	IPv6 Address	
IPv4 Netmask	255.255.255.0	IPv6 Prefix Length	
IPv4 Gateway	192.168.10.1	IPv6 Gateway	
Preferred DNS Server	8.8.8.8	Alternate DNS Server	
MAC	1C:C3:16:0A:E8:D3	MTU	1500
Receive Rate	0.00Kbps	Send Rate	0.00Kbps

Network Test

Users can quickly know the network status between the NVR and the destination address such as the camera or computer.

The screenshot shows the 'Network Test' page in the MileSight interface. The 'Destination Address' is set to '192.168.69.168'. Below this, a 'Test Result' section displays the output of a ping command, showing 15 successful pings with response times ranging from approximately 0.078 ms to 0.147 ms. At the bottom, there are 'Start' and 'Stop' buttons.

```

PING 192.168.69.168 (192.168.69.168): 56 data bytes
64 bytes from 192.168.69.168: seq=0 ttl=64 time=0.147 ms
64 bytes from 192.168.69.168: seq=1 ttl=64 time=0.079 ms
64 bytes from 192.168.69.168: seq=2 ttl=64 time=0.091 ms
64 bytes from 192.168.69.168: seq=3 ttl=64 time=0.072 ms
64 bytes from 192.168.69.168: seq=4 ttl=64 time=0.084 ms
64 bytes from 192.168.69.168: seq=5 ttl=64 time=0.090 ms
64 bytes from 192.168.69.168: seq=6 ttl=64 time=0.090 ms
64 bytes from 192.168.69.168: seq=7 ttl=64 time=0.077 ms
64 bytes from 192.168.69.168: seq=8 ttl=64 time=0.085 ms
64 bytes from 192.168.69.168: seq=9 ttl=64 time=0.078 ms
64 bytes from 192.168.69.168: seq=10 ttl=64 time=0.086 ms
64 bytes from 192.168.69.168: seq=11 ttl=64 time=0.084 ms
64 bytes from 192.168.69.168: seq=12 ttl=64 time=0.085 ms
64 bytes from 192.168.69.168: seq=13 ttl=64 time=0.084 ms
64 bytes from 192.168.69.168: seq=14 ttl=64 time=0.084 ms
64 bytes from 192.168.69.168: seq=15 ttl=64 time=0.086 ms
    
```

3.10.3 Camera Status

Channel Status includes Channel, Name, IP Address, Record, Frame Rate, Bit Rate, Frame Size and Status.

Camera Status

Channel Status PoE Port Status

Channel	Name	IP Address	Record	Frame Rate	Bit Rate	Frame Size	Status
1	CAM1	192.168.64.81	On	24fps	4159Kbps	1920x1080	✔
2	CAM2	192.168.69.161	Off	24fps	2831Kbps	2592x1944	✔
3	CAM3	192.168.69.135	Off	0fps	0Kbps	0x0	⚠
4	CAM4	192.168.69.166	Off	0fps	0Kbps	0x0	⚠
5	CAM5	192.168.69.182	Off	0fps	0Kbps	0x0	⚠
6	CAM6	192.168.69.162	On	25fps	4770Kbps	1920x1080	✔
7	CAM7	192.168.69.204	On	25fps	4247Kbps	1920x1080	✔
8	-	-	-	-	-	-	-
9	-	-	-	-	-	-	-
10	-	-	-	-	-	-	-
11	-	-	-	-	-	-	-
12	-	-	-	-	-	-	-
13	-	-	-	-	-	-	-
14	-	-	-	-	-	-	-
15	-	-	-	-	-	-	-
16	-	-	-	-	-	-	-

The PoE Port Status is only for PoE NVR, it will show you the current power and connection status of PoE ports.

Camera Status

Channel Status **PoE Port Status**

PoE Port	IP Address	Current Power Consumption	Status
12	192.168.69.161	2.54W	Disconnected
2	-	-	-
3	-	-	-
4	-	-	-
5	-	-	-
6	-	-	-
7	-	-	-
8	-	-	-
9	-	-	-
10	-	-	-
11	-	-	-
13	-	-	-
14	-	-	-
15	-	-	-
16	-	-	-
1	-	-	-

Total Power Consumption

Remaining Power Consumption

Note:

- The rated power consumption of all PoE ports is 200.00W.
- When the total power consumption exceeds the rated value, the system will close PoE ports in the order of channel numbers from large to small until the total power is less than the rated power.

3.10.4 Disk Status

Disk Status

Disk Status includes Port, Vendor, Status, Total(GB), Free(GB), HDD Type and Group. The user can see the Total Capacity (GB) and Available Capacity (GB) as well.

Disk Status



Port	Vendor	Status	Total	Free	Type	Property
4	WDC WD10EJRX-89N74Y0	Warning	931.51GB	0	Local	R/W

Total Capacity

Available Capacity

3.10.5 Event Status

Camera Event

The user can check Camera Event here, including Video Loss, Motion and I/O.  will turn into  when the corresponding alarm is triggered.

Event Status

Camera Event Alarm Input/Output VCA

Channel	Name	IP Address	Video Loss	Motion	Audio Alarm
1	CAM1	192.168.64.81			
2	CAM2	192.168.69.161			
3	CAM3	192.168.69.135			
4	CAM4	192.168.69.166			
5	CAM5	192.168.69.182			
6	CAM6	192.168.69.162			
7	CAM7	192.168.69.204			
8	CAM8	192.168.69.161			
9	-	-	-	-	-
10	-	-	-	-	-
11	-	-	-	-	-
12	-	-	-	-	-
13	-	-	-	-	-
14	-	-	-	-	-
15	-	-	-	-	-
16	-	-	-	-	-

Alarm Input/Output

The user can check Alarm Input and Output list here if NVR has corresponded interface.

will turn into when the corresponding alarm is triggered. For NVR alarm input or output, the relevant alarm input or output will be firstly listed, such as, 1, 2.etc, as for camera alarm input or output, it will display as CHx_x (such as CH1_1) according to the camera channel and corresponding alarm number.

3.10.6 Group Status

Check Group Status. The status of the all created Groups can be sorted by Group or Channel.

The screenshot shows the Miliesight web interface. The sidebar on the left contains navigation options: Live View, Playback, Retrieve, Smart A..., Settings, Status (selected), Logs, and Logout. The main content area is titled 'Group Status' and has two tabs: 'Sort by Group' (selected) and 'Sort by Channel'. Below the tabs is a table with the following data:

Group	Disk	Channel
1	3,4,26	1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

3.10.7 Online Users

Users who are remotely connecting to the NVR in real time can be listed in Online users interface. The list includes User Name, User Level, IP Address and User Login Time.


The screenshot shows the Miliesight web interface. The sidebar on the left contains navigation options: Live View, Playback, Retrieve, Smart A..., Settings, Status (selected), Logs, and Logout. The main content area is titled 'Online User' and has a 'Refresh' button. Below the button is a table with the following data:

No.	User Name	User Level	IP Address	User Login Time	Add to Access Filter
1	admin	Admin	192.168.89.22	2022-02-21 15:33:53	<input type="checkbox"/>
2	admin	Admin	192.168.69.19	2022-02-21 15:34:15	<input type="checkbox"/>

The IP address can be added to Access Filter interface from Online User interface directly.

Online User

Refresh

No.	User Name	User Level	IP Address	User Login Time	Add to Access Filter
1	admin	Admin	192.168.7.25	2021-06-24 02:23:09	



3.10.8 Packet Capture Tool


Input IP, Port and select a path, then click [Start] to start capture and click [End] to stop. The captured package will be saved in the selected path.

Packet Capture Tool

IP

Port

NIC

 **Note:** It is recommended to capture packets not more than 3 minutes on the local monitor side.

3.10.9 Logs

The user can check, search and export logs in Logs interface. By selecting the Start Time, End Time, Channel, Main Type and Sub Type, which can narrow down the scale of logs, you can search for logs that you need.

The screenshot shows the MileSight Logs interface. On the left, there is a 'Log Search' panel with various filters: Start Time (2022-03-14 00:00:00), End Time (2022-03-14 23:59:59), Channel (checkboxes for CAM1-CAM10), Main Type (All), and Sub Type (All). Below the filters are 'Search' and 'Export' buttons. The main area displays a table of logs with columns: No., Main Type, Time, Sub Type, Parameter, Channel, User, Remote Host IP, and Details. The table contains 30 rows of log entries. At the bottom right of the table, it says 'Total 10000 Item(s)' and '1/100'.

No.	Main Type	Time	Sub Type	Parameter	Channel	User	Remote Host IP	Details
1	Operation	2022-03-14 17:16:39	RemoteLogin	N/A	N/A	admin	192.168.17.2	
2	Event	2022-03-14 17:16:35	Start Motion Detection	N/A	1	N/A	N/A	
3	Event	2022-03-14 17:16:35	Stop Motion Detection	N/A	1	N/A	N/A	
4	Event	2022-03-14 17:16:34	Start Advanced Motion Detection	N/A	2	N/A	N/A	
5	Event	2022-03-14 17:16:34	Start Advanced Motion Detection	N/A	1	N/A	N/A	
6	Operation	2022-03-14 17:16:31	RemoteLogout	N/A	N/A	N/A	192.168.17.2	
7	Event	2022-03-14 17:16:30	Start Advanced Motion Detection	N/A	2	N/A	N/A	
8	Event	2022-03-14 17:16:30	Start Advanced Motion Detection	N/A	1	N/A	N/A	
9	Event	2022-03-14 17:16:27	Start Advanced Motion Detection	N/A	2	N/A	N/A	
10	Event	2022-03-14 17:16:25	Start Motion Detection	N/A	1	N/A	N/A	
11	Event	2022-03-14 17:16:25	Stop Motion Detection	N/A	1	N/A	N/A	
12	Event	2022-03-14 17:16:22	Start Advanced Motion Detection	N/A	2	N/A	N/A	
13	Operation	2022-03-14 17:16:22	RemoteLogin	N/A	N/A	admin	192.168.69.12	
14	Event	2022-03-14 17:16:21	Start Advanced Motion Detection	N/A	1	N/A	N/A	
15	Event	2022-03-14 17:16:19	Start Advanced Motion Detection	N/A	2	N/A	N/A	
16	Operation	2022-03-14 17:16:19	RemoteLogin	N/A	N/A	admin	192.168.17.2	
17	Event	2022-03-14 17:16:18	Stop Advanced Motion Detection	N/A	1	N/A	N/A	
18	Event	2022-03-14 17:16:15	Start Motion Detection	N/A	1	N/A	N/A	
19	Event	2022-03-14 17:16:15	Stop Motion Detection	N/A	1	N/A	N/A	
20	Event	2022-03-14 17:16:14	Start Advanced Motion Detection	N/A	2	N/A	N/A	
21	Event	2022-03-14 17:16:10	Start Advanced Motion Detection	N/A	2	N/A	N/A	
22	Event	2022-03-14 17:16:07	Start Advanced Motion Detection	N/A	2	N/A	N/A	
23	Event	2022-03-14 17:16:06	Start Advanced Motion Detection	N/A	1	N/A	N/A	
24	Event	2022-03-14 17:16:05	Start Motion Detection	N/A	1	N/A	N/A	
25	Event	2022-03-14 17:16:05	Stop Motion Detection	N/A	1	N/A	N/A	
26	Event	2022-03-14 17:16:02	Start Advanced Motion Detection	N/A	2	N/A	N/A	
27	Event	2022-03-14 17:15:56	Start Advanced Motion Detection	N/A	1	N/A	N/A	
28	Event	2022-03-14 17:15:55	Start Advanced Motion Detection	N/A	2	N/A	N/A	
29	Event	2022-03-14 17:15:55	Start Motion Detection	N/A	1	N/A	N/A	
30	Event	2022-03-14 17:15:55	Stop Motion Detection	N/A	1	N/A	N/A	


Click "Export" to export searched logs to media device.

This screenshot shows the same MileSight Logs interface as the previous one, but with a red arrow pointing from the 'Export' button in the search panel to a download dialog box. The dialog box displays the filename 'All_log_1CC3160A8B02_20220126153016.csv' and includes options for 'Open file' and 'See more'. The table below shows a different set of log entries, with the 'Export' button highlighted in red in the search panel.

No.	Main Type	Time	Sub Type	Parameter	Channel	User	Remote Host IP	Details
1	Operation	2022-01-26 15:20:10	RemoteLogin	N/A	N/A	N/A	N/A	
2	Operation	2022-01-26 15:19:26	RemoteLogin	N/A	N/A	N/A	N/A	
3	Information	2022-01-26 15:16:10	Start Record	N/A	N/A	N/A	N/A	
4	Information	2022-01-26 14:42:01	Start Record	N/A	N/A	N/A	N/A	
5	Information	2022-01-26 14:07:52	Start Record	N/A	1	N/A	N/A	
6	Information	2022-01-26 13:51:54	S.M.A.R.T Information	N/A	N/A	N/A	N/A	
7	Information	2022-01-26 13:51:54	S.M.A.R.T Information	N/A	N/A	N/A	N/A	
8	Information	2022-01-26 13:33:46	Start Record	N/A	1	N/A	N/A	
9	Information	2022-01-26 13:16:27	Start Record	N/A	1	N/A	N/A	
10	Information	2022-01-26 12:42:19	Start Record	N/A	1	N/A	N/A	
11	Information	2022-01-26 12:08:10	Start Record	N/A	1	N/A	N/A	
12	Information	2022-01-26 11:51:52	S.M.A.R.T Information	N/A	N/A	N/A	N/A	
13	Information	2022-01-26 11:51:52	S.M.A.R.T Information	N/A	N/A	N/A	N/A	
14	Operation	2022-01-26 11:36:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
15	Exception	2022-01-26 11:36:50	Video Loss	N/A	1	N/A	N/A	
16	Operation	2022-01-26 11:35:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
17	Information	2022-01-26 11:34:01	Start Record	N/A	1	N/A	N/A	
18	Operation	2022-01-26 11:33:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
19	Operation	2022-01-26 11:32:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
20	Operation	2022-01-26 11:30:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
21	Operation	2022-01-26 11:29:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
22	Operation	2022-01-26 11:29:02	RemoteLogin	N/A	N/A	admin	192.168.69.19	
23	Operation	2022-01-26 11:27:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
24	Operation	2022-01-26 11:26:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
25	Operation	2022-01-26 11:24:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
26	Operation	2022-01-26 11:23:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
27	Operation	2022-01-26 11:21:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
28	Operation	2022-01-26 11:20:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
29	Operation	2022-01-26 11:18:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
30	Operation	2022-01-26 11:17:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
31	Operation	2022-01-26 11:15:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
32	Operation	2022-01-26 11:14:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	
33	Operation	2022-01-26 11:12:56	RemoteLogin	N/A	N/A	admin	192.168.69.22	
34	Operation	2022-01-26 11:11:26	RemoteLogin	N/A	N/A	admin	192.168.69.22	

In particular, for the following types of events, the Information about detection object that triggers the event is displayed in the Log Information.

- Region Entrance
- Region Exiting
- Advanced Motion Detection
- Line Crossing
- Loitering

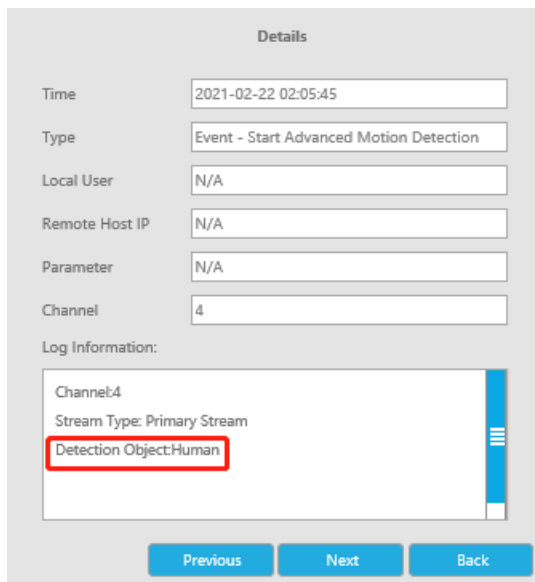

The screenshot shows a 'Details' window with the following fields:


Time	2021-02-22 02:05:45
Type	Event - Start Advanced Motion Detection
Local User	N/A
Remote Host IP	N/A
Parameter	N/A
Channel	4


Log Information:

```
Channel:4
Stream Type: Primary Stream
Detection Object:Human
```

Buttons: Previous, Next, Back

 3.11 Logout

Click  to exit the current account.

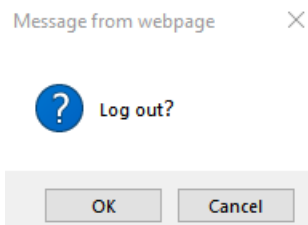

Chapter 4. Services

Milesight provides customers with timely and comprehensive technical support services. End-users can contact your local dealer to obtain technical support. Distributors and resellers can contact directly with Milesight for technical support.

Technical Support Mailbox: support@milesight.com

Web: <http://www.milesight.com>

Online Problem Submission System: <http://www.milesight.com/support/feedback.asp>

MILESIGHT CHINA

TEL: +86-592-5922772

Add: Building C09, Software Park Phase III, Xiamen 361024, Fujian, China